

2016.0 RANGE ROVER (LG), 501-20

SUPPLEMENTAL RESTRAINT SYSTEM

CLOCKSPRING (G1521672)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- Allow a period of 10 minutes to elapse after disconnecting the battery before undertaking any work on the SRS.
- Persons working on the supplemental restraint system (SRS) must be fully trained and have been issued with the safety guidelines.
- It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.
- The correct procedures must always be used when working on SRS components.
- Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.
- The SRS electrical connectors are unique. DO NOT force, or attempt to connect electrical connectors to the wrong sockets.
- Do not probe supplemental restraint system (SRS) electrical connectors.
- Take extra care when handling supplemental restraint system (SRS) components.


NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.


1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-02A Generator and Regulator - TDV6 3.0L Diesel, Specifications).

2. Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).


3. 

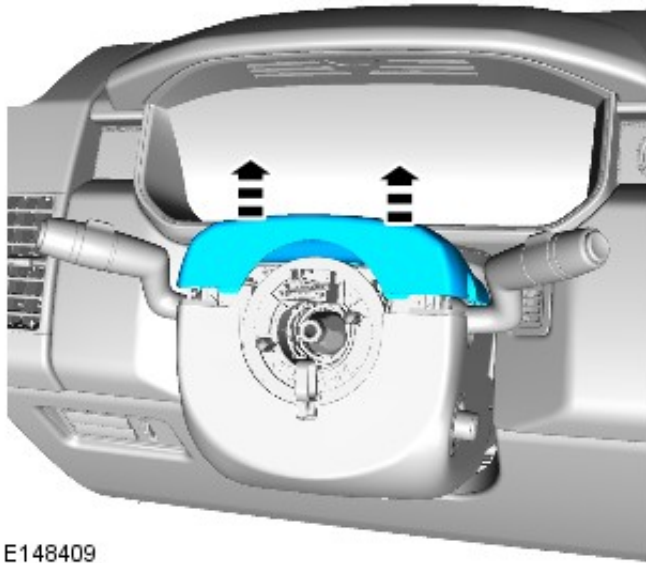


- 4.

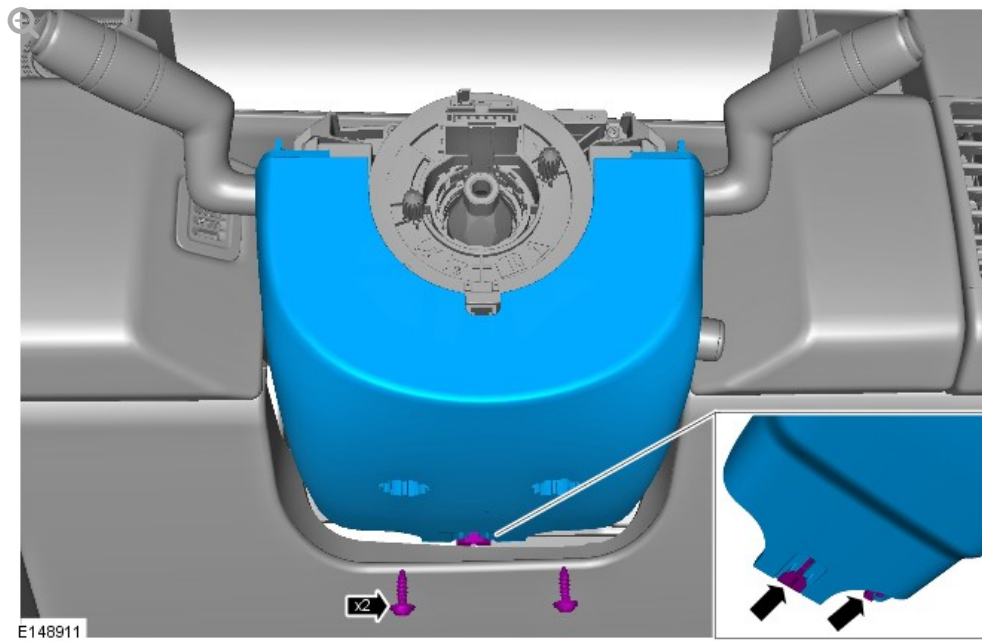

5.

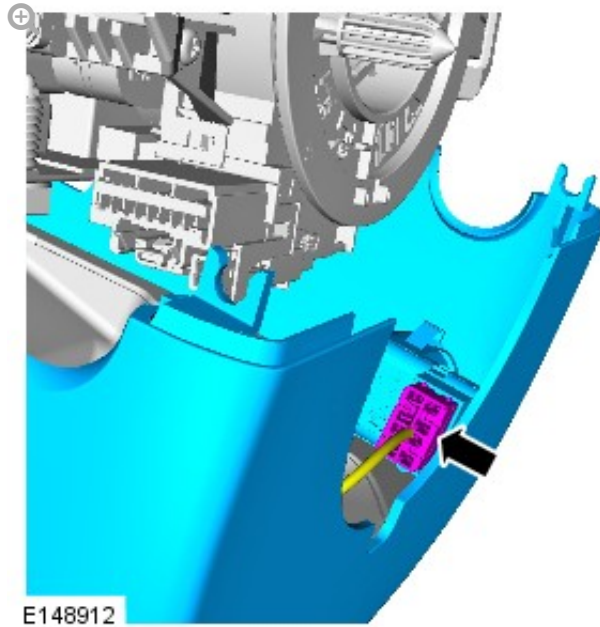


6.

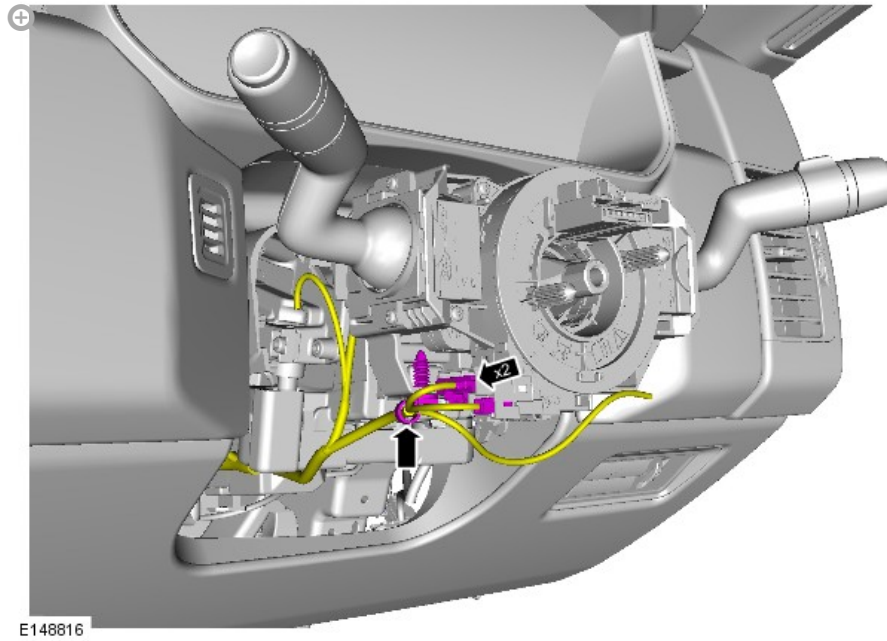

- Secure with adhesive tape.


7.

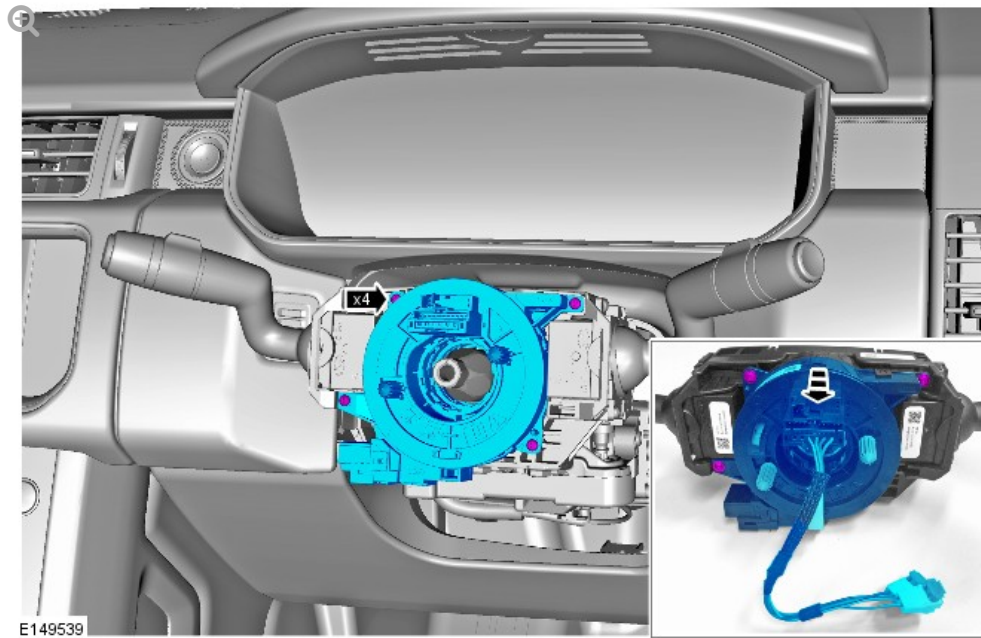

E149539


INSTALLATION

1.

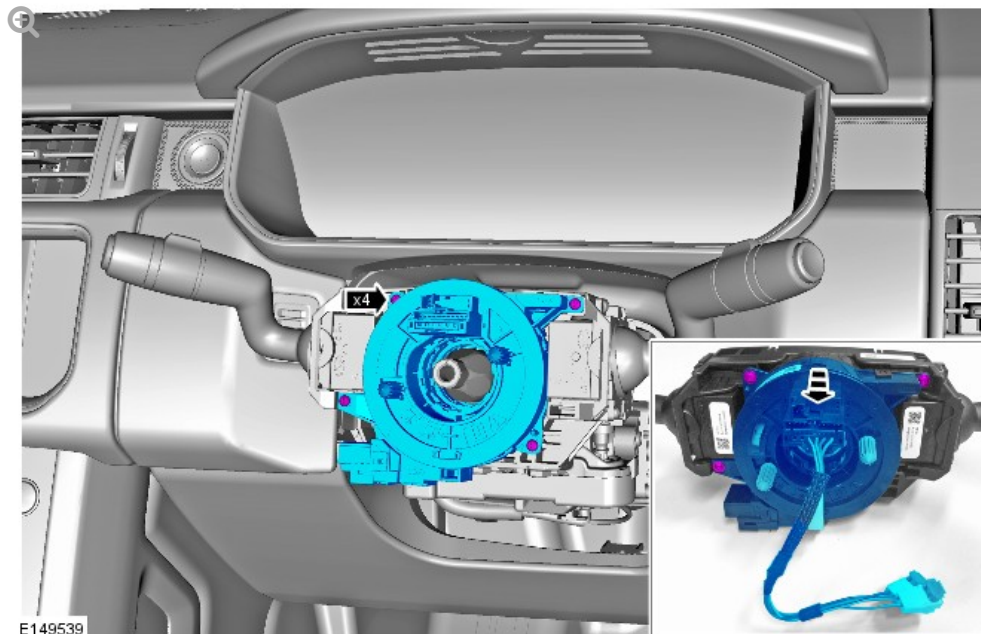


E149539

2.

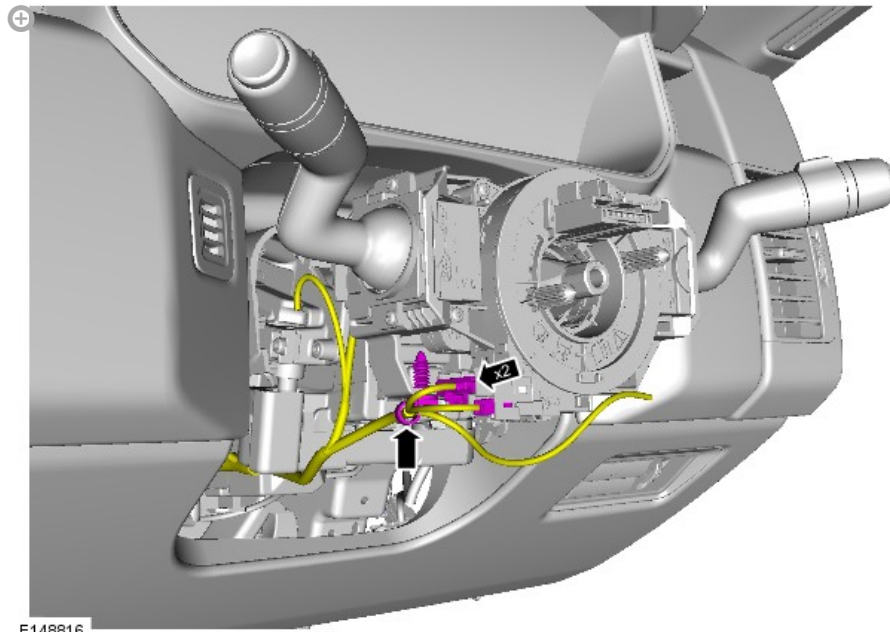


E148816

3.

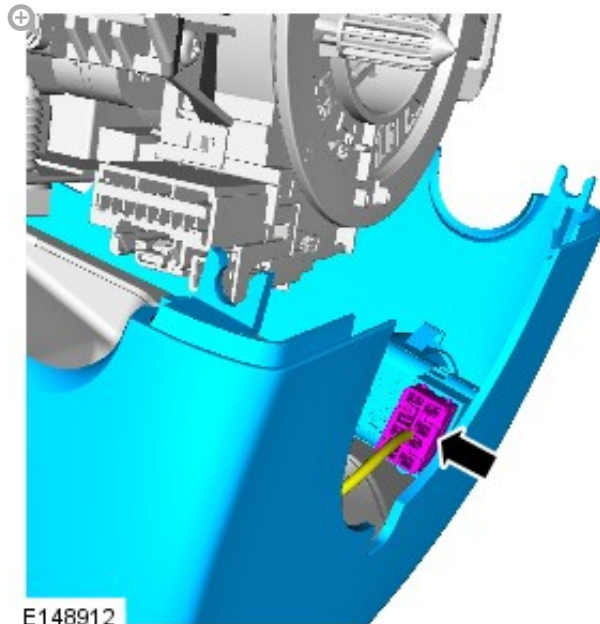


E148912

4.

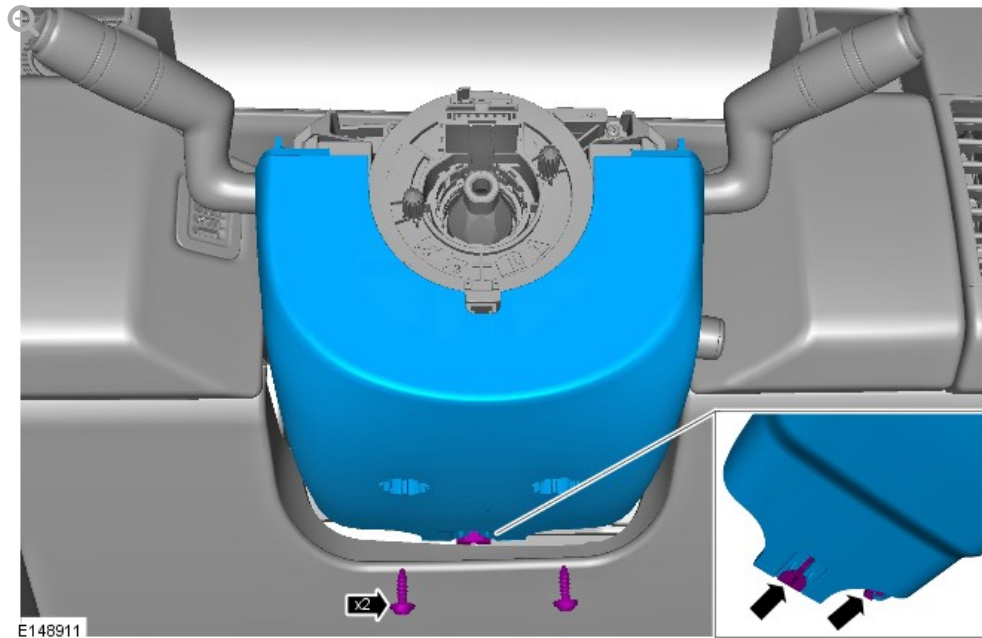

5.

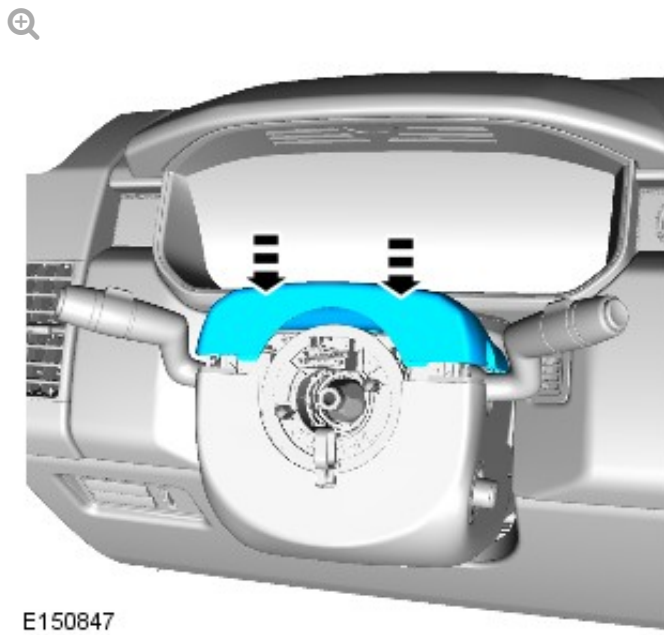

6.



E150352

7. Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).
8. Connect the battery ground cable.
Refer to: [Specifications](#) (414-02A Generator and Regulator - TDV6 3.0L Diesel, Specifications).
9. If a new component is installed, the soft lock stop reset routine should be completed on the power steering system, using the approved diagnostic tool.