

2016.0 RANGE ROVER (LG), 501-20

SUPPLEMENTAL RESTRAINT SYSTEM

PASSENGER AIRBAG MODULE (G2142095)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- Allow a period of 10 minutes to elapse after disconnecting the battery before undertaking any work on the supplemental restraint system (SRS).
- Do not probe any SRS electrical connectors.
- Always wear safety glasses when working on an airbag equipped vehicle and when handling an airbag module.
- To avoid accidental deployment, the restraints control module backup power supply must be depleted. Wait at least 10 minutes after disconnecting the battery cables before commencing any repair or adjustment to the SRS, or any component(s) adjacent to the SRS sensors.
- Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.
- Vehicle sensor orientation is critical for correct system operation. If a vehicle equipped with SRS is involved in a collision, inspect the sensor mounting bracket and wiring pigtail for deformation. If damaged, replace the sensor whether or not the air bag is deployed.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.


1. Remove upper glove compartment.
Refer to: [Upper Glove Compartment](#) (501-12A Instrument Panel and Console - Standard Wheel Base, Removal and Installation).
Refer to: [Upper Glove Compartment](#) (501-12B Instrument Panel

and Console - Long Wheel Base, Removal and Installation).

2. Disconnect both battery cables.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

- 3.

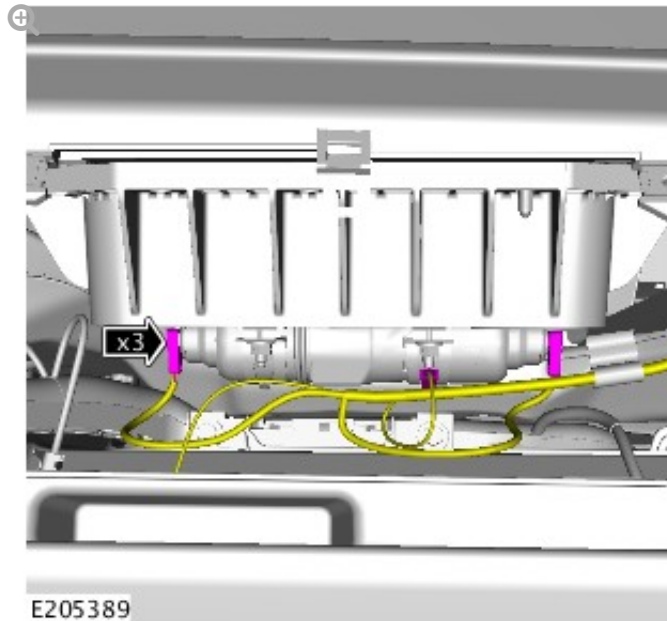

Disconnect the 3 electrical connectors.

- 4.

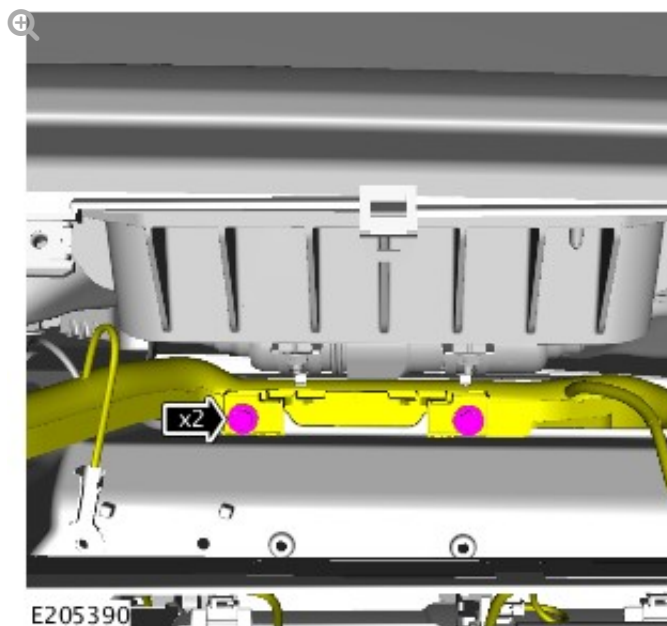


Remove the 2 bolts and move the wiring harness aside.

5.

NOTE:

Extra care must be taken not to damage the chute channel moulding.

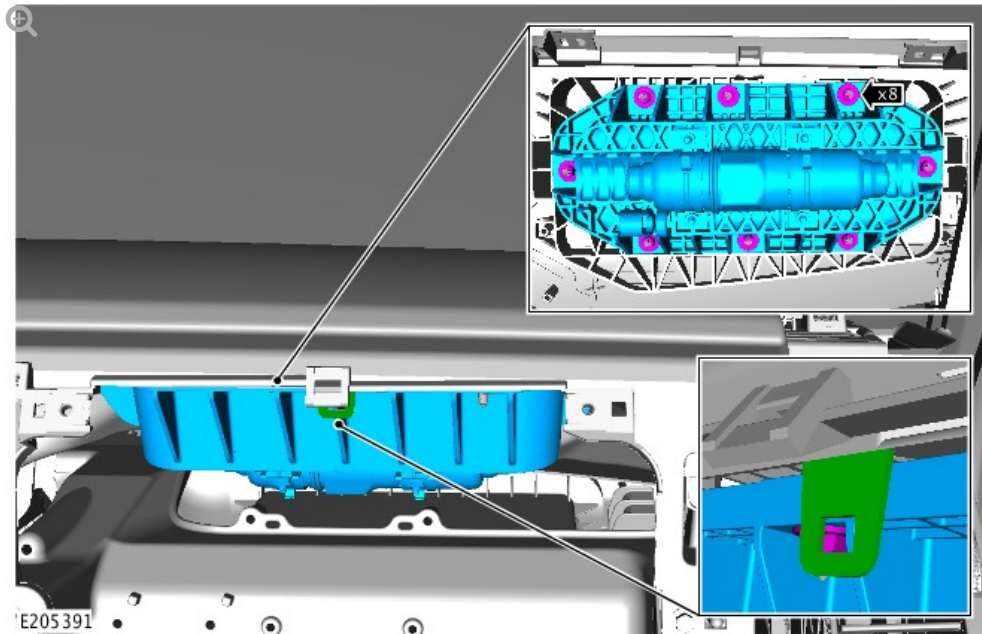


Remove the passenger airbag module.

INSTALLATION

1.

NOTE:


Extra care must be taken not to damage the chute channel moulding.

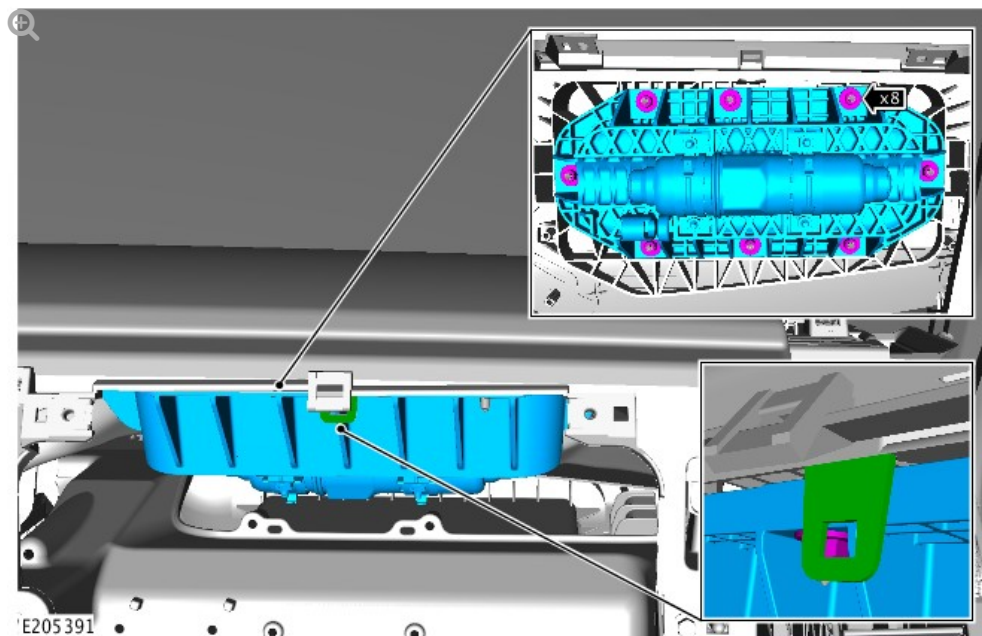

Install the passenger airbag module.


Torque: 4.5 Nm

2.

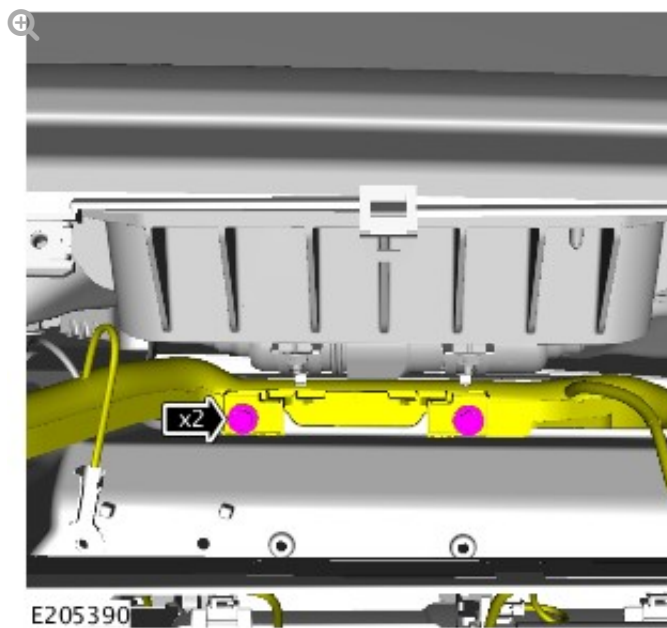

Position the wiring harness in the correct location. Install and tighten the 2 bolts

3.

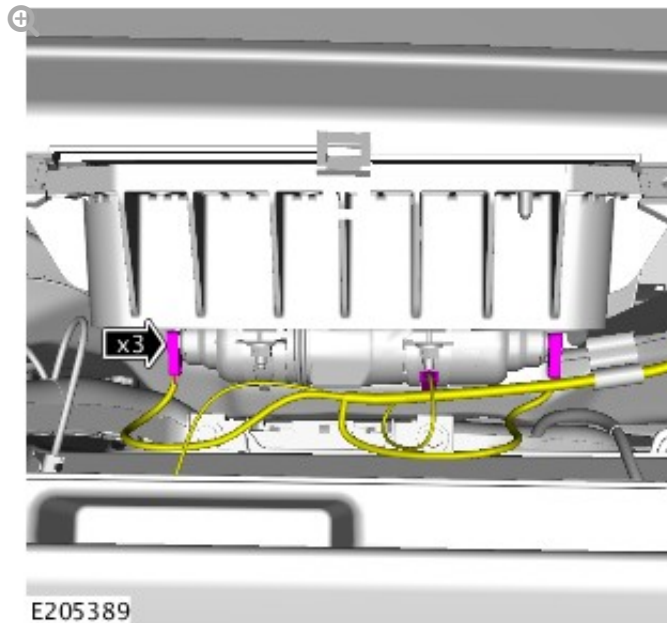

Connect the 3 electrical connectors.

4. Connect both battery cables.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

5. Install upper glove compartment.

Refer to: [Upper Glove Compartment](#) (501-12A Instrument Panel and Console - Standard Wheel Base, Removal and Installation).

Refer to: [Upper Glove Compartment](#) (501-12B Instrument Panel and Console - Long Wheel Base, Removal and Installation).