

2016.0 RANGE ROVER (LG), 501-20

SUPPLEMENTAL RESTRAINT SYSTEM

RESTRAINTS CONTROL MODULE [G1557266]

REMOVAL AND INSTALLATION


REMOVAL

NOTES:


- The RCM must be replaced after every time any SRS component has been deployed.
- Removal steps in this procedure may contain installation details.

1. Make the SRS system safe.
Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
2. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
3. Refer to: [Floor Console](#) (501-12B Instrument Panel and Console - Long Wheel Base, Removal and Installation).

4.

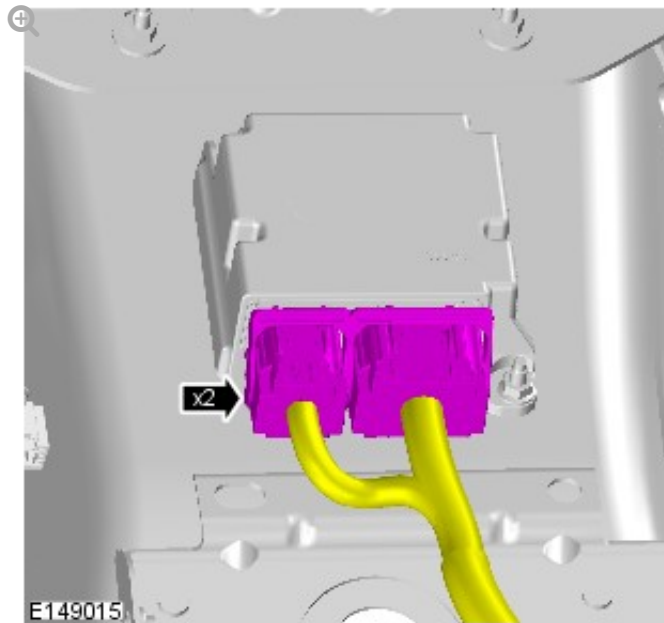

5.

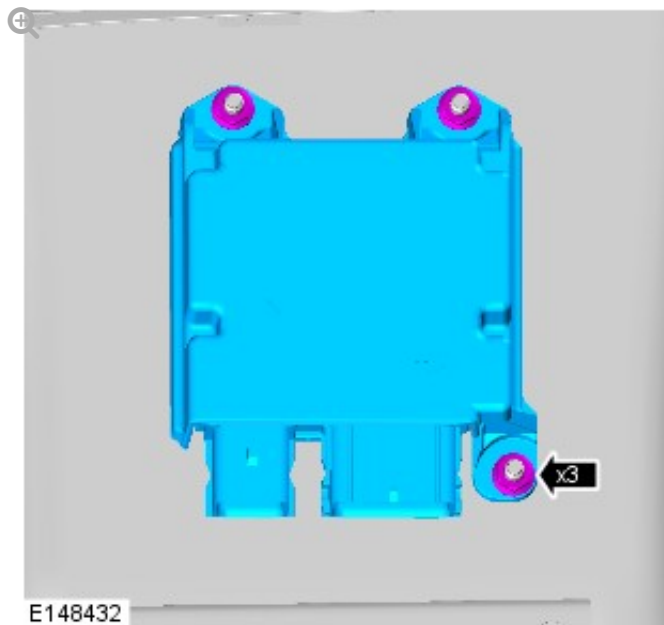

INSTALLATION


1.

WARNING:

Make sure that new nuts are installed.


CAUTION:

Make sure that all the RCM retaining nuts are tightened to the correct torque value prior to connecting the electrical connectors. Failure to follow this instruction may result in damage to the vehicle.

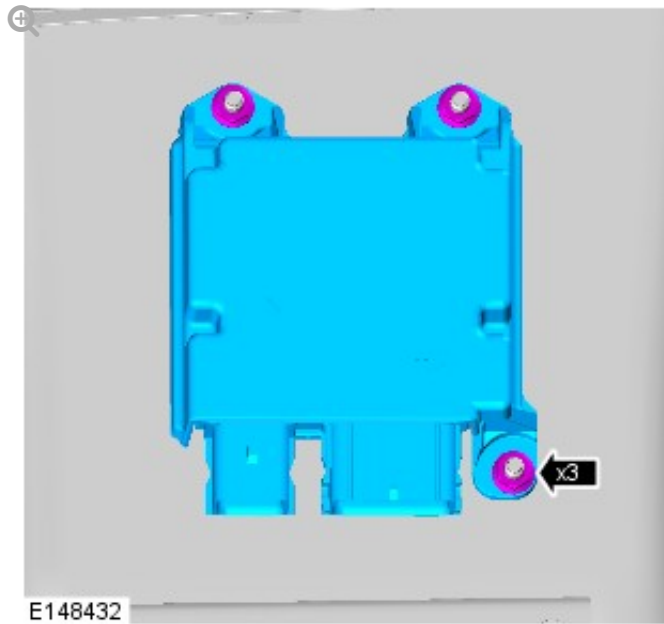

Torque: 10 Nm

2.

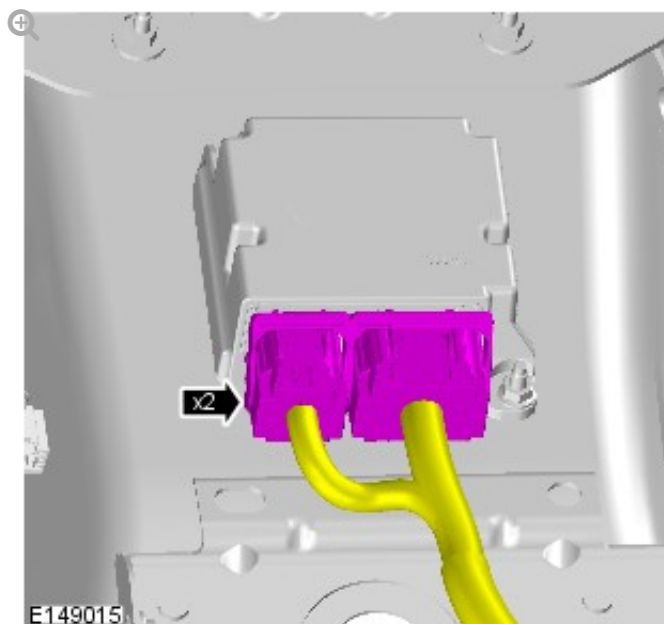

3.

CAUTION:

If a new component has been installed, configure using Land Rover approved diagnostic equipment.

To install, reverse the removal procedure.