

2016.0 RANGE ROVER (LG), 501-20

SUPPLEMENTAL RESTRAINT SYSTEM

SIDE AIR CURTAIN MODULE

[G1521680]

REMOVAL AND INSTALLATION

REMOVAL

WARNING:

Allow a period of 10 minutes to elapse after disconnecting the battery before undertaking any work on the SRS.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.




Vehicles without roof opening panel

1.

NOTE:

The step must be carried out on both sides.

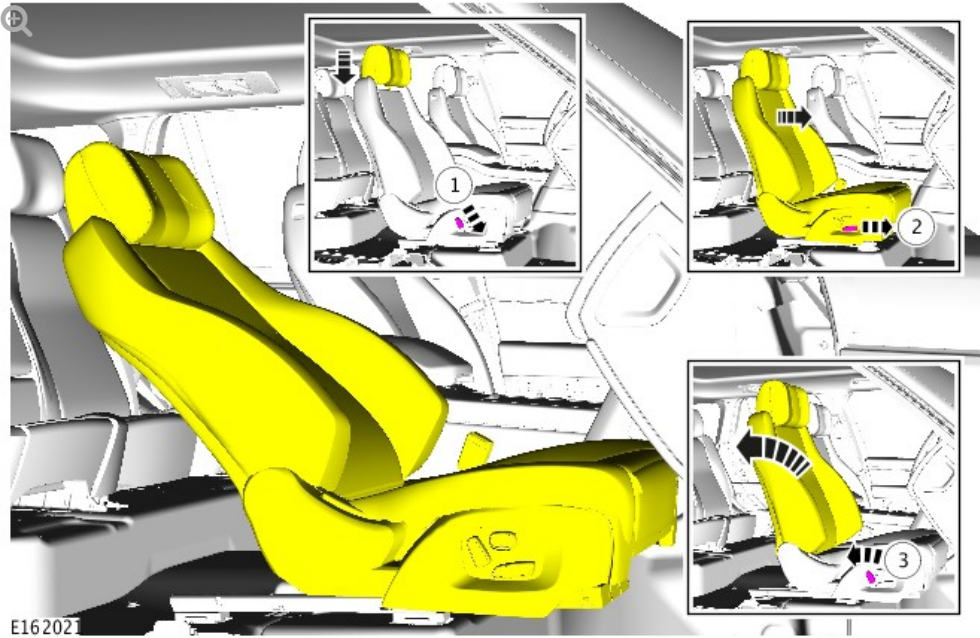


All vehicles

2. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
3. Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).

4.

CAUTION:

Apply heatshrink or protective tape to the end of a suitable tool to protect the interior components.

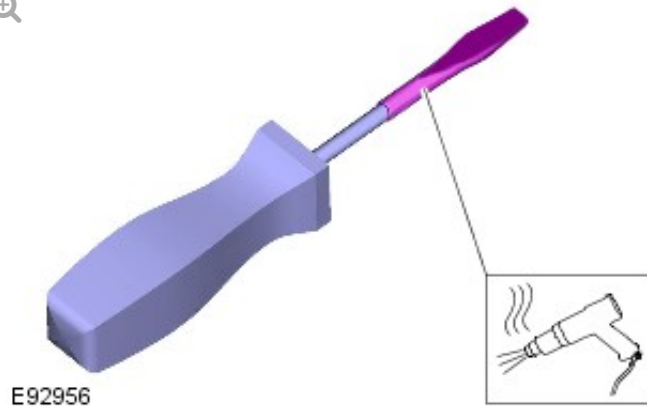

5.

NOTE:

The procedure must be carried out on both sides.

Refer to: '[A' Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

6.

NOTE:

The procedure must be carried out on both sides.

Refer to: '[B' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

7.

NOTE:

The procedure must be carried out on both sides.

Refer to: '[C' Pillar Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

8.

NOTE:

The procedure must be carried out on both sides.

Refer to: ['D' Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

9.

NOTE:

The procedure must be carried out on both sides.

Refer to: [Sun Visor](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


10. Refer to: [Interior Rear View Mirror](#) (501-09 Rear View Mirrors, Removal and Installation).

11. Refer to: [Overhead Console](#) (501-12B Instrument Panel and Console - Long Wheel Base, Removal and Installation).


12.

WARNING:

Be prepared to collect escaping fluid.

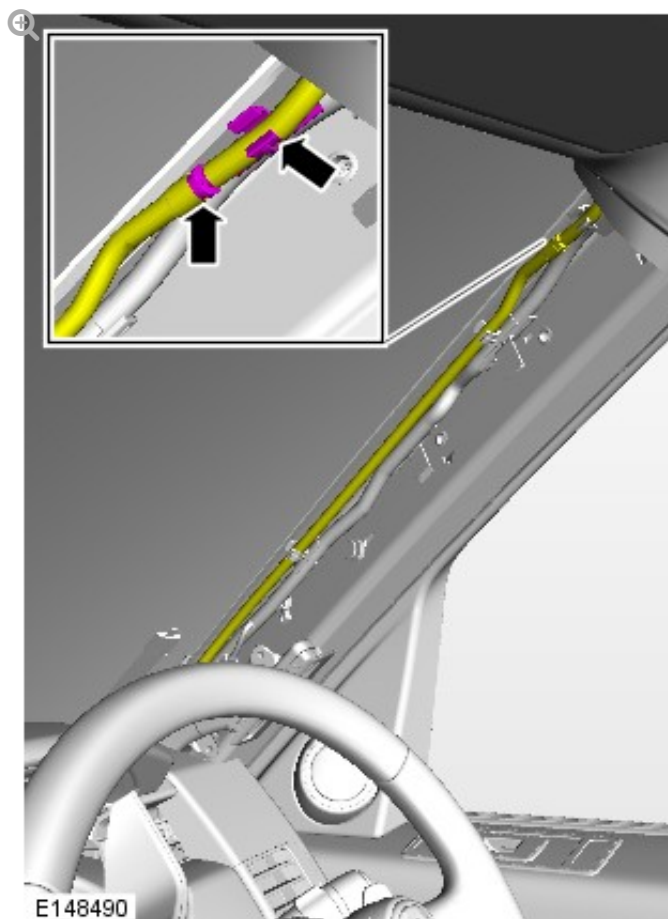


13.

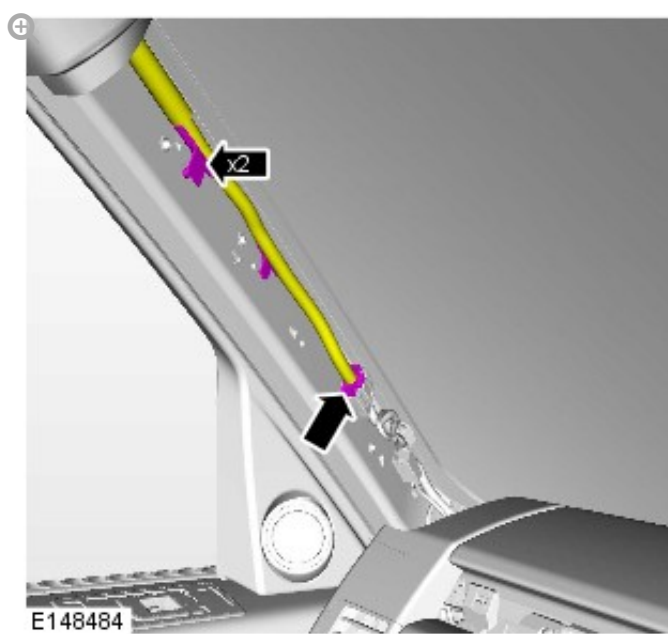

14.

NOTE:

The step must be carried out on both sides.

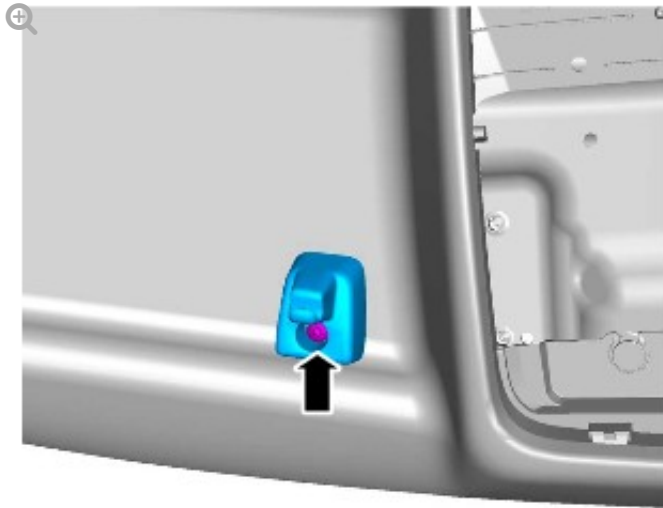


E156547

Torque: 6 Nm

15.

NOTE:

The step must be carried out on both sides.

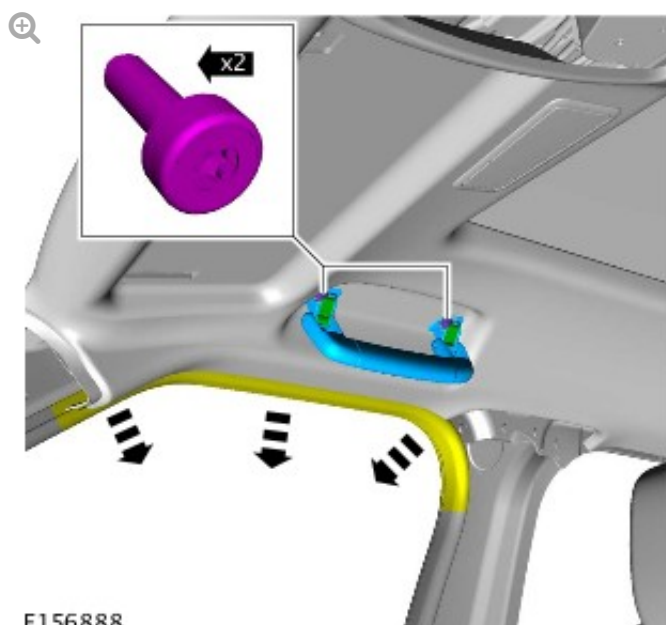


Torque: 6 Nm

16.

NOTES:

- The step must be carried out on both sides.
- If equipped.

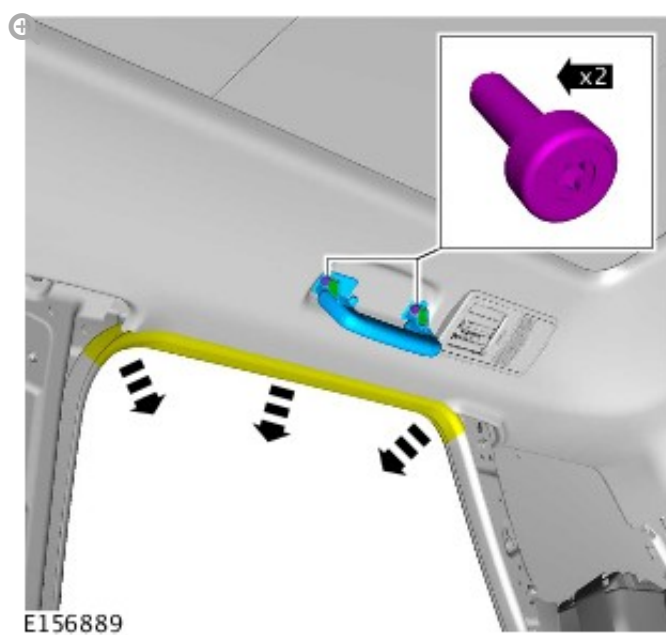


Torque: 6 Nm

17.

NOTES:

- The step must be carried out on both sides.
- If equipped.

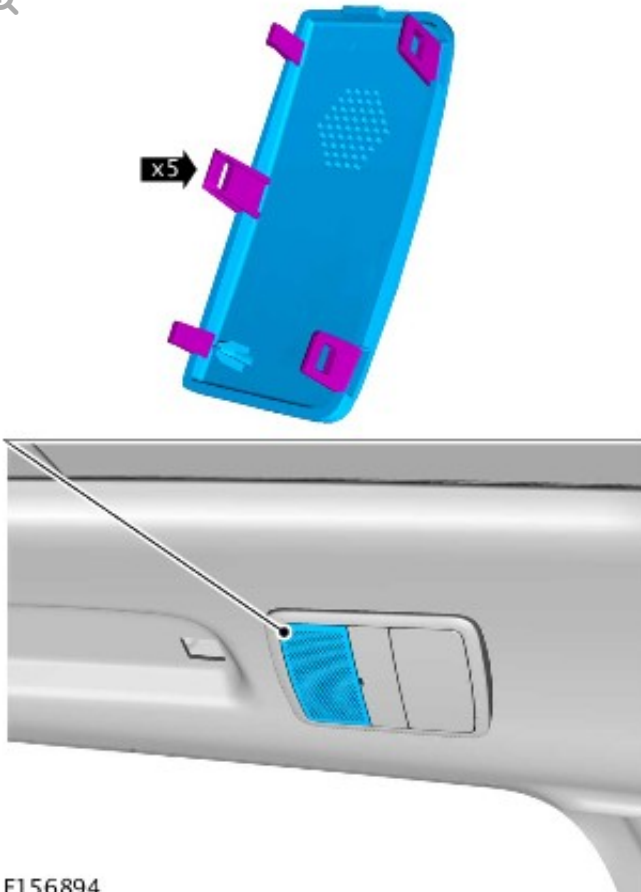


E156894

18.

NOTES:

- The step must be carried out on both sides.
- If equipped.

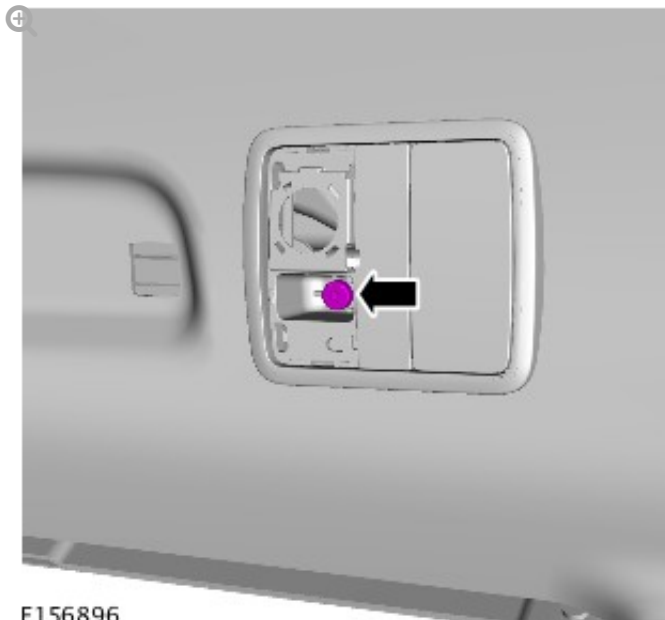


E156896

Torque: 6 Nm

19.

NOTES:

- The step must be carried out on both sides.
- If equipped.

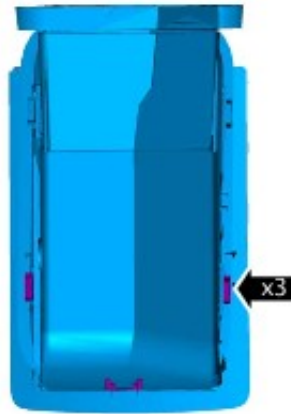


E156890

20.

NOTES:

- The step must be carried out on both sides.
- If equipped.

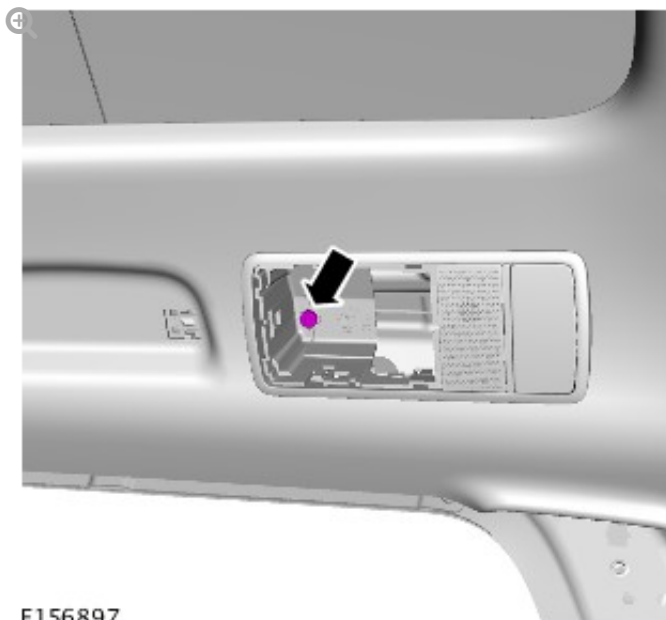


E156897

Torque: 6 Nm

21.

NOTES:

- The step must be carried out on both sides.
- If equipped.

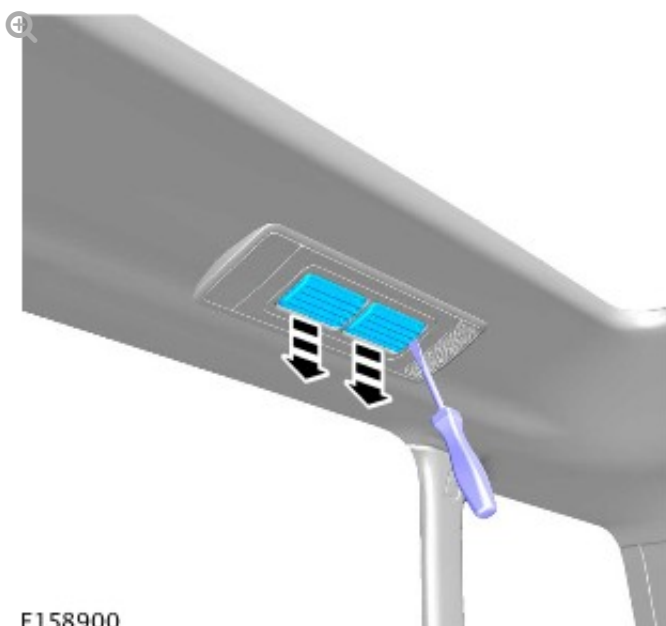

E158900

22.


NOTES:

- The step must be carried out on both sides.
- If equipped.



Torque: 6 Nm


23.

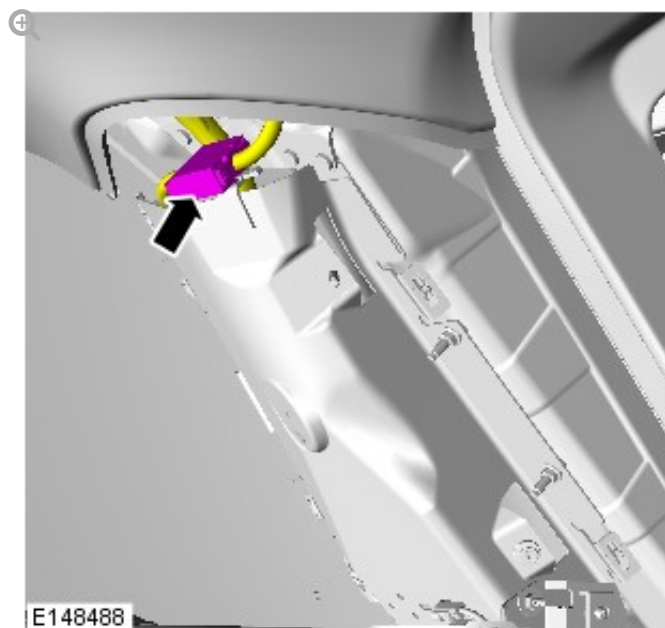

24.

NOTE:

Note the orientation of the seal prior to detaching.

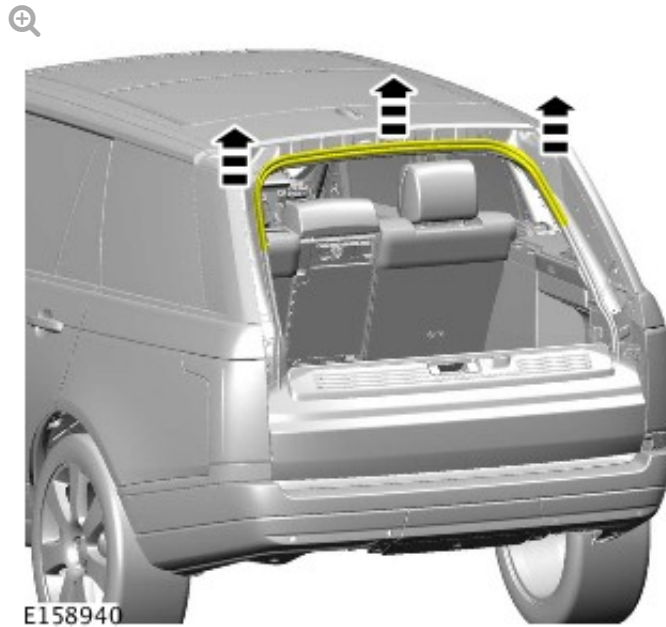


Vehicles without roof opening panel

25.



NOTE:

The step must be carried out on both sides.

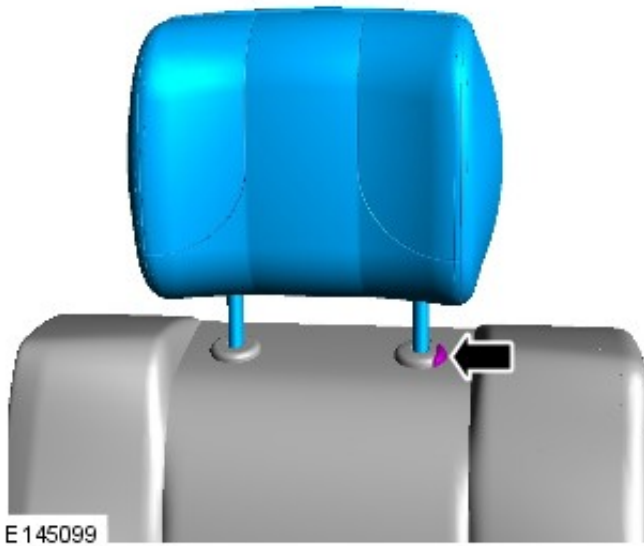

Remove the rear seat head restraint(s).


26.

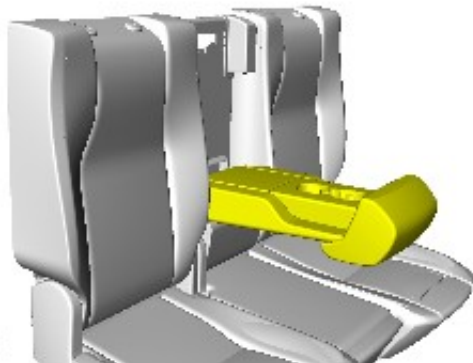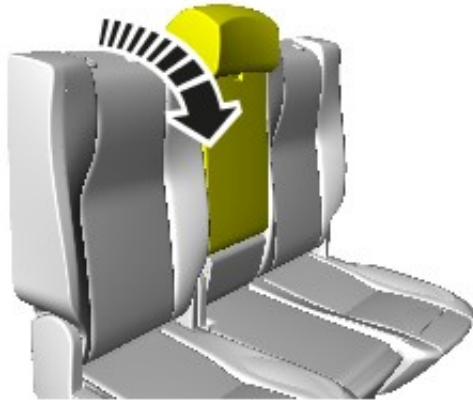

27.

CAUTION:


Take extra care not to damage the component.

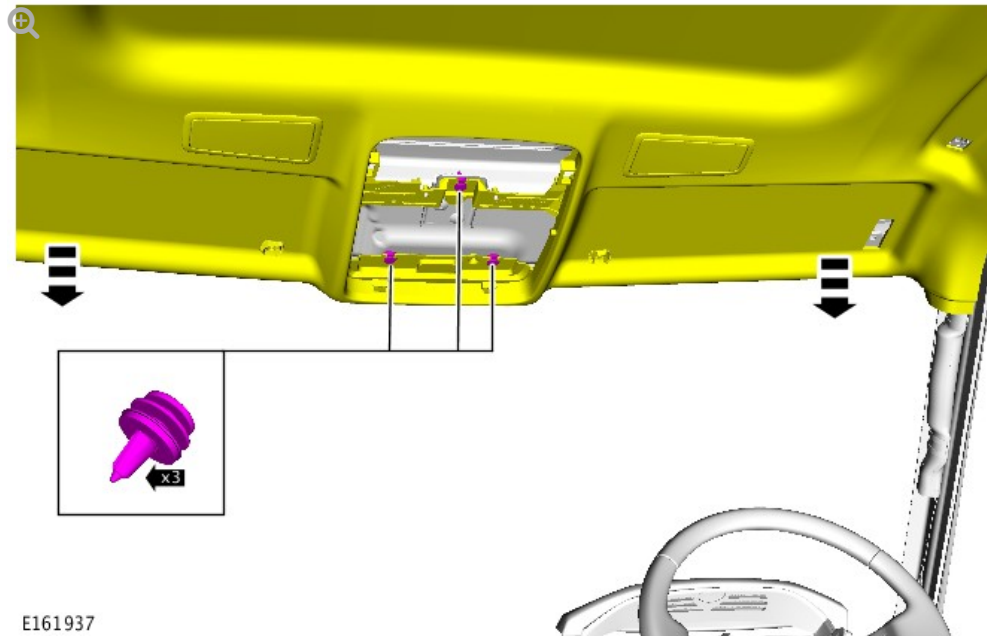

28.

CAUTION:

Take extra care not to damage the component.

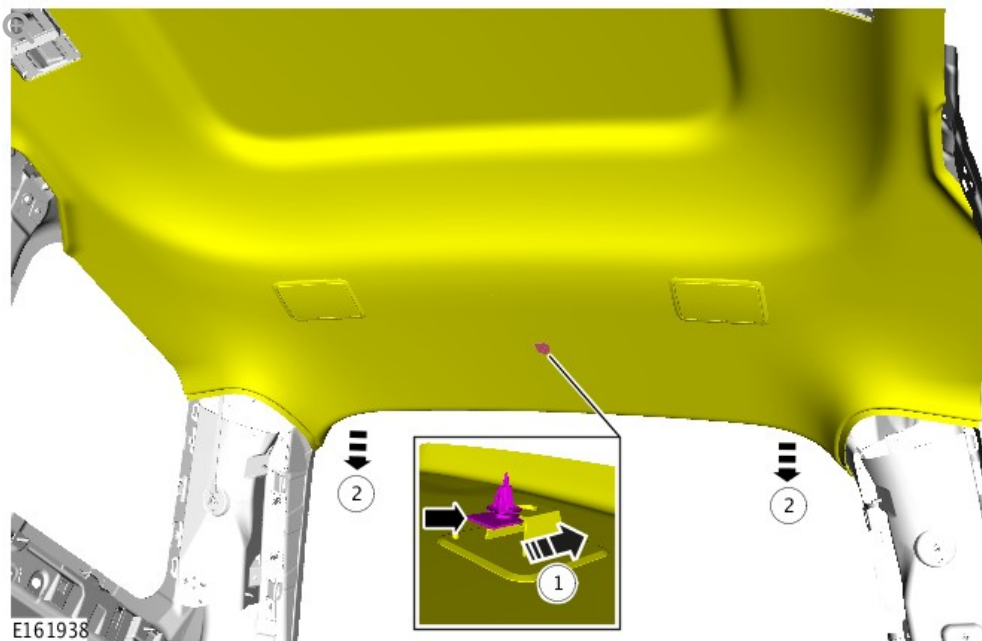

Vehicles with roof opening panel


29.

CAUTIONS:

- Take extra care not to damage the component.
- Using a suitable plastic trim tool, release the magnetic fixings.

NOTE:

Make sure that there is at least 50mm clearance between the magnetic fixings and the headliner during the removal procedure. The fixings will engage if too close to each other.

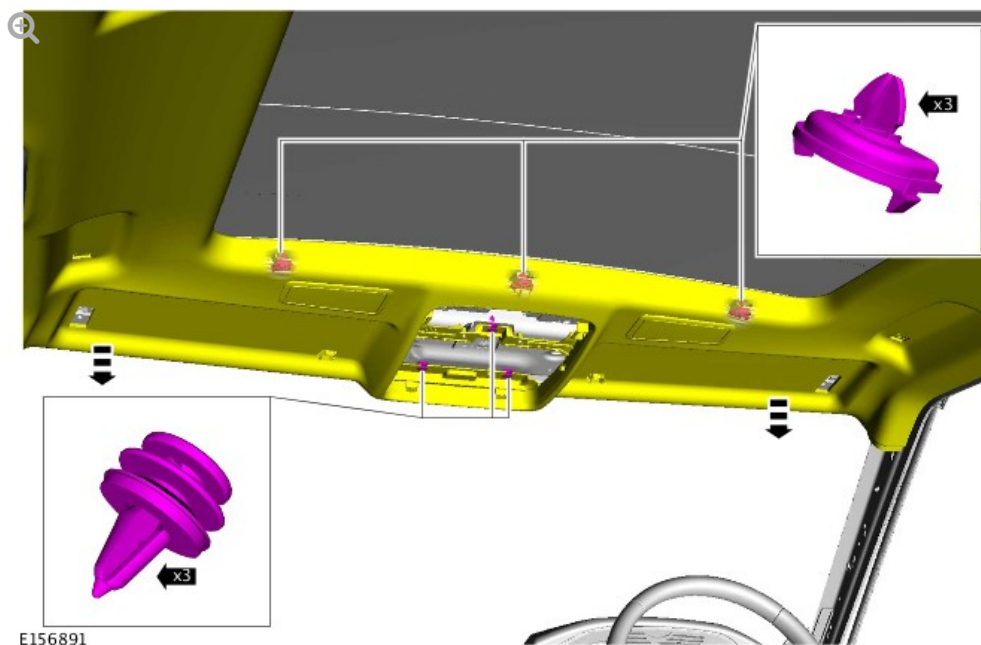


30.

CAUTION:

Take extra care not to damage the component.

NOTE:

The step must be carried out on both sides.

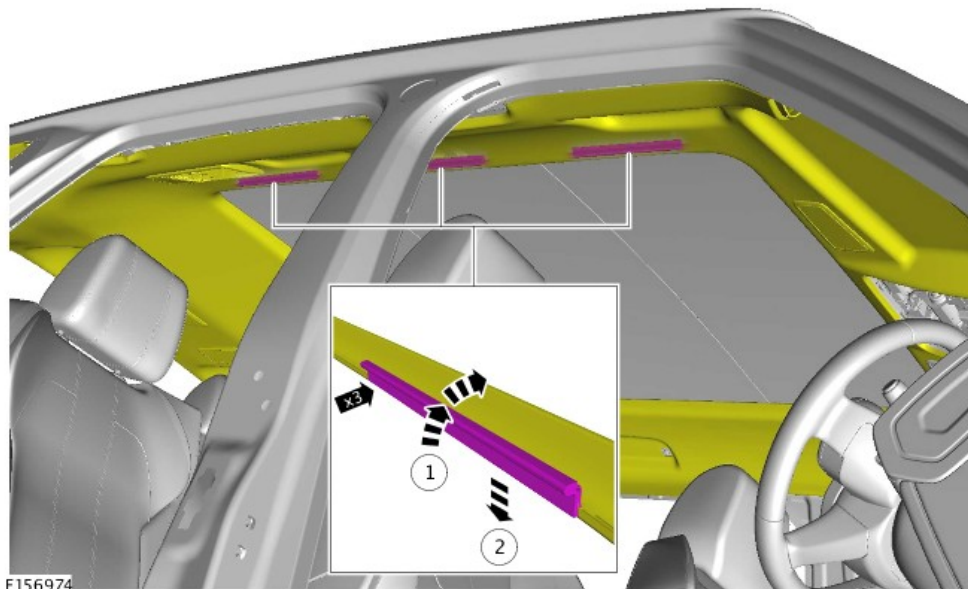

E156974


31.

CAUTIONS:

- Take extra care not to damage the component.
- Using a suitable plastic trim tool, release the magnetic fixings.


NOTE:

Make sure that there is at least 50mm clearance between the magnetic fixings and the headliner during the removal procedure. The fixings will engage if too close to each other.

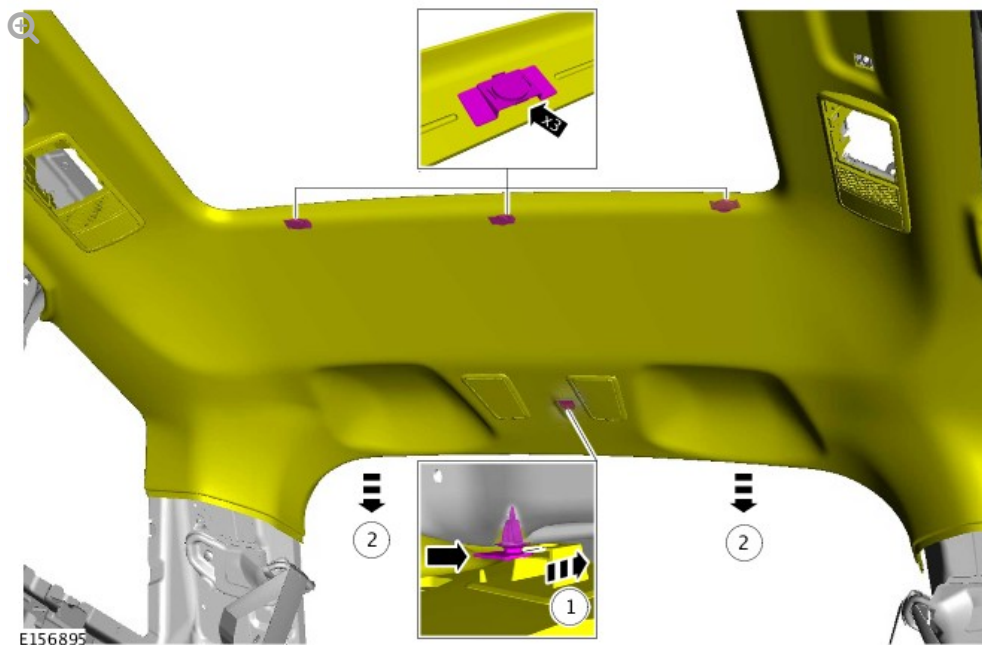

All vehicles


32.

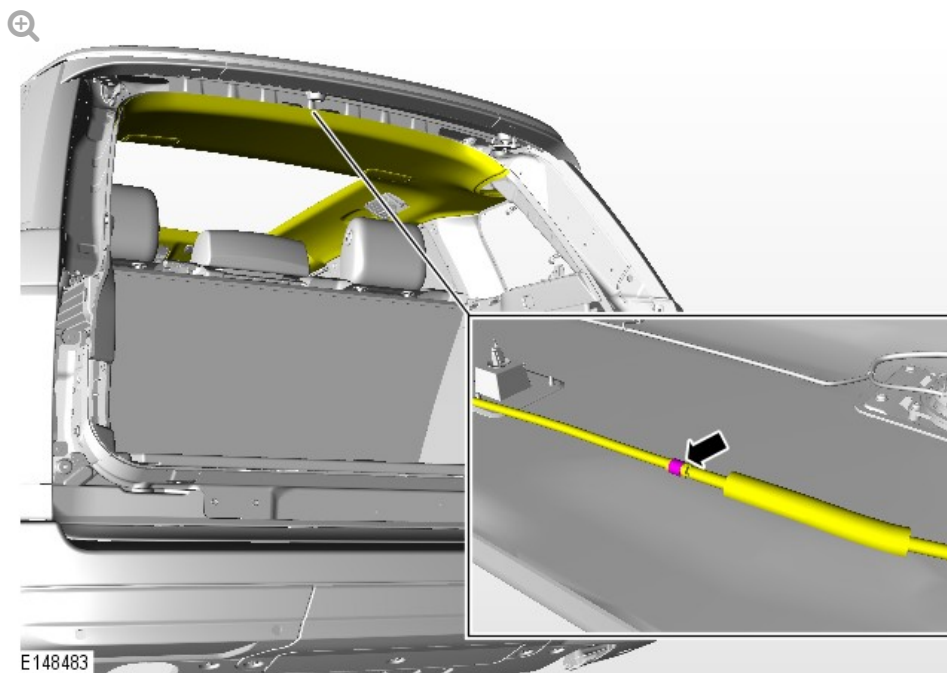

33.

NOTES:

- The step must be carried out on both sides.
- If equipped.

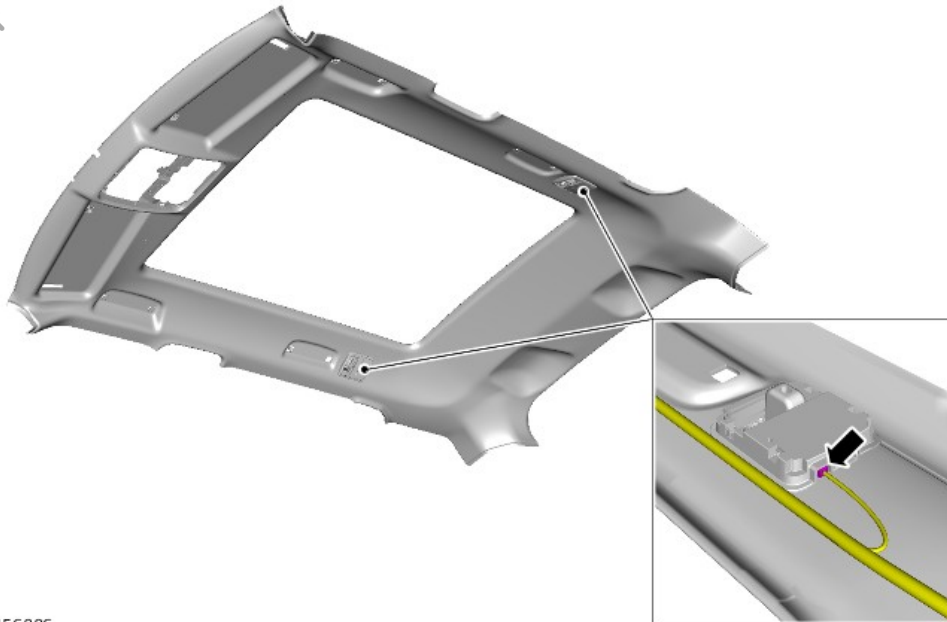


E156886

34.

NOTES:

- The step must be carried out on both sides.
- If equipped.

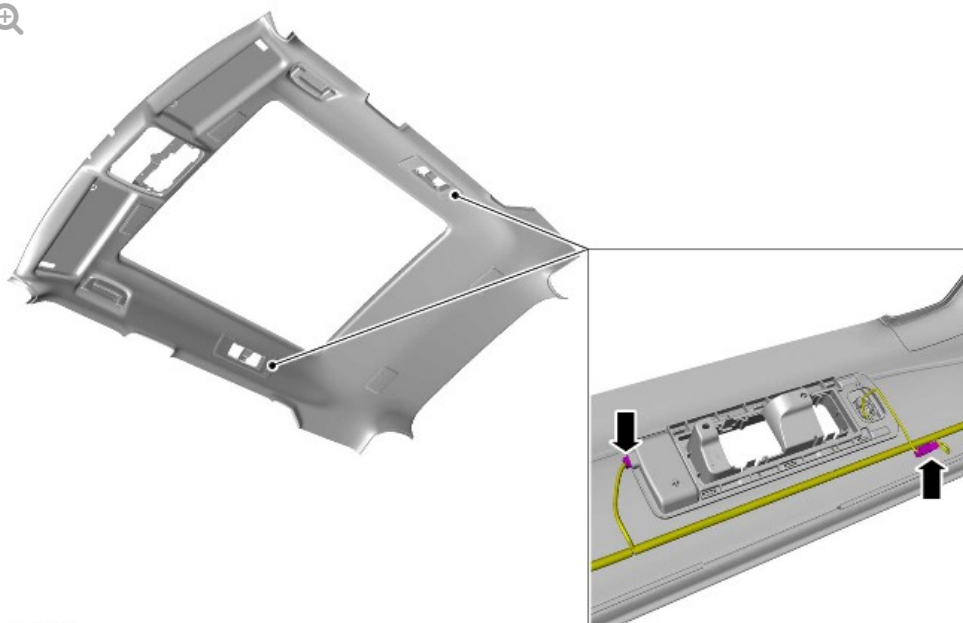


E158897

35.

NOTES:

- The step must be carried out on both sides.
- If equipped.

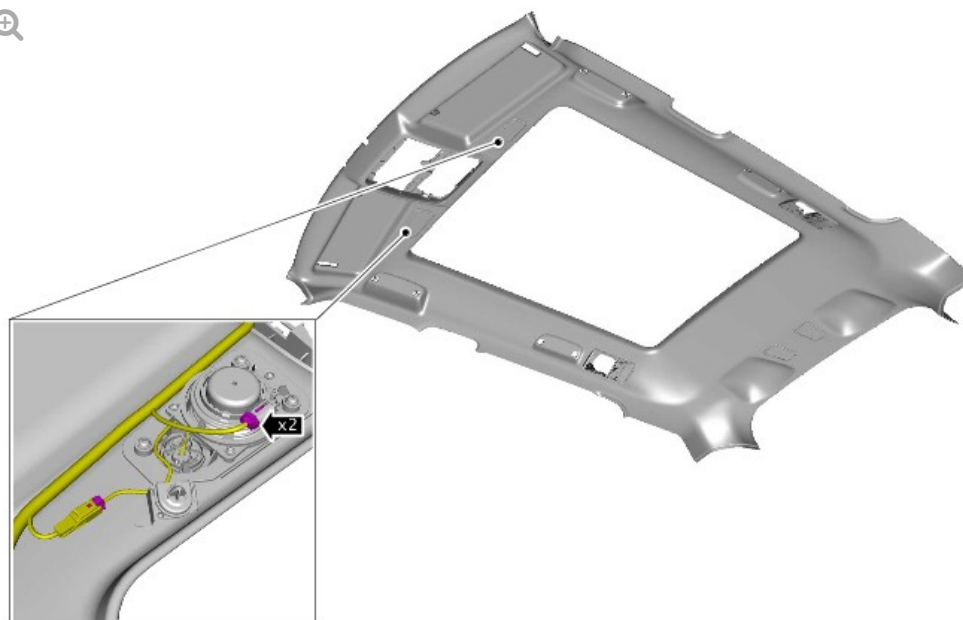


E156887

36.

NOTES:

- The step must be carried out on both sides.
- If equipped.

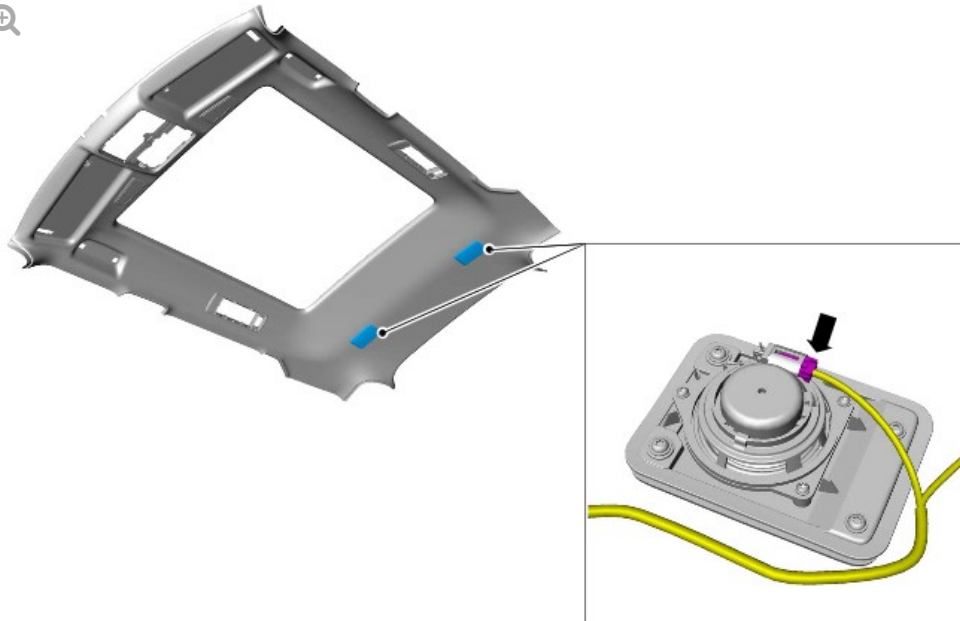

E158898



Vehicles without roof opening panel


37.

CAUTION:

The headliner must be lowered as a complete unit to gain access, partial lowering of the headliner may cause damage.

NOTE:

Lower and reposition the headliner to aid access.

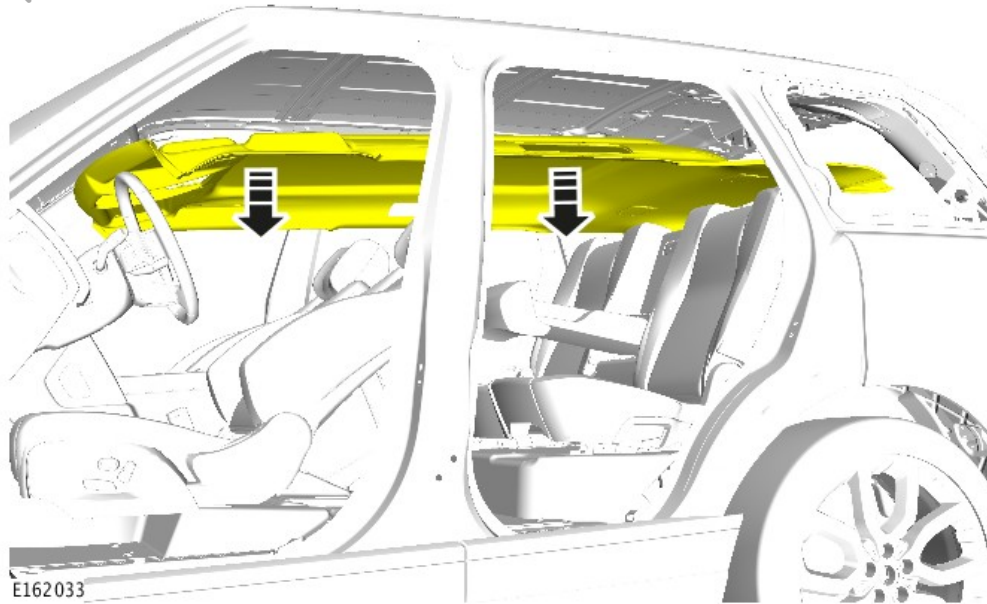

Vehicles with roof opening panel


38.

CAUTION:

The headliner must be lowered as a complete unit to gain access, partial lowering of the headliner may cause damage.


NOTE:

Lower and reposition the headliner to aid access.

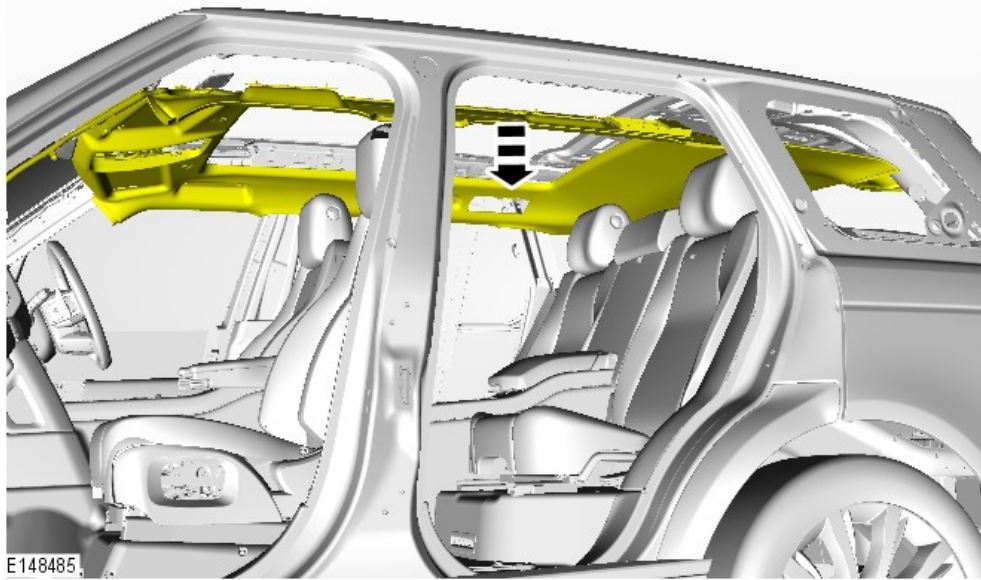

All vehicles


39.

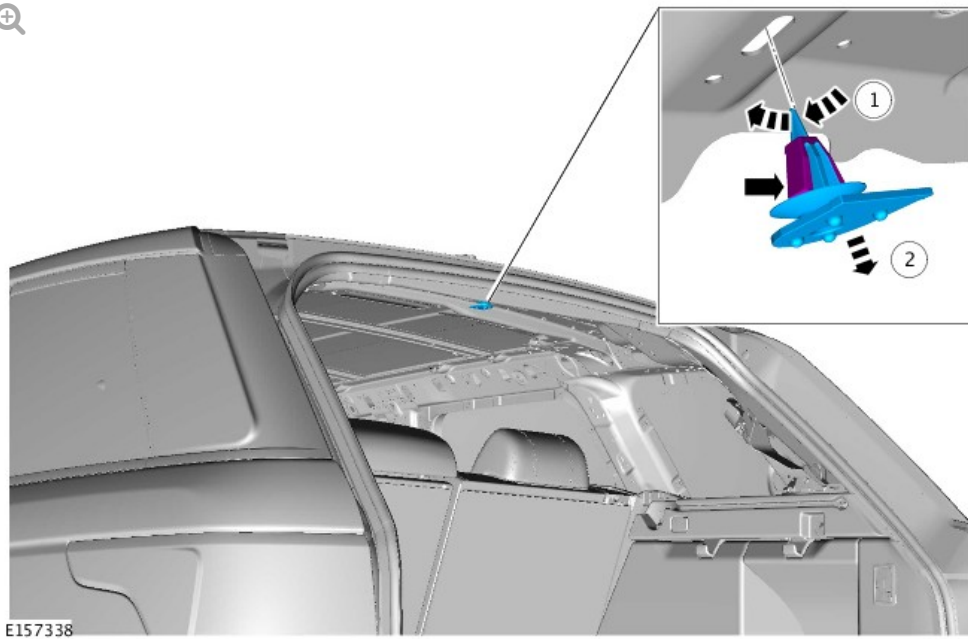

40.

NOTES:


- Repeat the step for the other side.
- Right illustration shown, Left is similar
- If equipped.

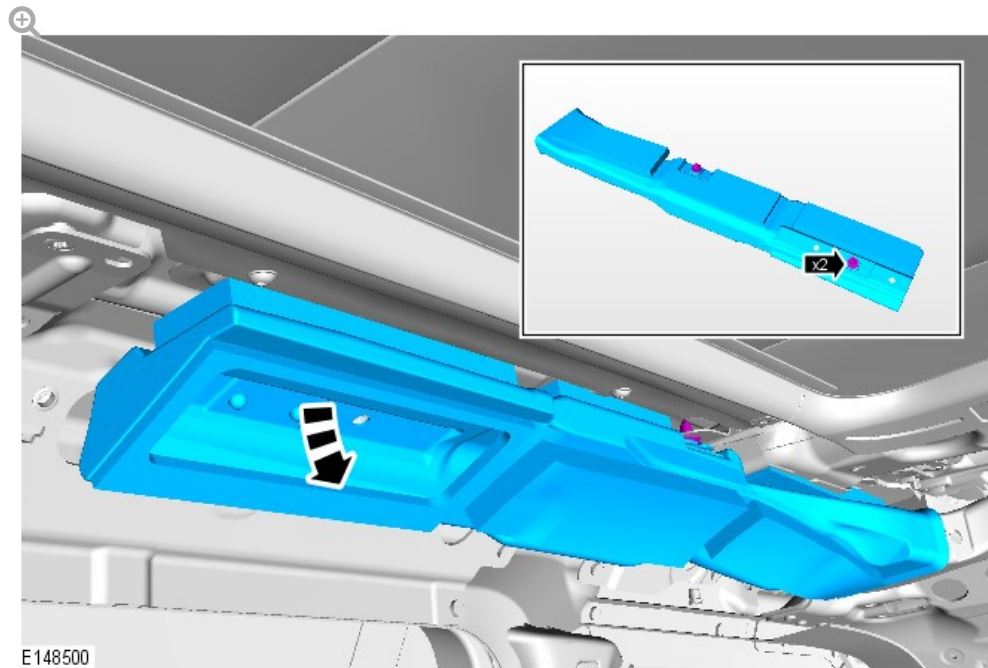

41.

NOTES:

- Repeat the step for the other side.
- Right illustration shown, Left is similar

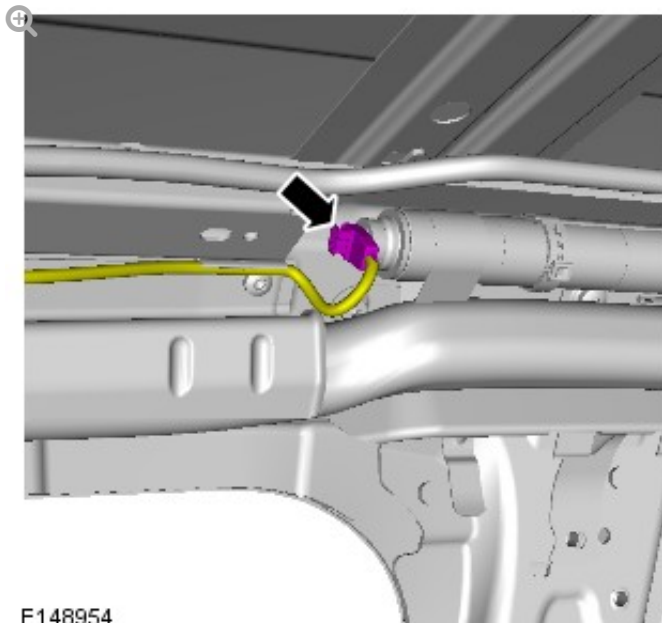


E148954

42.

NOTES:

- Repeat the step for the other side.
- Right illustration shown, Left is similar

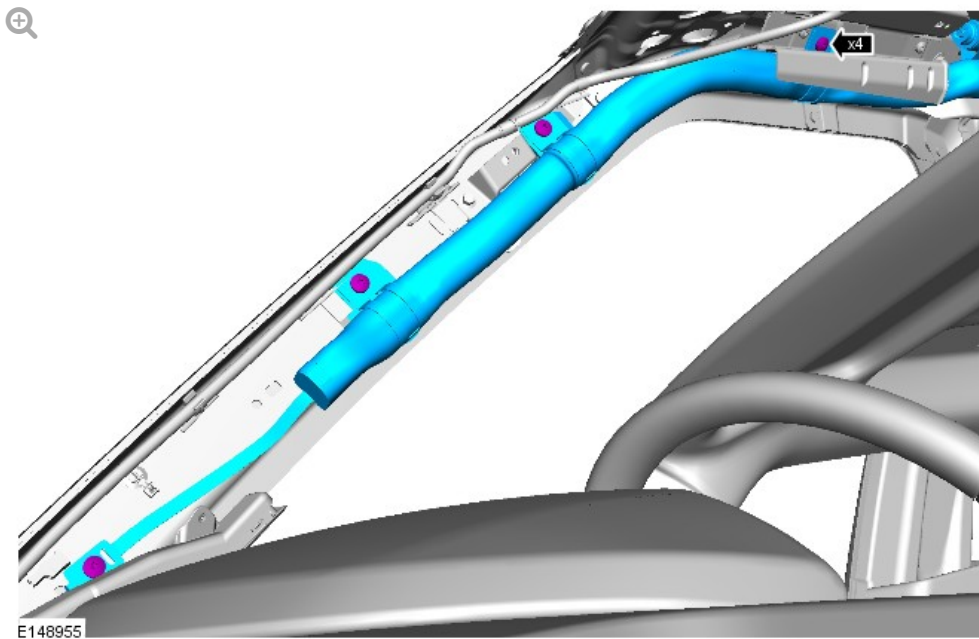


E148955

Torque: 10 Nm

43.

NOTES:

- Repeat the step for the other side.
- Right illustration shown, Left is similar

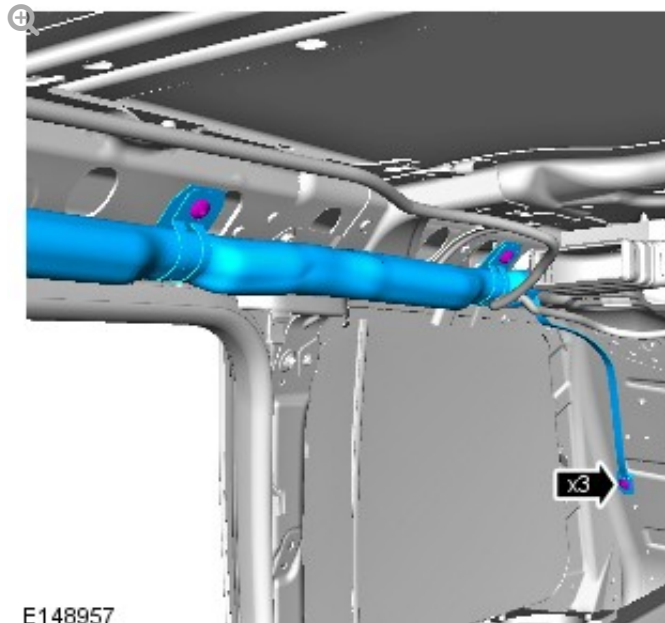

Torque: 10 Nm




Standard wheelbase

44.

NOTES:

- Repeat the step for the other side.
- Right illustration shown, Left is similar

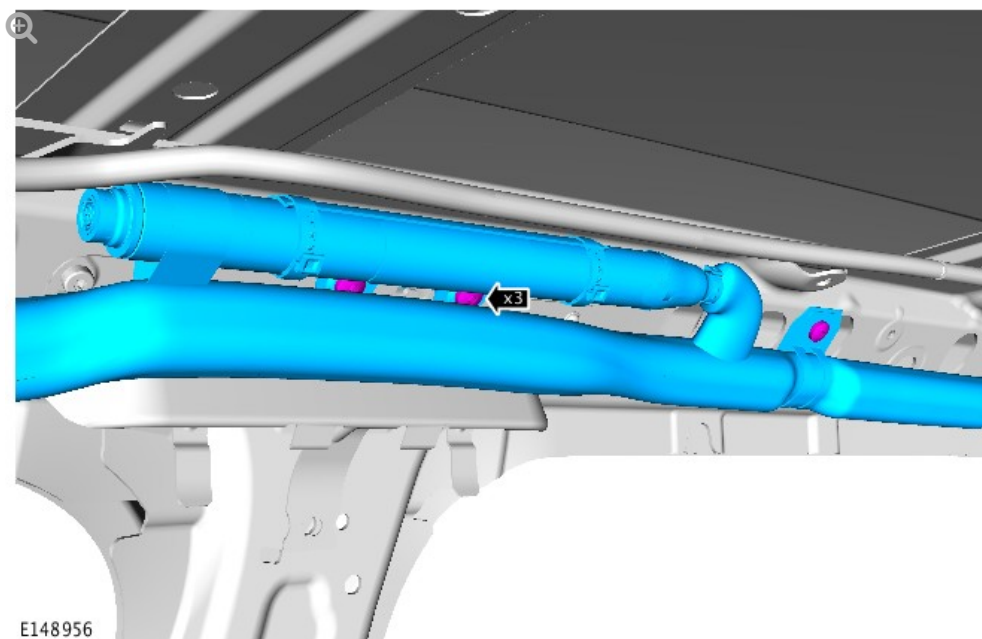

Torque: 10 Nm




Long wheelbase

45.

NOTES:

- Repeat the step for the other side.
- Right illustration shown, Left is similar

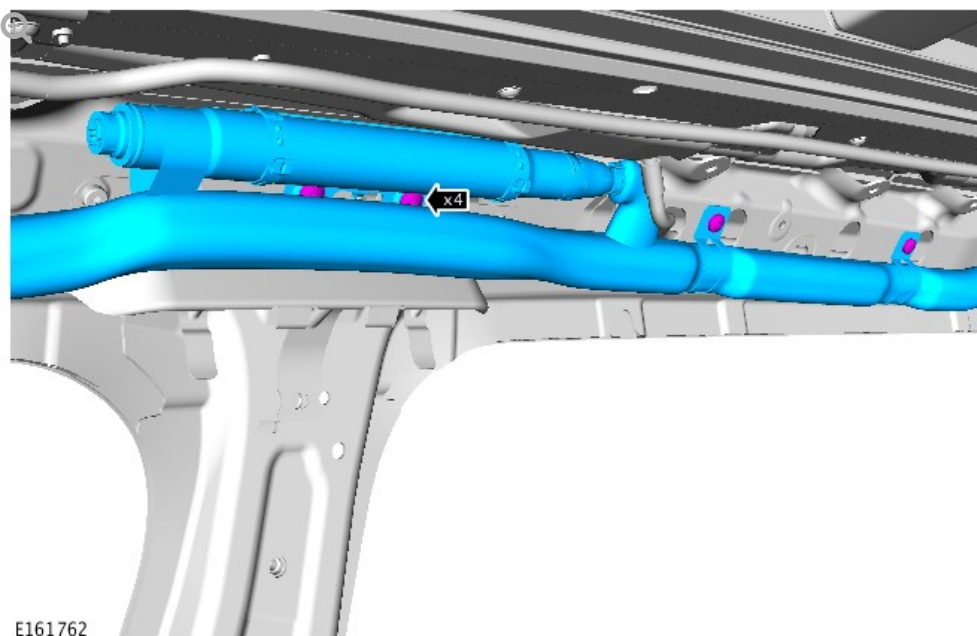

E161762


Torque: 10 Nm

INSTALLATION


1.

NOTE:

Install a new retaining clip.

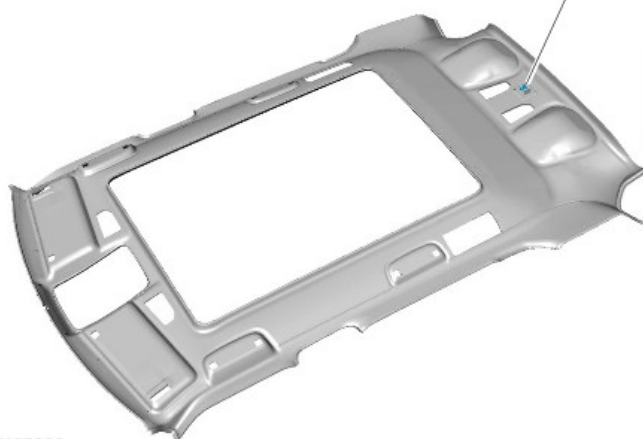

E157336

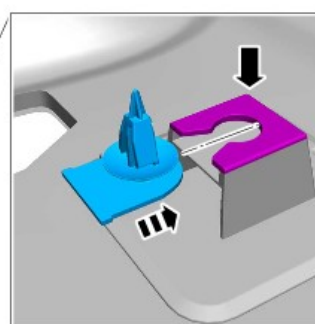

2. To install reverse the removal procedure.

3.

CAUTION:

Make sure that the seal is installed to the correct orientation as noted in the removal procedure. Failure to follow this instruction may result in damage to the headliner.

