

2016.0 RANGE ROVER (LG), 502-03

TOWBAR

DEPLOYABLE TOWBAR CONTROL MODULE (G1560564)


REMOVAL AND INSTALLATION

REMOVAL


NOTES:

- Removal steps in this procedure may contain installation details.
- The ignition must be switched off.


1.

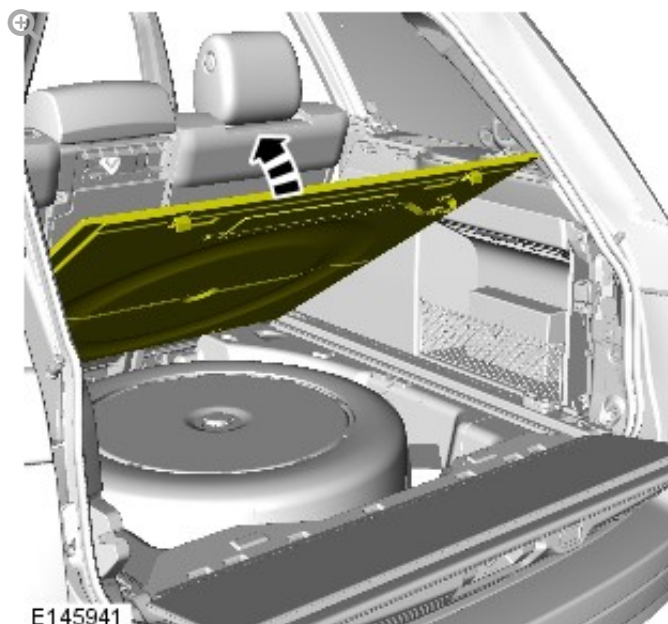


2.

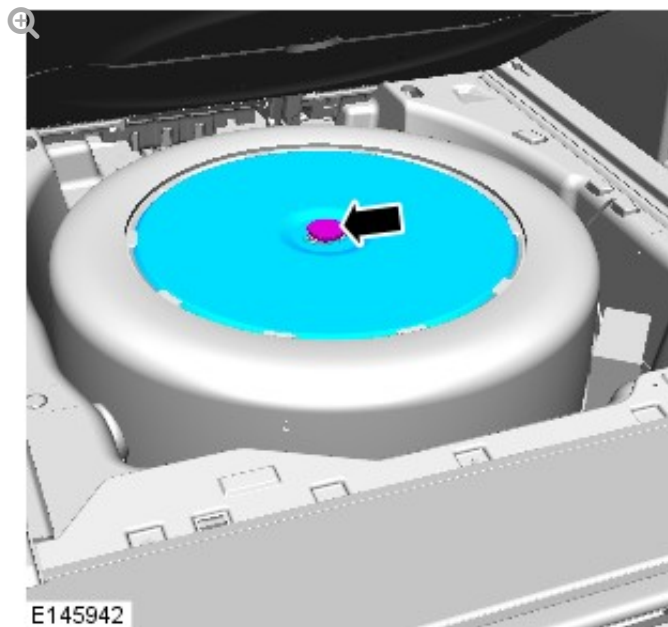

3.

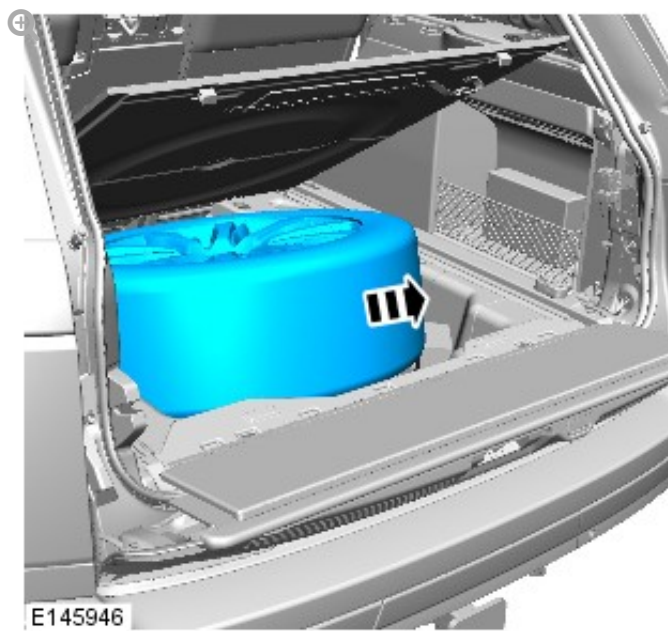


4.

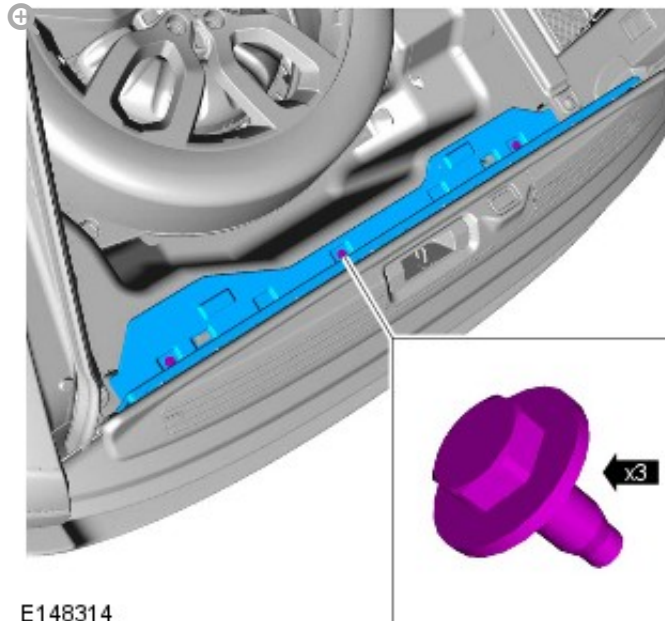

E148314


Torque: 9 Nm

5.

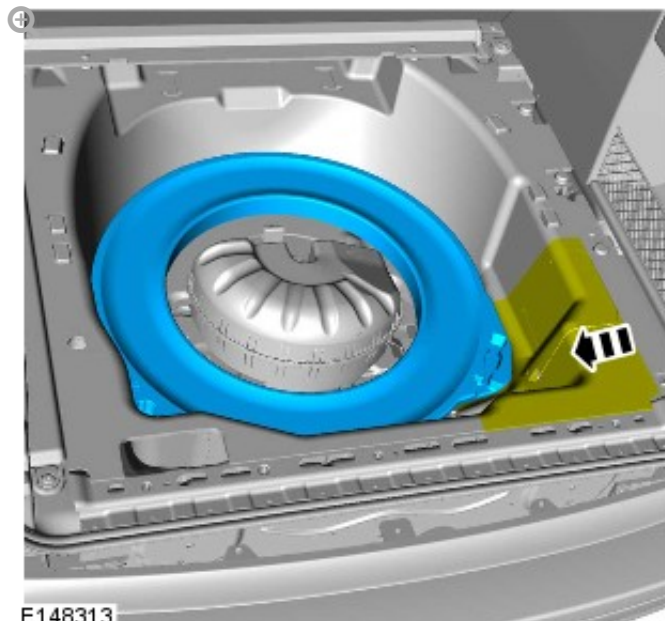

E148313

6.

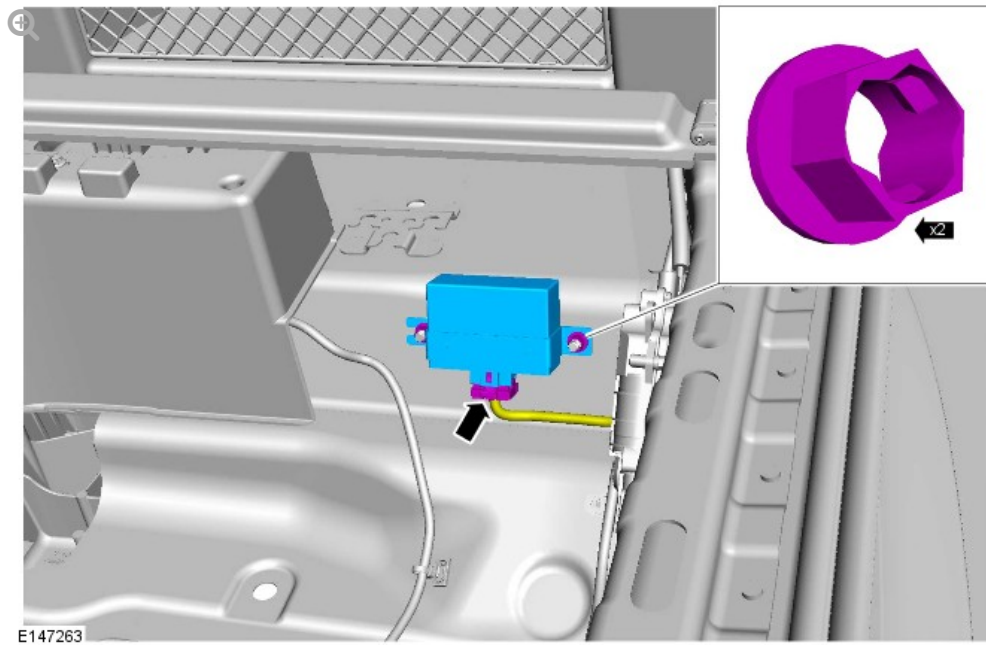

Torque: 2 Nm

INSTALLATION


1. To install reverse the removal procedure.
2. Start the engine.

NOTE:

Press the brake pedal.


3. Turn off the engine.
4. Turn the ignition on.
5. Turn the ignition off.

6.

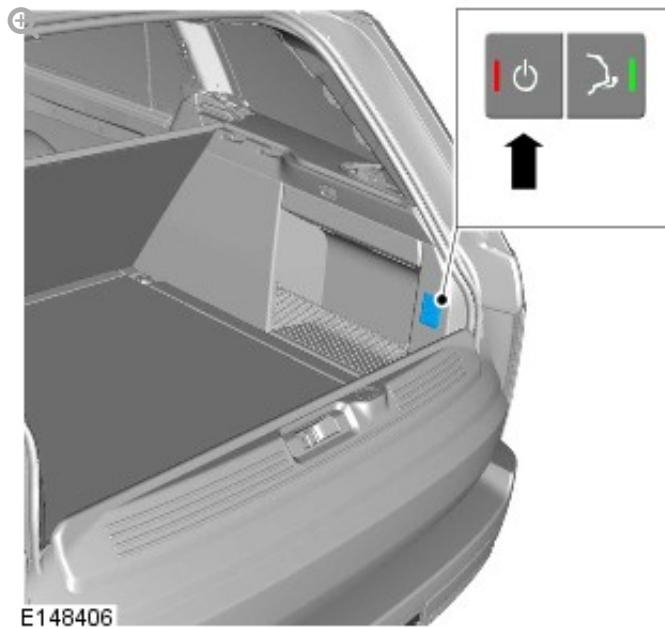

Press ON button for 2 seconds until the green led illuminates.

7.

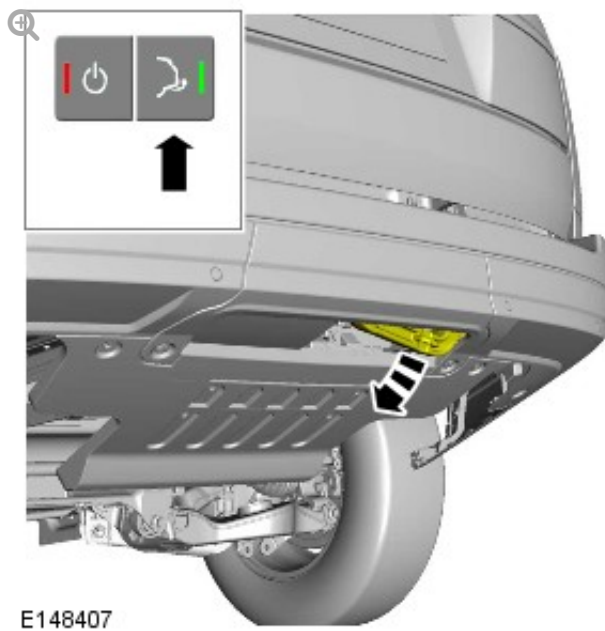

Press and hold deploy/stow button until the towbar moves to fully deployed position. Listen for two beeps to confirm system is calibrated.

NOTE:

Press the brake pedal.

