

2016.0 RANGE ROVER (LG), 501-16

WIPERS AND WASHERS

WIPER LINKAGE ASSEMBLY

[G1521855]

REMOVAL AND INSTALLATION

REMOVAL

NOTES:


- Removal steps in this procedure may contain installation details.
- LHD illustration shown, RHD is similar.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: [Cowl Panel Grille](#) (501-02 Front End Body Panels, Removal and Installation).

3.

CAUTION:

Protect the surrounding components.

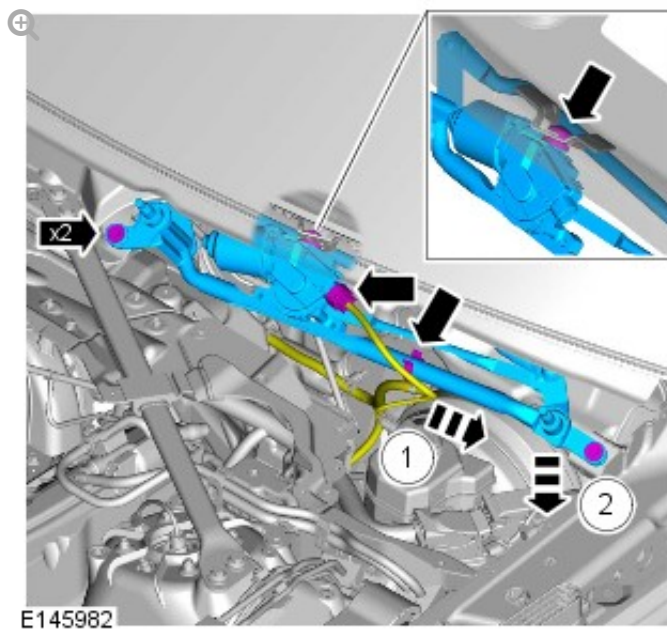


INSTALLATION

1.

CAUTIONS:

- Protect the surrounding components.
- Make sure the component is aligned as shown.

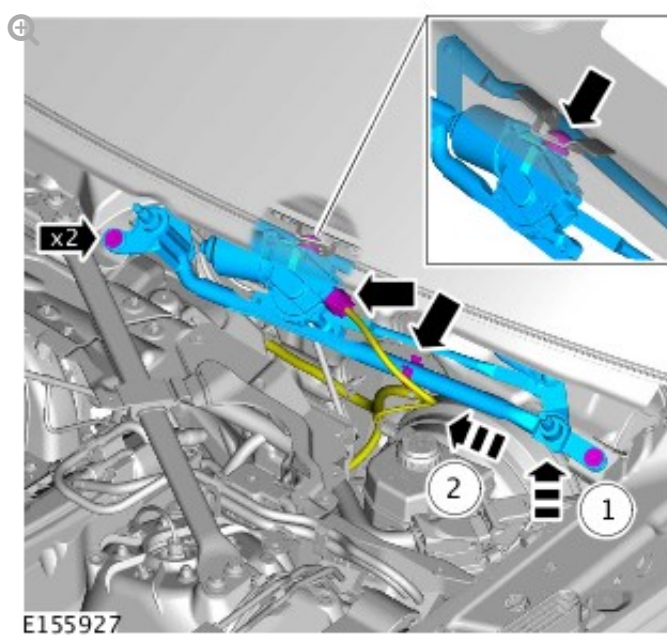

Torque: 8 Nm

2.
 1. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
 2. Set the ignition to the ON position and make sure the windshield wiper motor is in the park position.
 3. Set the ignition to the OFF position.
3. Refer to: [Cowl Panel Grille](#) (501-02 Front End Body Panels, Removal and Installation).