

2016.0 RANGE ROVER (LG), 206-09

ANTI-LOCK CONTROL - TRACTION CONTROL

ANTI-LOCK BRAKE SYSTEM MODULE - RHD (G2001615)

REMOVAL AND INSTALLATION

70.65.49	HYDRAULIC CONTROL UNIT - RENEW	RIGHT HAND DRIVE, 3000 CC, TDV6	1.3	USED WITHINS	+
----------	---	---	-----	-----------------	---

GENERAL EQUIPMENT

EQUIPMENT NAME

Land Rover diagnostic equipment

REMOVAL

CAUTION:

If brake fluid is spilt on the paintwork, the affected area must be immediately washed down with cold water.

NOTES:

- Make sure that all openings are sealed. Use new blanking caps.
- Removal steps in this procedure may contain installation details.



All vehicles

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.


Remove the right-hand front wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.

NOTE:

LH illustration shown, RH is similar.

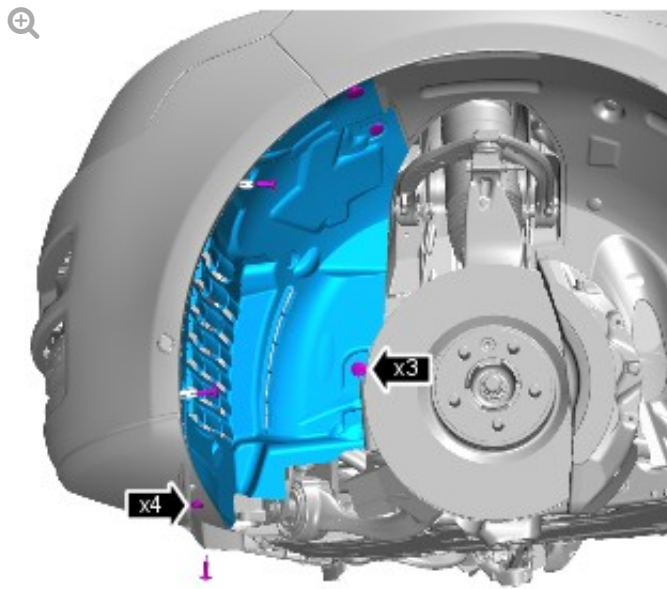

E147833


4. Refer to: [Right Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).
Refer to: [Right Air Cleaner](#) (303-12A Intake Air Distribution and Filtering - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Right Air Cleaner](#) (303-12C Intake Air Distribution and Filtering - V8 N/A 5.0L Petrol, Removal and Installation).
Refer to: [Right Air Cleaner](#) (303-12C Intake Air Distribution and Filtering - V8 N/A 5.0L Petrol, Removal and Installation).



Cold climate vehicles


5. Refer to: [Radiator Grille](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

6.

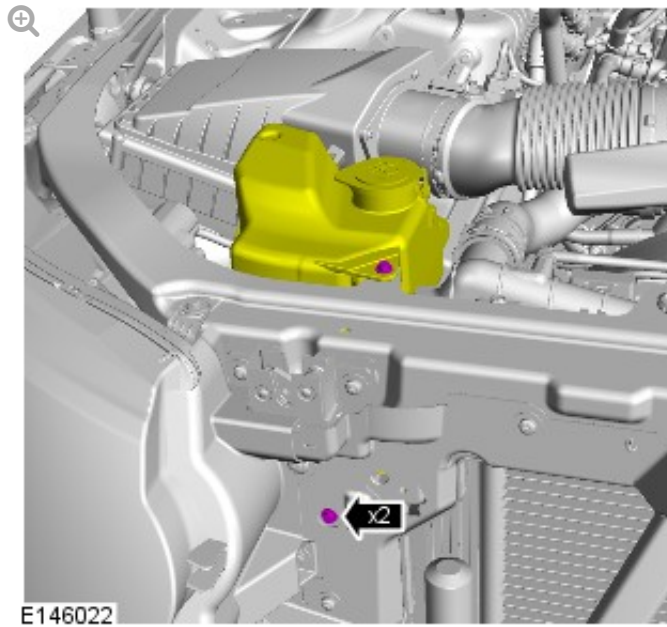

Torque: 7 Nm

7.

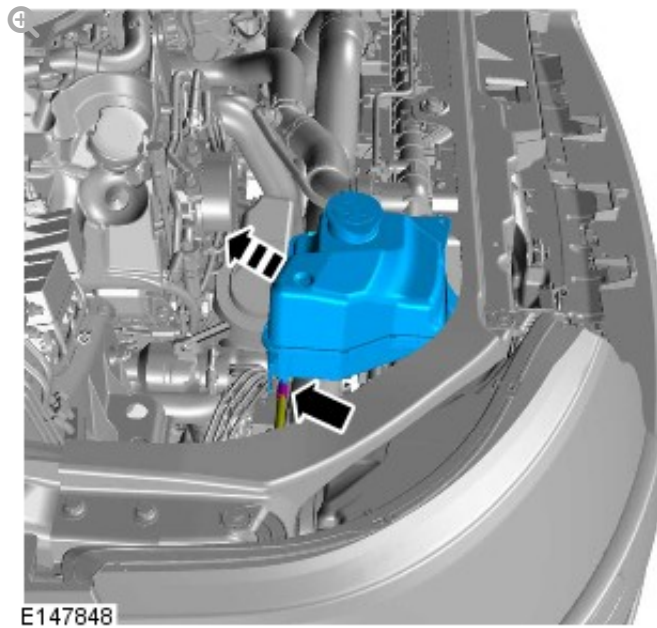


All vehicles

8.

NOTE:


Vehicles with diesel engine only.

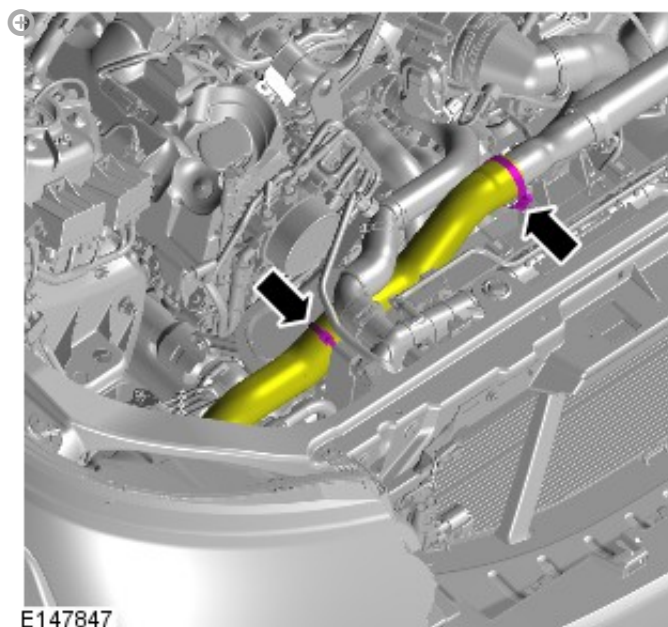


9.

NOTE:

Vehicles with diesel engine only.

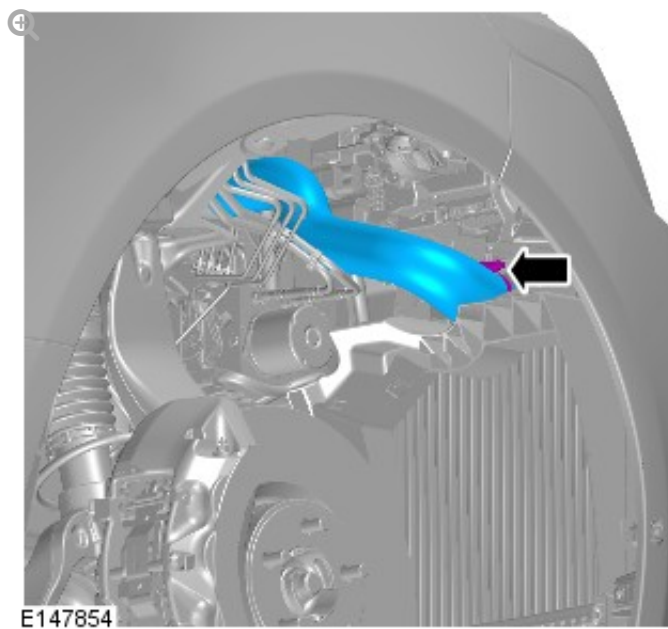


10.

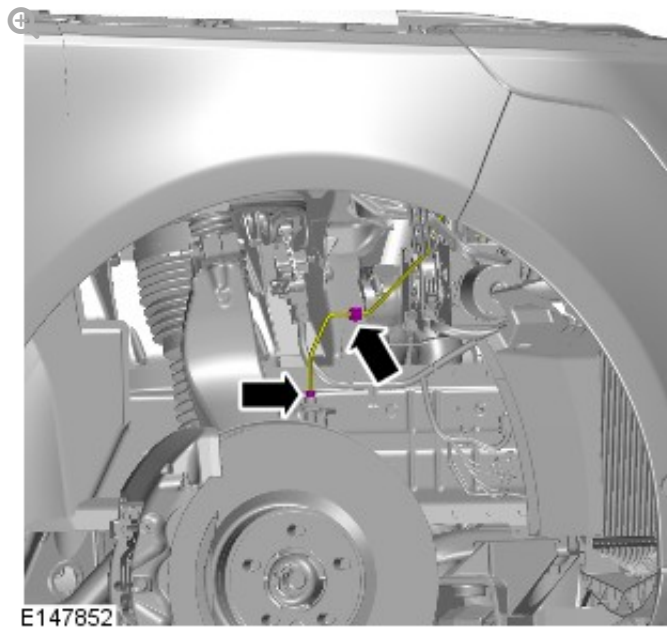


Torque: 16 Nm

11.

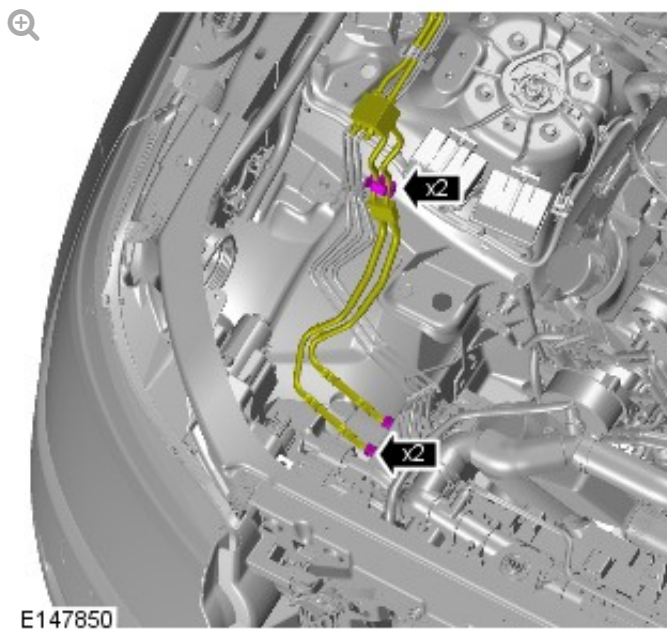

Torque: 20 Nm

12.

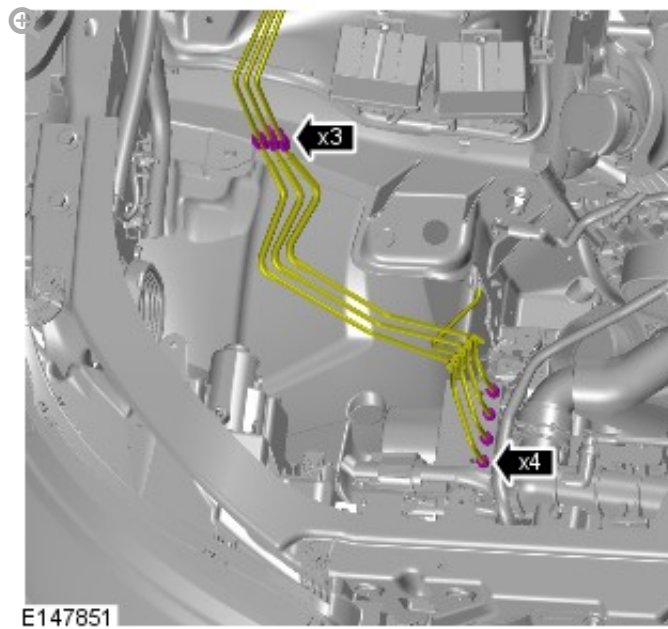


Torque:


M10 16 Nm

M12 18 Nm

13.

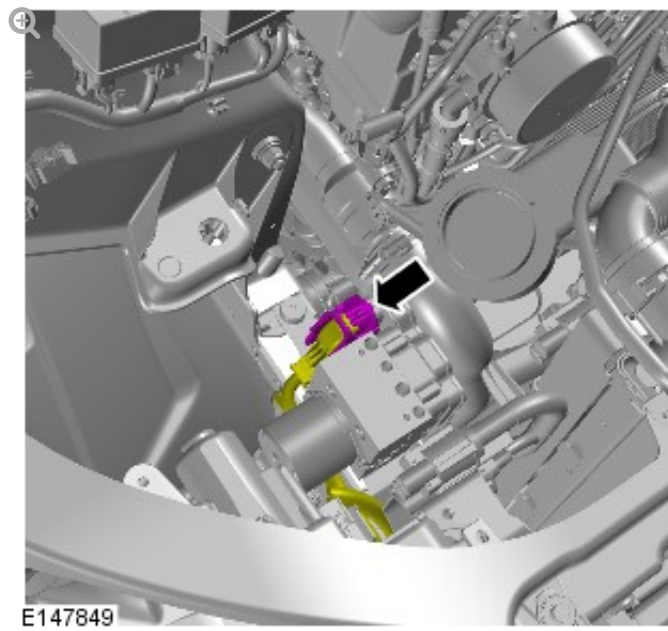

14.

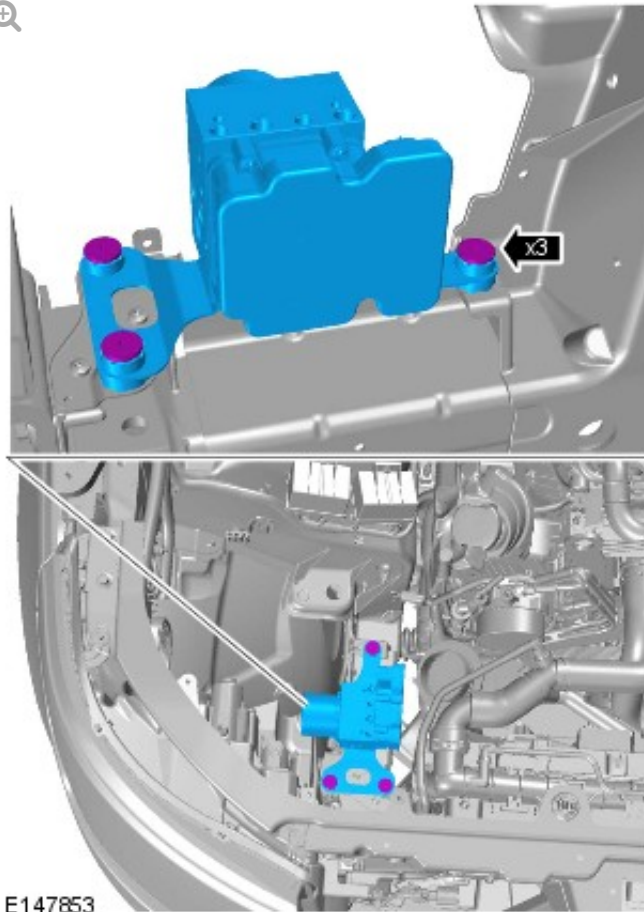


E147853

Torque: 9 Nm

15.

NOTE:

Do not disassemble further if the component is removed for access only.

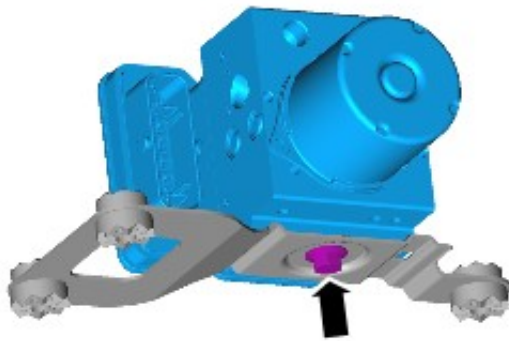

E147828

Torque: 27 Nm

INSTALLATION

1.

NOTE:

Remove and discard all blanking caps.

To install, reverse the removal procedure.

2.

1. Refer to: [Brake System Bleeding - Vehicles With: Standard Brakes](#) (206-00 Brake System - General Information, General Procedures).

2. Refer to: [Brake System Bleeding - Vehicles With: High Performance Brakes](#) (206-00 Brake System - General Information, General Procedures).

3.

1. Hybrid Electric Vehicles (HEV) only.

2. Using the Land Rover approved diagnostic equipment, calibrate the brake pedal sensor.

General Equipment: [Land Rover diagnostic equipment](#)

