

2016.0 RANGE ROVER (LG), 206-09

ANTI-LOCK CONTROL - TRACTION CONTROL

FRONT WHEEL SPEED SENSOR (G1509092)

REMOVAL AND INSTALLATION

70.65.30	SENSOR AND HARNESS - FRONT WHEEL - EACH - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- Left-hand shown, right-hand similar.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3. Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
4. Refer to: [Brake Disc - Vehicles With: Standard Brakes](#) (206-03 Front Disc Brake, Removal and Installation).
5. Refer to: [Brake Disc - Vehicles With: High Performance Brakes](#) (206-03 Front Disc Brake, Removal and Installation).


6.

CAUTION:

Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean.

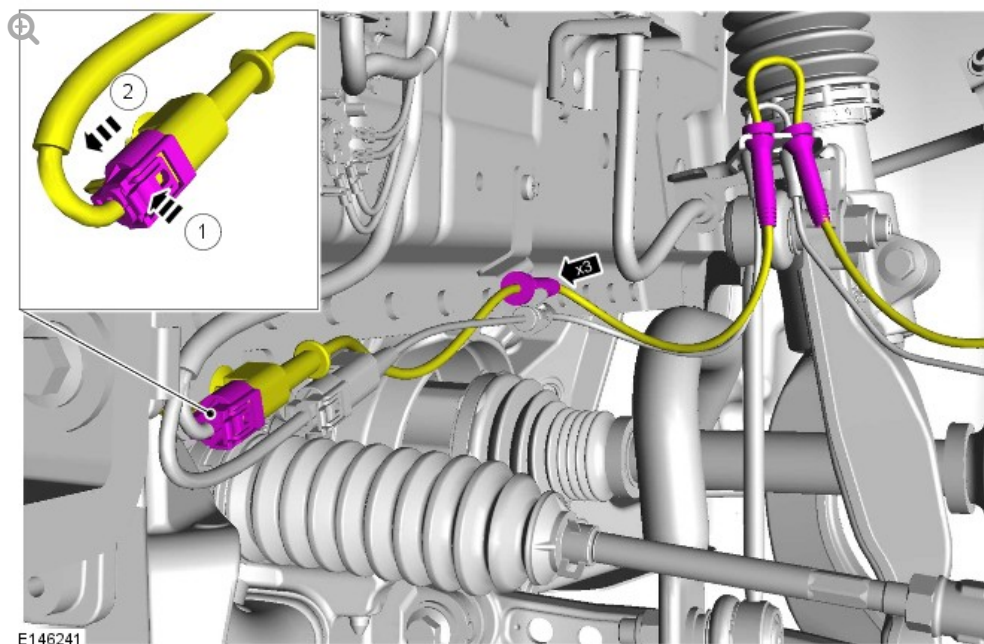

7.

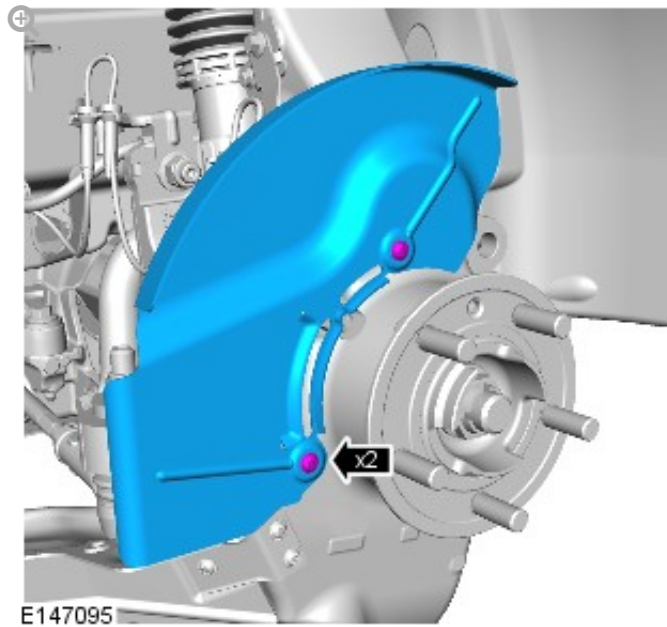


Torque: 9 Nm

8.

CAUTIONS:

- Make sure that the component is clean, free of foreign material and lubricant.
- Make sure that the sensor tip is clean and free of foreign material.

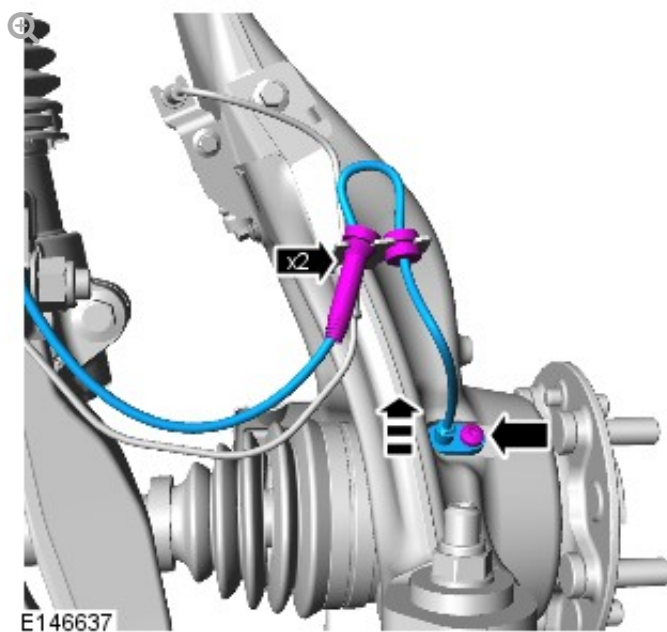

Torque: 9 Nm

INSTALLATION

1. To install reverse the removal procedure.