

2016.0 RANGE ROVER (LG), 206-09

ANTI-LOCK CONTROL - TRACTION CONTROL

REAR WHEEL SPEED SENSOR (G1509093)

REMOVAL AND INSTALLATION

70.65.31	SENSOR AND HARNESS - REAR WHEEL - EACH - RENEW	ALL DERIVATIVES	0.6	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- Left-hand shown, right-hand similar.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3.

Refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

4.

CAUTION:


Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean.

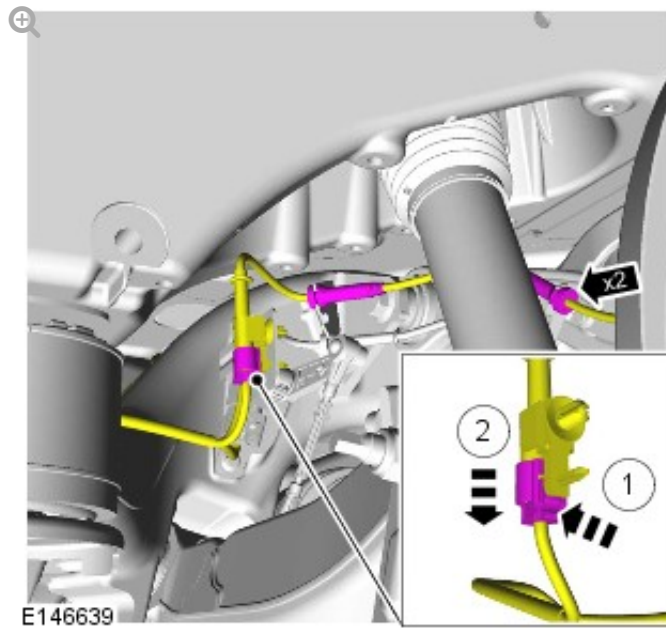

5.

CAUTIONS:

- Make sure that the component is clean, free of foreign material and lubricant.
- Make sure that the sensor tip is clean and free of foreign material.

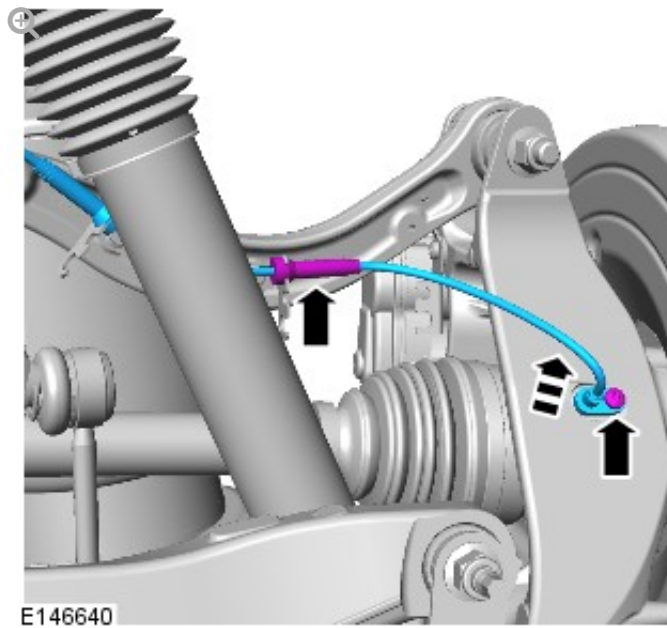

Torque: 9 Nm

INSTALLATION

1. To install reverse the removal procedure.