

2016.0 RANGE ROVER (LG), 206-00

BRAKE SYSTEM - GENERAL INFORMATION

FRONT BRAKE DISC RUNOUT CHECK - VEHICLES WITH: HIGH PERFORMANCE BRAKES (G1807676)

GENERAL PROCEDURES

70.12.15.01	DISC - FRONT - LEFT/EACH - CHECK RUN OUT AND THICKNESS - WITH WHEEL REMOVED	ALL DERIVATIVES	0.4	USED WITHINS
-------------	--	--------------------	-----	--------------

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
 - LH illustration shown, RH is similar.
-

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise the front of the vehicle.


2. Remove the road wheel.

For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation) / [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).

3.

CAUTION:

Do not allow the brake caliper to hang on the brake hose.

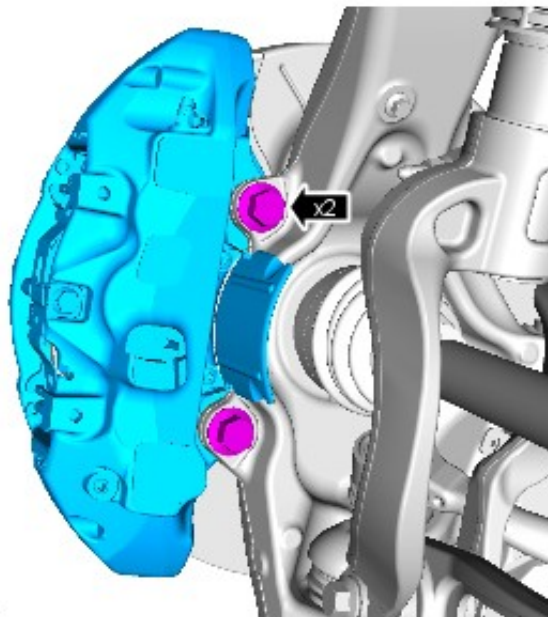


E143714

Release the brake caliper and tie aside.

4.


CAUTION:

Brake discs must be renewed in pairs, unless one disc requires changing before 1000 miles (1600 kilometers) from new.

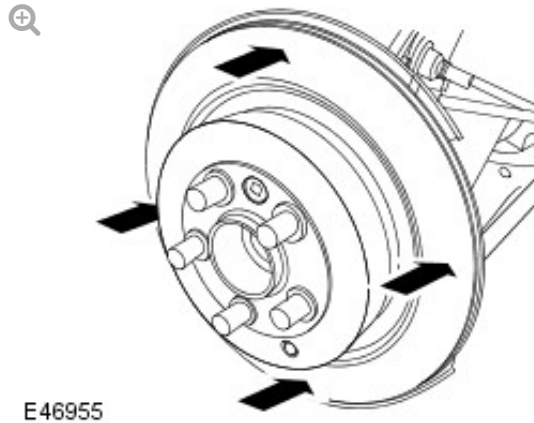

At 4 points around disc, measure disc thickness using a micrometer; renew disc if less than service limit or if variation is exceeded: Disc thickness, NEW 34 mm, Service limit 31 mm. Thickness variation maximum = 0.01 mm


5.

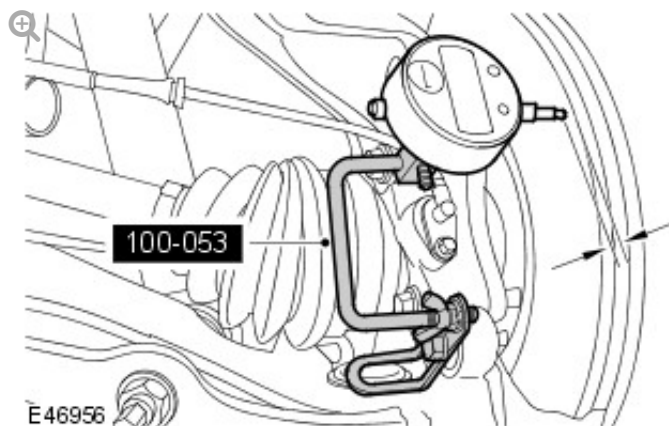

Mount a Dial Test Indicator (DTI) to and secure to inboard side of hub using caliper assembly upper bolt hole

6. Position DTI probe 5 mm in from outer edge of disc.

7.

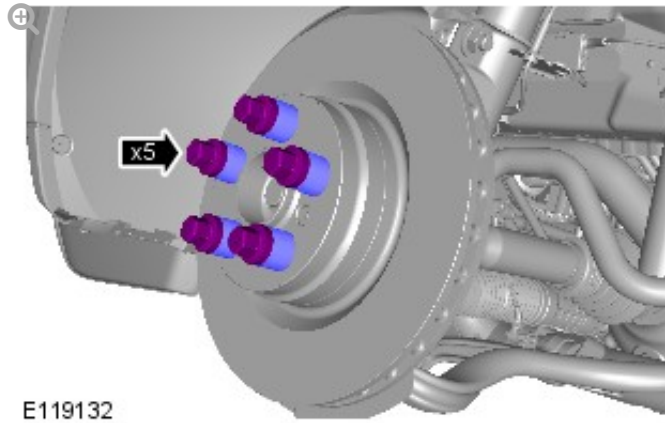

Install spacer washers under the wheel nuts.

- Tighten the road wheel nuts to 140 Nm (103 lb.ft).

8. Zero DTI and rotate road wheel one complete revolution to measure disc runout. Disc runout must not exceed 0.05 mm (0.002 in).

9. If disc runout is outside limits:

10. Remove the wheel hub nuts.

- Remove the spacers.

11. Remove Allen screw securing brake disc to drive flange.

12. Remove the brake disc.

13. Make sure the mating surfaces of disc and drive flange are clean.

14. Fit disc to flange, fit Allen screw and tighten to 16 Nm (12 lbf.ft.).

15. Install spacer washers under the wheel nuts.

- Tighten the road wheel nuts to 140 Nm (103 lb.ft).

16. Check disc runout as detailed above.

17. If runout is still outside limits, renew disc and/or hub.

18. Remove the wheel hub nuts.

- Remove the spacers.

19. Remove the DTI.

20. Install the brake caliper and tighten the bolts to 282 Nm.

21. Install the road wheel(s).

For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation) / [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).

22. Depress brake pedal several times to set brake pads.

23. Lower the vehicle.