

2016.0 RANGE ROVER (LG), 206-03

FRONT DISC BRAKE

BRAKE CALIPER – VEHICLES
WITH: HIGH PERFORMANCE
BRAKES (G1885318)

REMOVAL AND INSTALLATION

70.55.24	HOUSING ASSEMBLY - BRAKE CALIPER - FRONT - EACH - RENEW	ALL DERIVATIVES	0.9	USED WITHINS	+
70.55.24.36	HOUSING ASSEMBLY - CALIPER - FRONT - EACH - RENEW - WITH BREMBO/SPOTRS BRAKES FITTED	ALL DERIVATIVES	1.1	USED WITHINS	+
70.55.25	HOUSING ASSEMBLY - BRAKE CALIPER - REAR - EACH - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+

REMOVAL

CAUTION:

LH illustration shown, RH is similar.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2. Remove the wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.

CAUTION:

The brake pad wear indicator sensor, which is installed on the left hand side only, is easily damaged. Do not use a lever to remove the sensor.

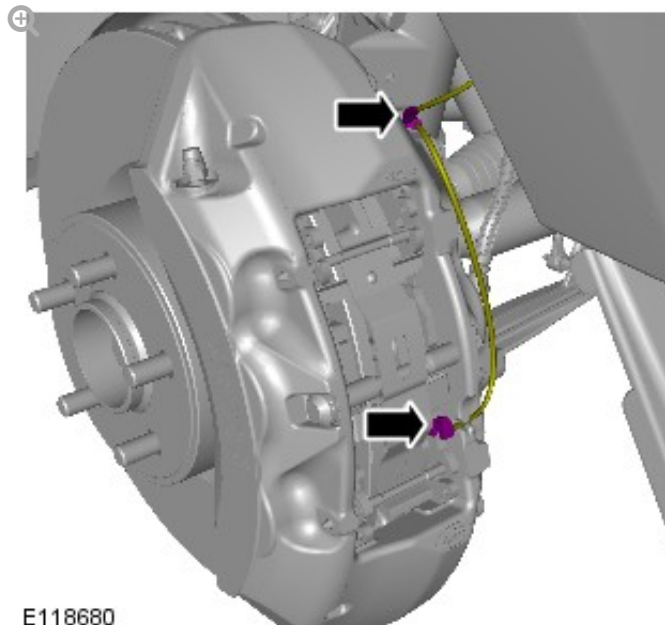

E118680


4.

WARNING:

Be prepared to collect escaping fluid.

CAUTIONS:

- Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean.
- Using a suitable hose clamp, clamp the brake hose prior to removal.

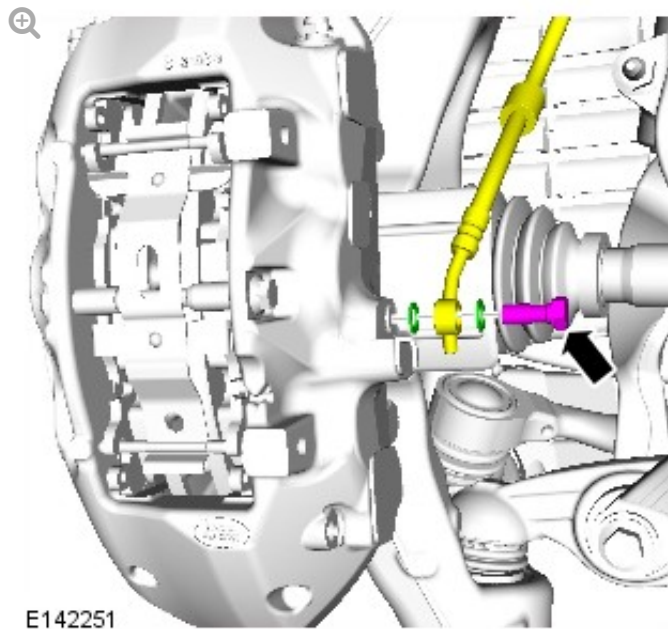


E142251

Torque: 32 Nm

5. Refer to: [Brake Pads - Vehicles With: High Performance Brakes](#) (206-03 Front Disc Brake, Removal and Installation).

6. **CAUTION:**

Make sure that new bolts are installed.

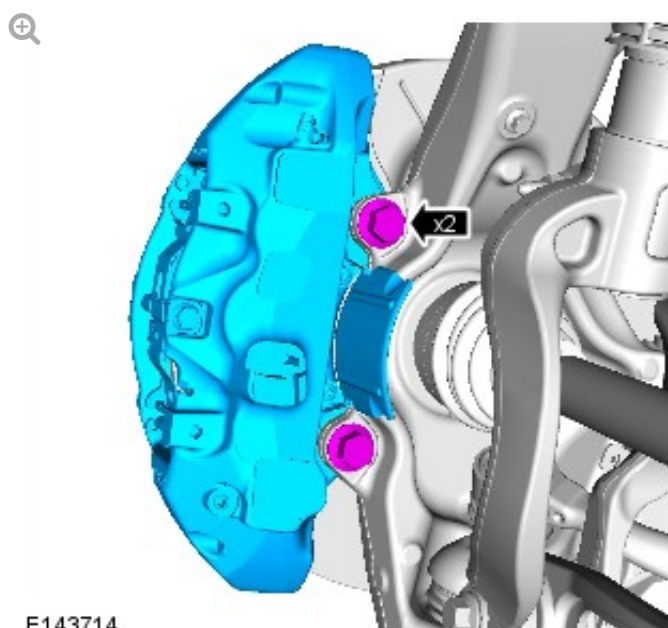

E143714

Torque:

Stage 1: **133 Nm**

Stage 2: **60°**

INSTALLATION

1. To install, reverse the removal procedure.

2. Bleed the brake system.

Refer to: [Brake System Bleeding - Vehicles With: High Performance Brakes](#) (206-00 Brake System - General Information, General Procedures).