

2016.0 RANGE ROVER (LG), 206-03

FRONT DISC BRAKE

BRAKE CALIPER - VEHICLES WITH: STANDARD BRAKES

[G1606171]

REMOVAL AND INSTALLATION

70.55.24	HOUSING ASSEMBLY - BRAKE CALIPER - FRONT - EACH - RENEW	ALL DERIVATIVES	0.9	USED WITHINS	+
70.55.24.36	HOUSING ASSEMBLY - CALIPER - FRONT - EACH - RENEW - WITH BREMBO/SPOTRS BRAKES FITTED	ALL DERIVATIVES	1.1	USED WITHINS	+
70.55.25	HOUSING ASSEMBLY - BRAKE CALIPER - REAR - EACH - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+

REMOVAL

NOTE:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2. Remove the wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.

CAUTION:

The brake pad wear indicator sensor, which is installed on the left hand side only, is easily damaged. Do not use a lever to remove the sensor.

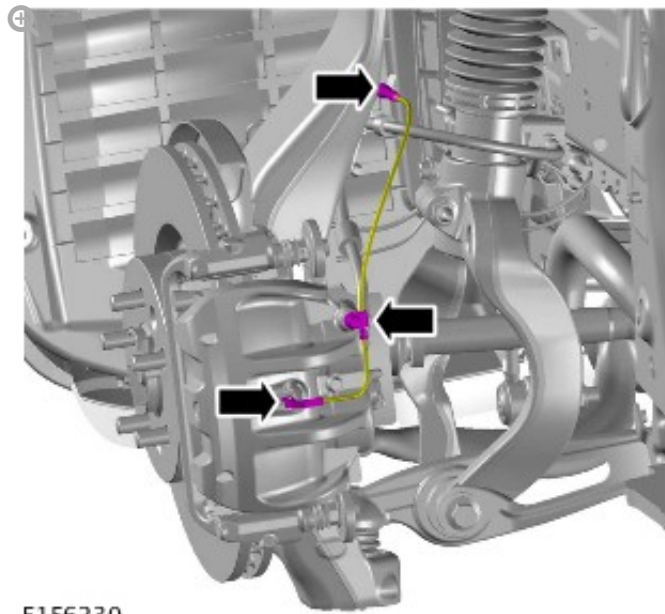

E156230

Remove the brake pad wear indicator sensor.



4.

WARNING:

Be prepared to collect escaping fluid.


CAUTION:

- Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean.
- Using a suitable hose clamp, clamp the brake hose prior to removal.

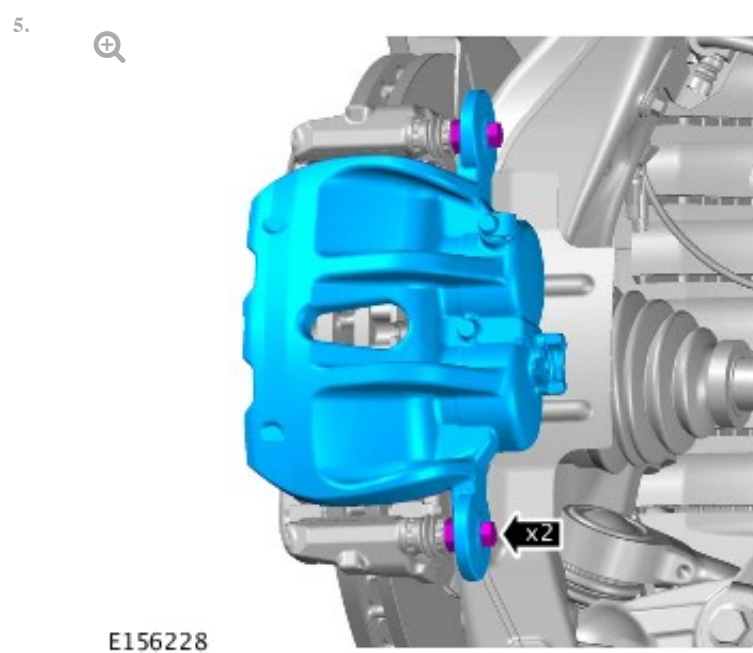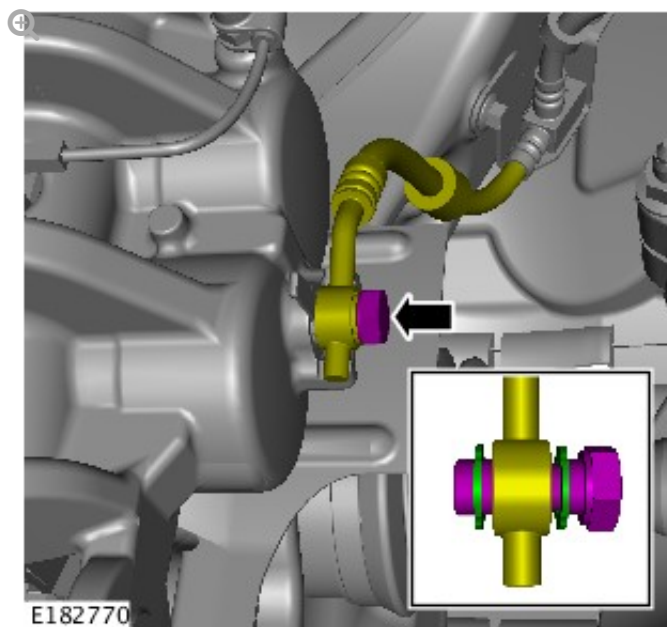

INSTALLATION


1.

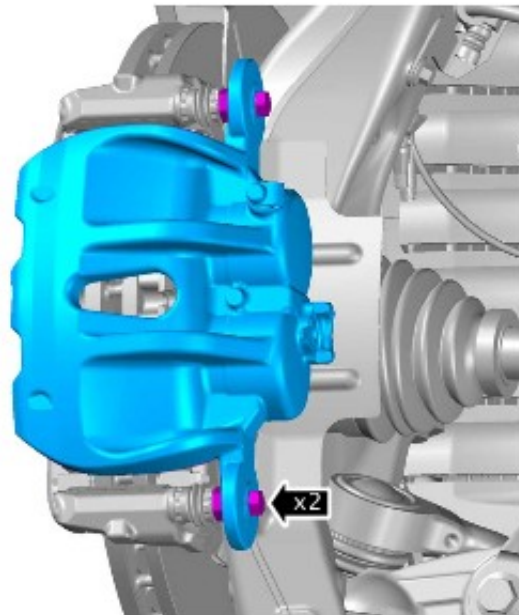

E156228

Torque: 35 Nm


2.

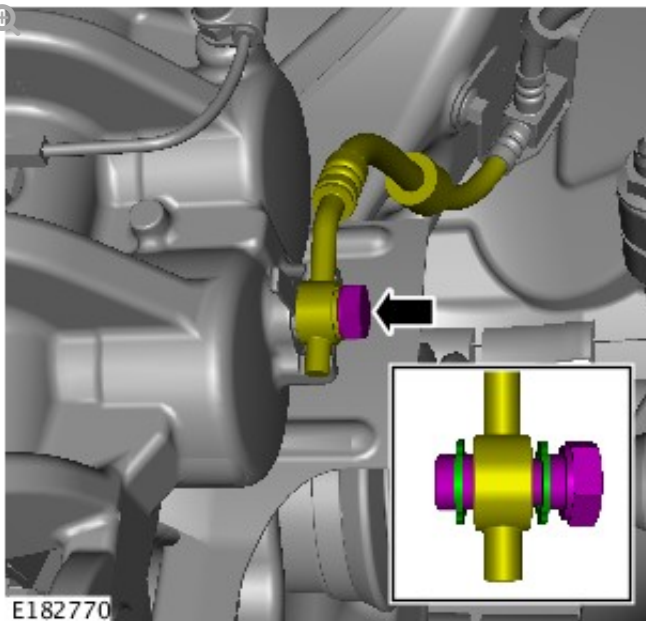

E182770

Torque: 32 Nm


3.

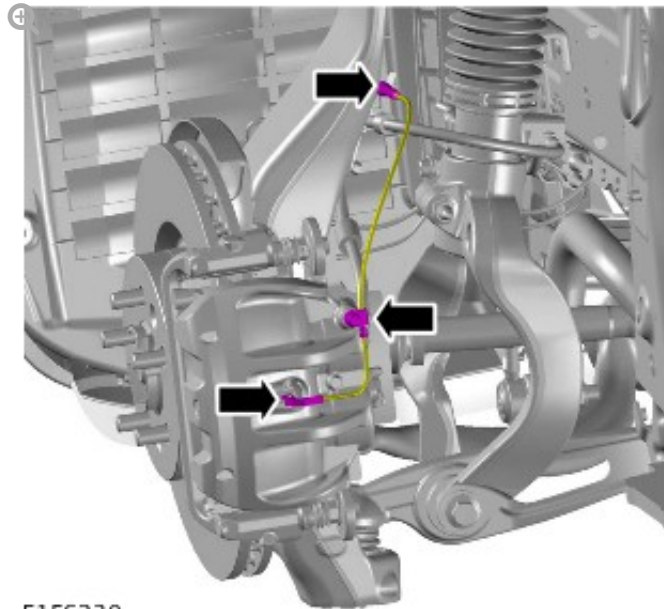

E156230

Carefully install the brake pad wear indicator sensor.

4.

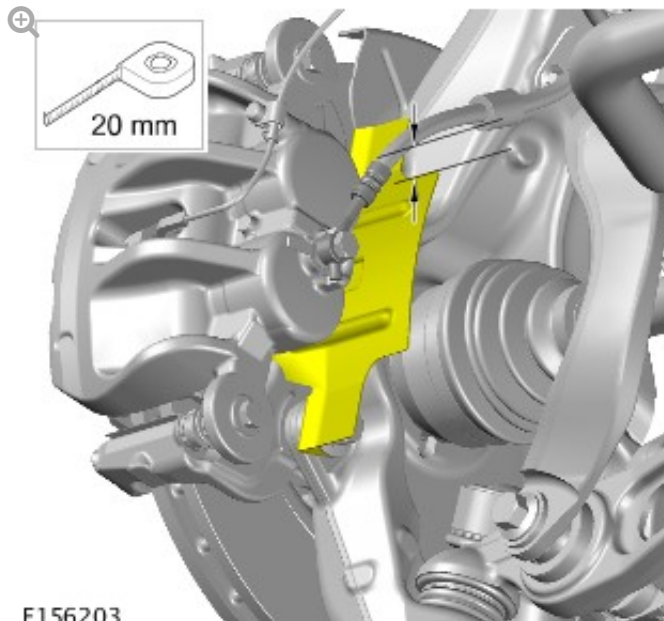

E156203

Make sure that the scoop is at least 20mm from the brake hose after the caliper bolts are tighten. If necessary, manipulate into position.

5. Bleed the brake system.

Refer to: [Brake System Bleeding - Vehicles With: High Performance Brakes](#) (206-00 Brake System - General Information, General Procedures).

6. Install the wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).