

2016.0 RANGE ROVER (LG), 206-03

FRONT DISC BRAKE

BRAKE DISC - VEHICLES
WITH: HIGH PERFORMANCE
BRAKES (G1885319)

REMOVAL AND INSTALLATION

70.12.10	DISC - FRONT - EACH - RENEW	ALL DERIVATIVES	0.5	USED WITHINS	+
70.12.33	DISC - REAR - EACH - RENEW	ALL DERIVATIVES	1	USED WITHINS	+

REMOVAL

WARNING:

If installing a new brake disc, install new brake pads.

CAUTION:

Brake discs must be renewed in pairs.

NOTES:

- The brake pad wear warning indicator sensor must be replaced each time the brake pads are serviced.
- LH illustration shown, RH is similar.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2. Remove the front road wheel.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.

CAUTIONS:


- Make sure that no load is placed on the brake hose.
- LH side: Do not allow the brake caliper to hang on the brake pad wear warning sensor lead.

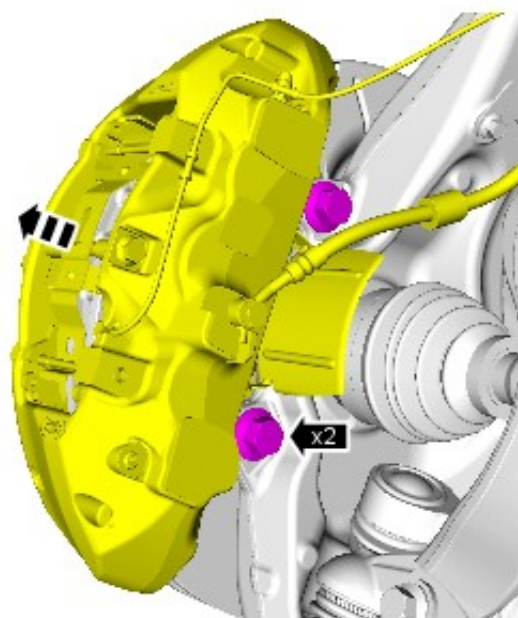

E142214

Tie aside.


4.

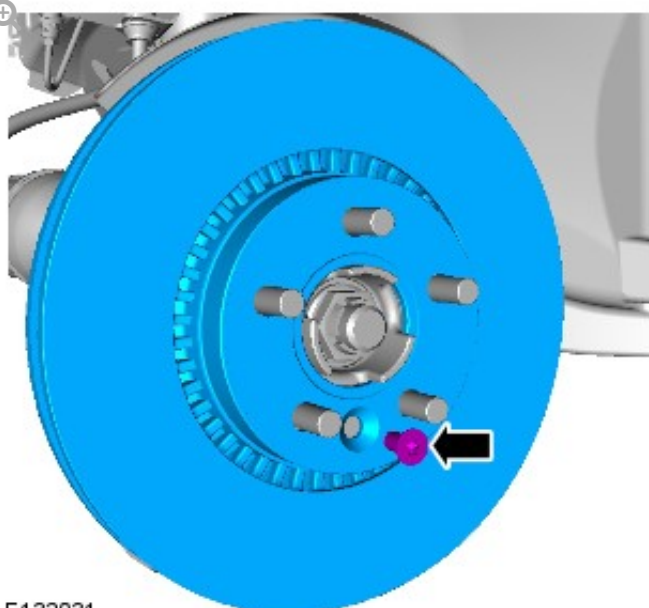

E132031

INSTALLATION


1.

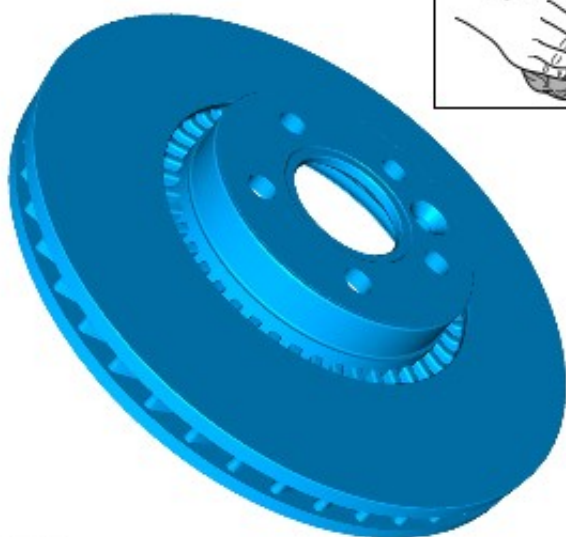

E132111

Clean the brake disc using brake cleaning fluid.

2.

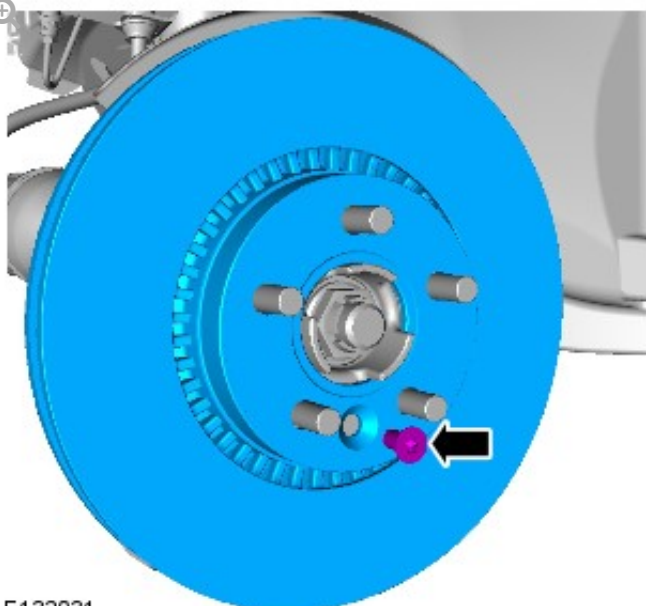

E132031

Torque: 35 Nm

3.

WARNING:

Do not use compressed air to clean brake components. Dust from friction materials can be harmful if inhaled.




E142215

Clean the brake caliper housing and anchor plate using brake cleaning fluid.

4.

CAUTIONS:

- Make sure that the brake hose is not twisted and is correctly located.
- Make sure that new bolts are installed.

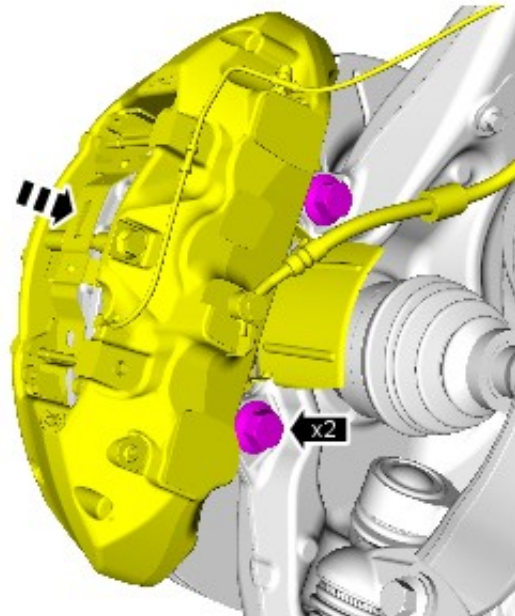

E142218

Torque:

Stage 1: **133 Nm**

Stage 2: **60°**

5. Install the front wheel.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

6. Depress the brake pedal several times, check the fluid level in the brake fluid reservoir and top-up with brake fluid if necessary.