

2016.0 RANGE ROVER (LG), 206-03

FRONT DISC BRAKE

BRAKE DISC - VEHICLES
WITH: STANDARD BRAKES

[G 1 8 8 5 3 2 0]

REMOVAL AND INSTALLATION

70.12.10	DISC - FRONT - EACH - RENEW	ALL DERIVATIVES	0.5	USED WITHINS	+
70.12.33	DISC - REAR - EACH - RENEW	ALL DERIVATIVES	1	USED WITHINS	+

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 4	Renew Part	Brake caliper carrier bolts

REMOVAL

WARNING:

If installing a new brake disc, install new brake pads.

CAUTION:

Brake discs must be renewed in pairs.

NOTES:

- The brake pad wear warning indicator sensor must be replaced each time the brake pads are serviced.
- LH illustration shown, RH is similar.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2. Remove the front road wheel.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.


CAUTIONS:

- Make sure that the brake hose does not support the full weight of the brake caliper assembly.
- LH side: Do not allow the brake caliper to hang on the brake pad wear warning sensor lead.
- Discard the bolts.

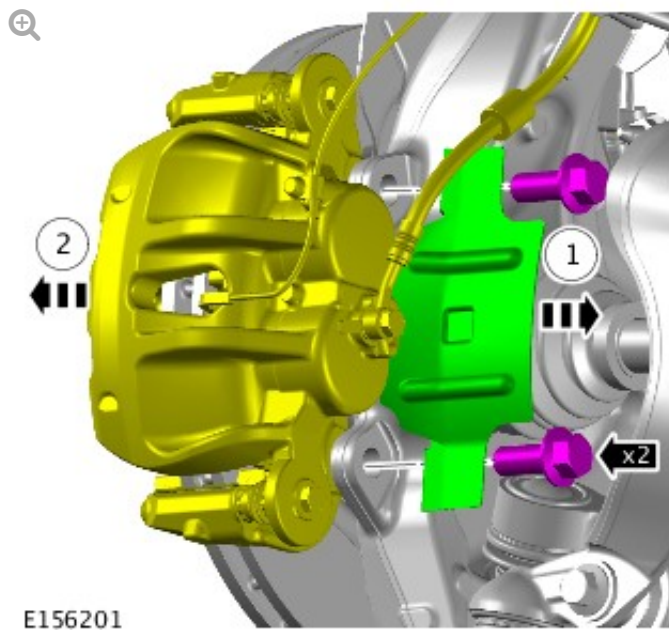


Tie aside.

4.

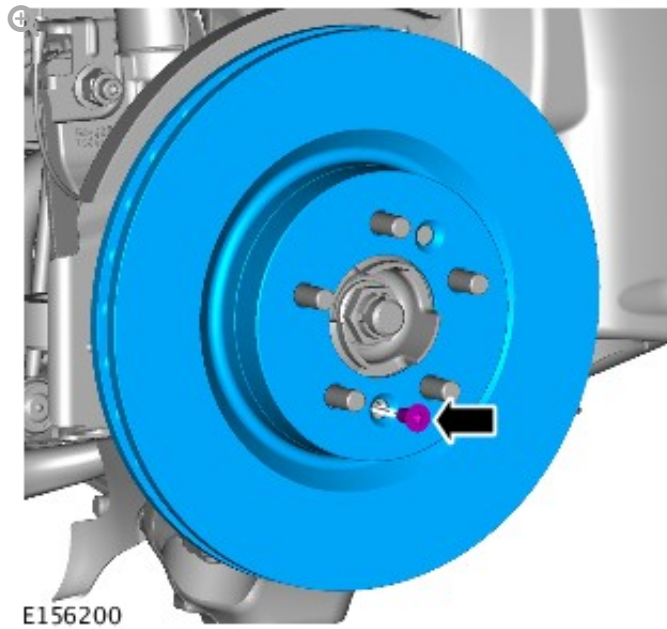

INSTALLATION


1.

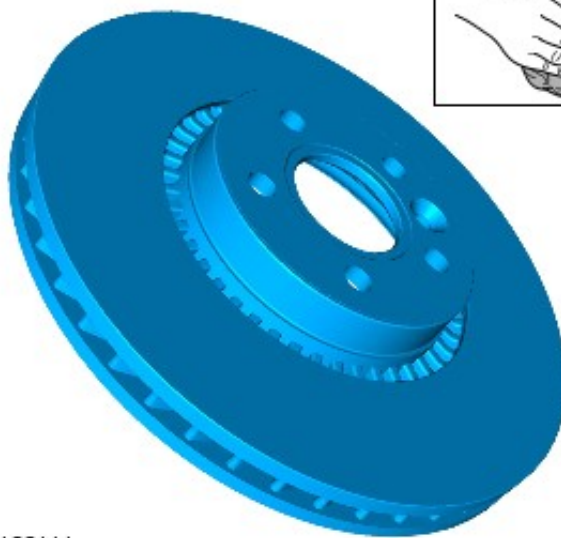

E132111

Clean the brake disc using brake cleaning fluid.

2.

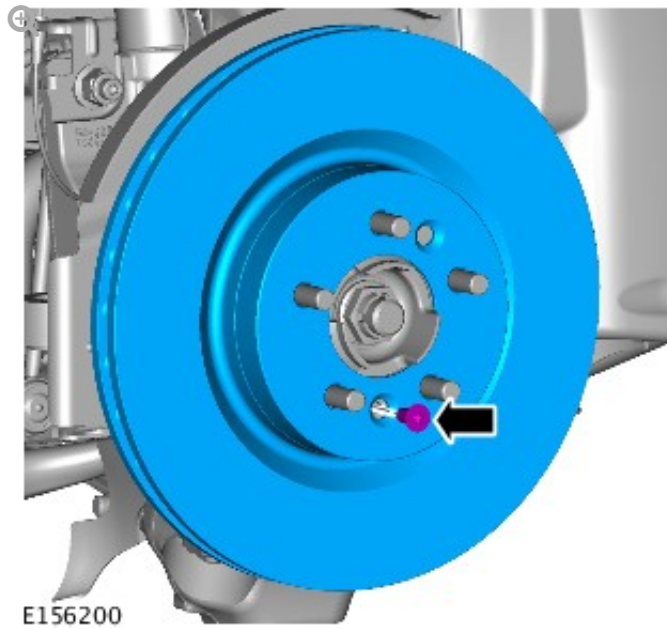


Torque: 35 Nm

3.

WARNING:

Do not use compressed air to clean brake components. Dust from friction materials can be harmful if inhaled.

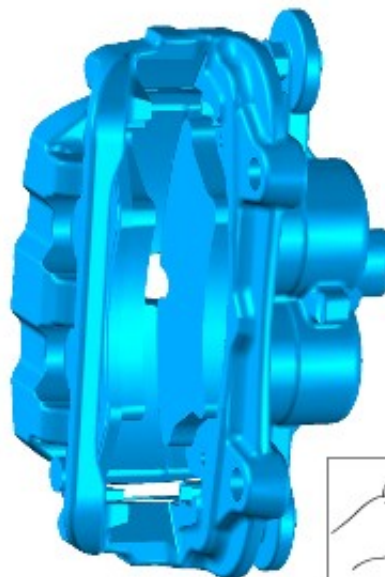


E156202

Clean the brake caliper housing and anchor plate using brake cleaning fluid.

4.

CAUTIONS:

- Make sure that the brake hose is not twisted and is correctly located.
- Make sure that new bolts are installed.

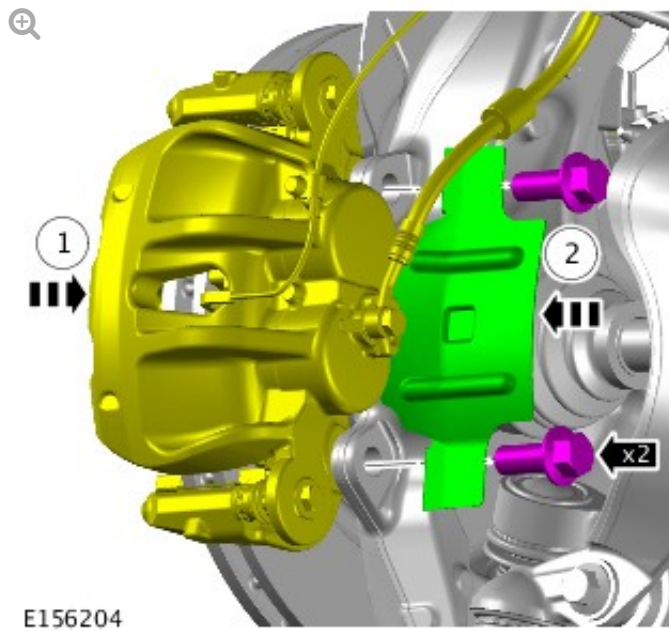

Renew Part: *Brake caliper carrier bolts.*

Torque:


Stage 1: 135 Nm

Stage 2: 60°

5.

CAUTION:

Make sure that the scoop is at least 20mm from the brake hose after the caliper bolts are tighten. If necessary, manipulate into position.

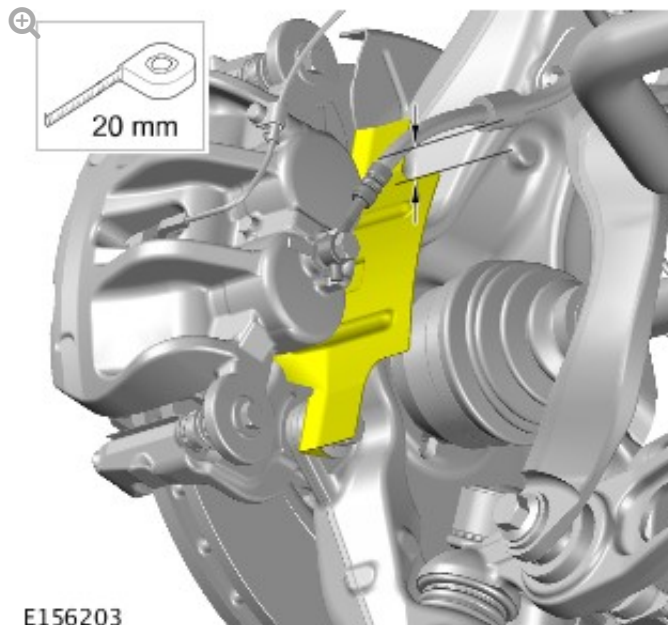

6. Install the front wheel.
Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).
7. Depress the brake pedal several times, check the fluid level in the brake fluid reservoir and top-up with brake fluid if necessary.