

2016.0 RANGE ROVER (LG), 206-03

FRONT DISC BRAKE

**BRAKE PADS - VEHICLES
WITH: HIGH PERFORMANCE
BRAKES** (G1509845)

REMOVAL AND INSTALLATION

70.40.02	SHOES/PADS - FRONT - SET - RENEW	ALL DERIVATIVES	0.6	USED WITHINS	+
70.40.02.36	SHOES/PADS - FRONT - SET - RENEW - BREMBO/SPORTS BRAKES FITTED	ALL DERIVATIVES	0.7	USED WITHINS	+
70.40.03	SHOES/PADS - REAR - SET - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+

REMOVAL

WARNINGS:

- Brake pads must be renewed in axle sets only. Failure to follow this instruction may result in braking efficiency being impaired.
- If the brake pad wear warning light has been activated, a new brake pad wear sensor must be installed.

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Left illustration shown, right is similar.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

CAUTION:

Do not allow the wheel to contact the brake cooling ducts when removing and installing.


Remove the front wheels and tires.

Refer to: [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).

3.

NOTE:

If Equipped.

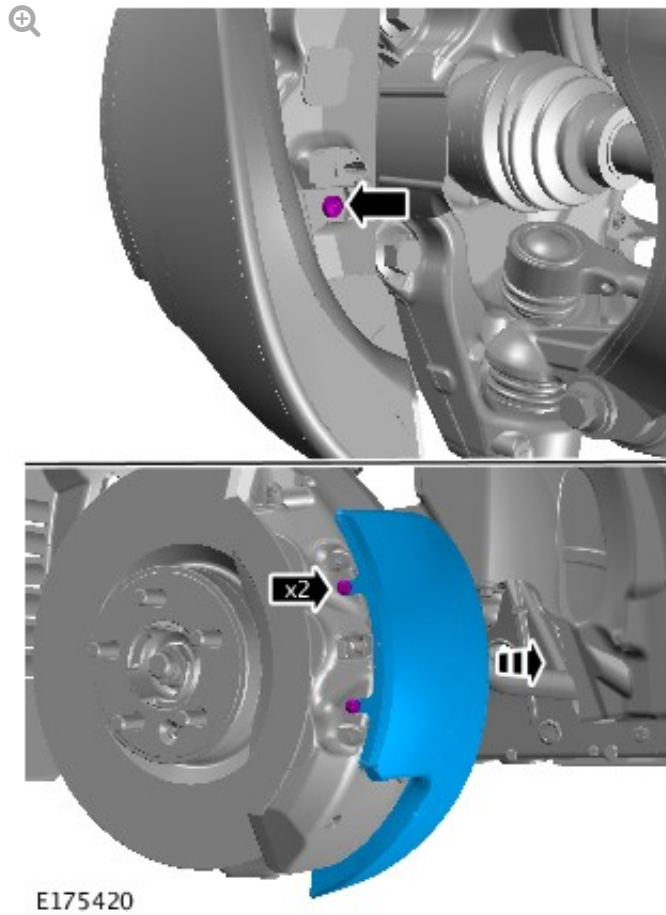


4.

CAUTION:

The brake pad wear indicator sensor is easily damaged. Do not use a lever to remove the sensor. Use fingers only.

NOTE:

Left side only.

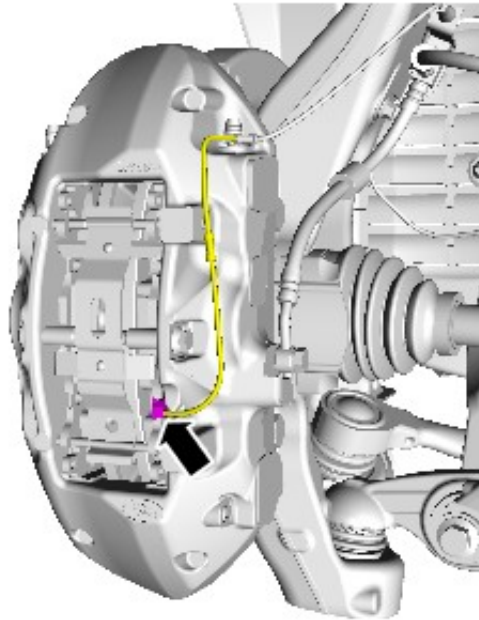


E173117

Inspect the brake pad wear sensor for signs of wear or damage.
Install a new sensor if necessary.

5.

NOTES:

- Note the orientation of the brake pads.
- Note the orientation of the anti-rattle spring prior to removal.

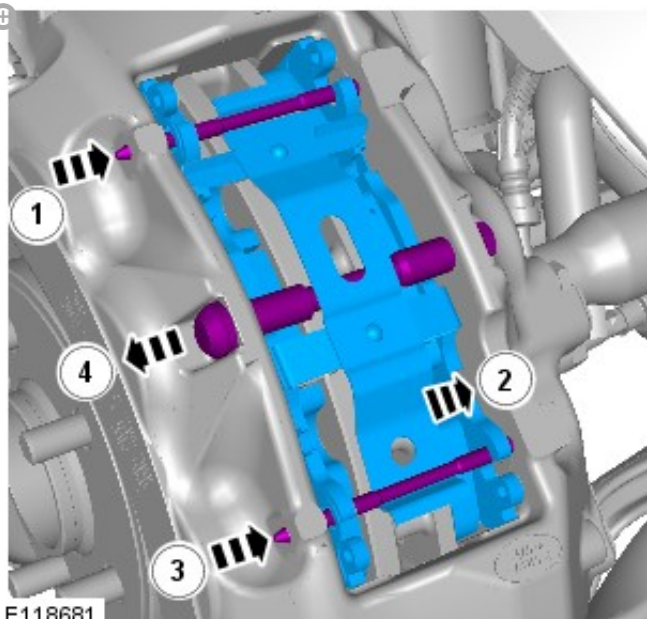

E118681

6. Repeat the above step for the other side.

INSTALLATION

- 1.

WARNING:

Do not use compressed air to clean brake components. Dust from friction materials can be harmful if inhaled.

Clean the components.

2. Inspect the caliper piston seals for damage.

- 3.

CAUTIONS:

- Check the brake fluid reservoir level before pushing the piston back, failure to follow this instruction may result in damage to the vehicle.
- As the piston is pushed back into the caliper housing, the brake fluid level in the reservoir will rise. Do not allow the reservoir to overflow.

Press the pistons into the caliper housing.

4. Repeat the above process for the other 3 pistons.

- 5.

CAUTION:

Do not apply grease to the piston contact area.



E160161

Apply Molykote CU7439 plus to the areas indicated on the brake pads.

6.




E173095

Carefully remove the brake pad backing.

7.

NOTES:

- Make sure a coating of Molykote CU7439+ is applied to the brake pad locking pins.
- Make sure the brake pads are installed in the correct orientation.
- Make sure the anti-rattle spring is installed in the correct orientation.

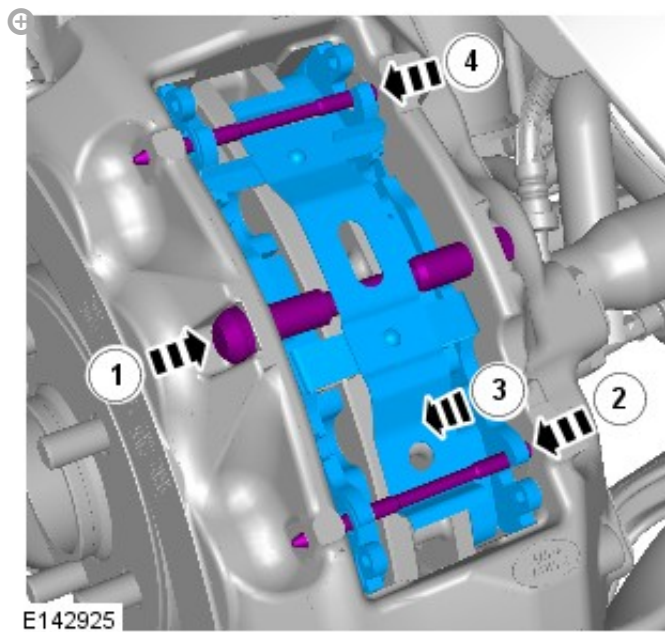


Torque: 30 Nm

8. Repeat the above procedure for the other side.

9.

NOTE:

Left side only.

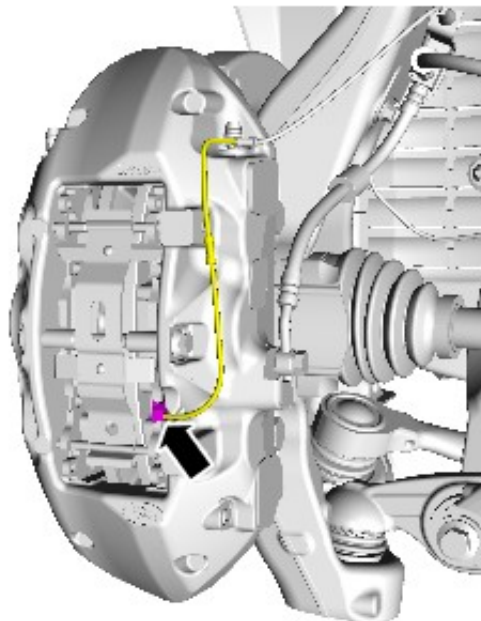


E173117

10.

NOTE:

If Equipped.

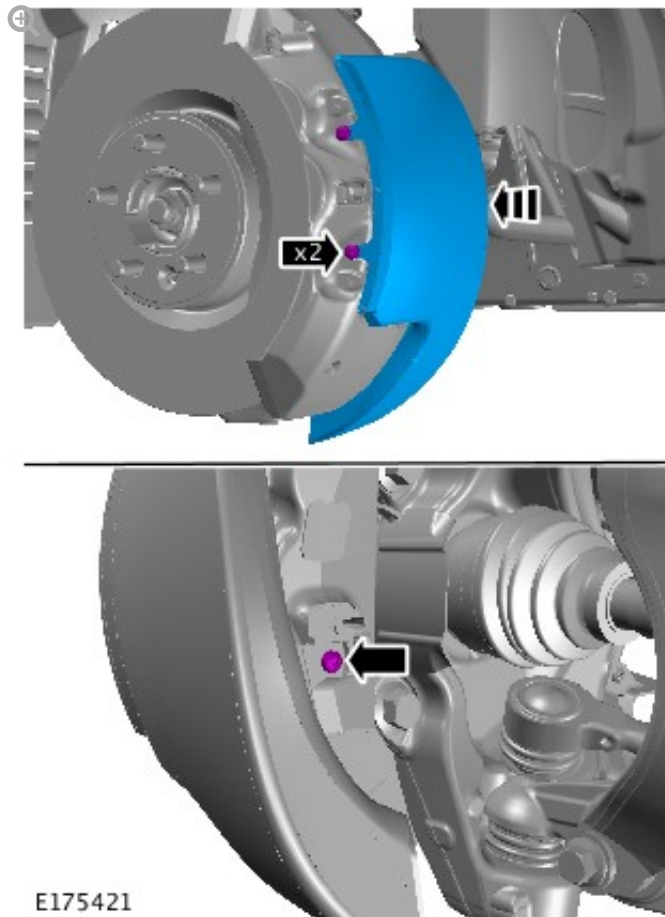

Torque: 9 Nm

11.

CAUTION:

Do not allow the wheel to contact the brake cooling ducts when removing and installing.

Install the front wheels and tires.

Refer to: [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).

12. Depress the brake pedal several times, check the fluid level in the brake fluid reservoir and top-up with brake fluid if necessary.

