

2016.0 RANGE ROVER (LG), 206-03

FRONT DISC BRAKE

BRAKE PADS – VEHICLES
WITH: STANDARD BRAKES

[G1606170]

REMOVAL AND INSTALLATION

70.40.02	SHOES/PADS - FRONT - SET - RENEW	ALL DERIVATIVES	0.6	USED WITHINS	+
70.40.02.36	SHOES/PADS - FRONT - SET - RENEW - BREMBO/SPORTS BRAKES FITTED	ALL DERIVATIVES	0.7	USED WITHINS	+
70.40.03	SHOES/PADS - REAR - SET - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 7	Renew Part	Brake caliper carrier bolts

REMOVAL

WARNING:

Brake pads must be renewed in axle sets only. Failure to follow this instruction may result in braking efficiency being impaired.

NOTES:

- The brake pad wear warning indicator sensor must be replaced each time the brake pads are serviced.
- Some variation in the illustrations may occur, but the essential information is always correct.
- LH illustration shown, RH is similar.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Remove the wheels and tires.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).


3.

CAUTION:

The brake pad wear indicator sensor is easily damaged. Do not use a lever to remove the sensor. Use fingers only.

NOTE:

Left side only.

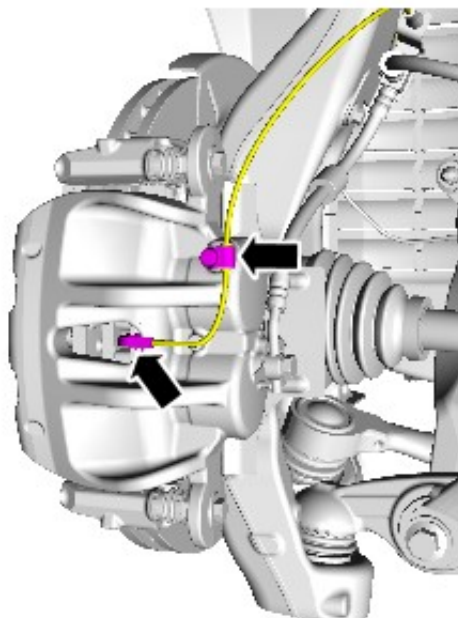


E173156

Inspect the brake pad wear sensor for signs of wear or damage.
Install a new sensor if necessary.

4.

CAUTION:

Discard the bolt.

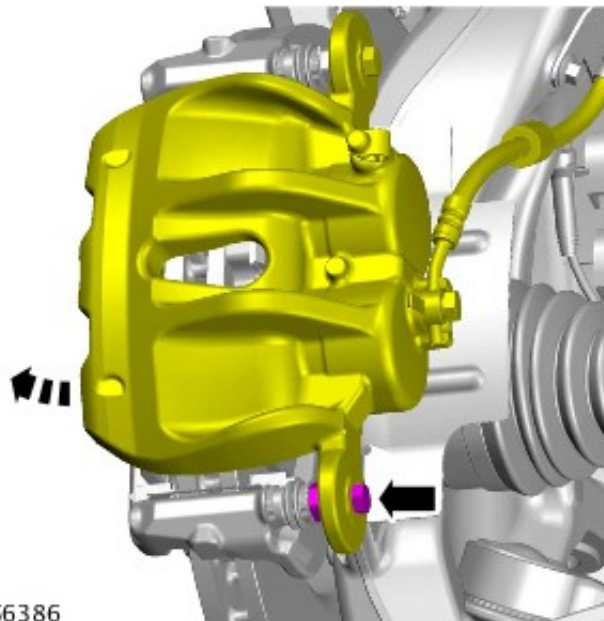


E156386

Torque: 35 Nm

5.

NOTE:

Note the orientation of the anti-rattle spring prior to removal.

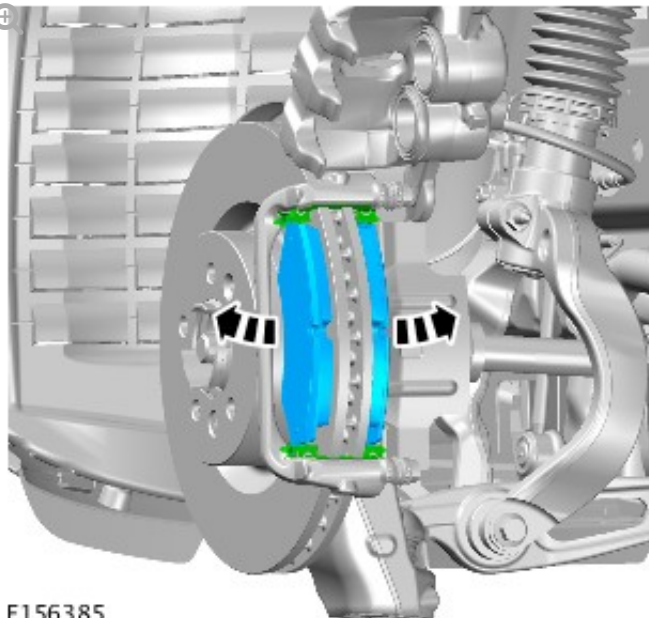

E156385


6. Repeat the above steps for the other side.
-

INSTALLATION

1.

WARNING:

Do not use compressed air to clean brake components. Dust from friction materials can be harmful if inhaled.

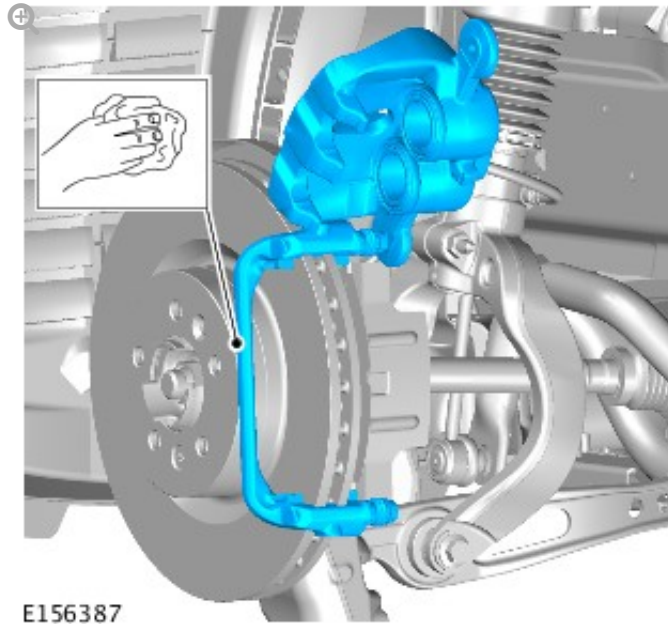


Clean the brake caliper housing and anchor plate using brake cleaning fluid.

2.

CAUTION:


Inspect the caliper piston and slide pin seals for damage.

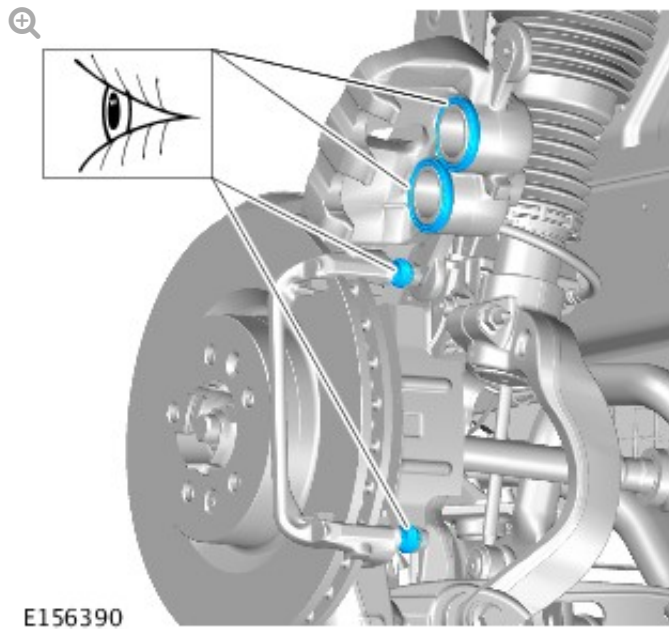

3.

CAUTIONS:

- Check the brake fluid reservoir level before pushing the piston back, failure to follow this instruction may result in damage to the vehicle.
- As the piston is pushed back into the caliper housing, the brake fluid level in the reservoir will rise. Do not allow the reservoir to overflow.

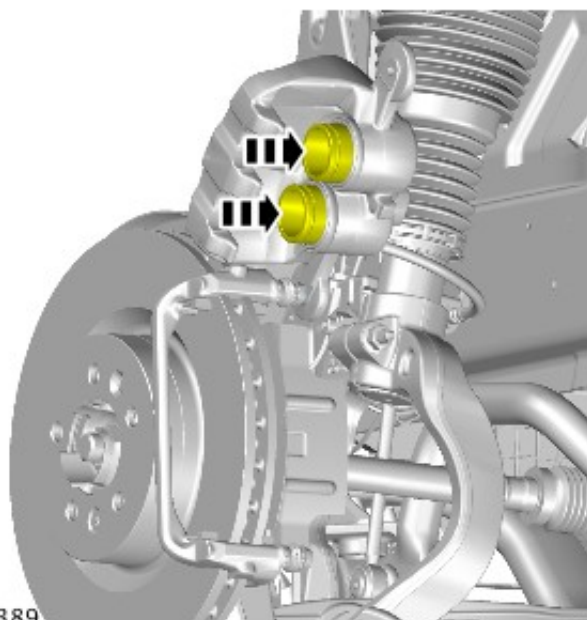


E156389

4.


NOTES:

- Apply the required quantity of grease meeting the correct specification.
- Make sure the anti-rattle spring is installed in the correct orientation.

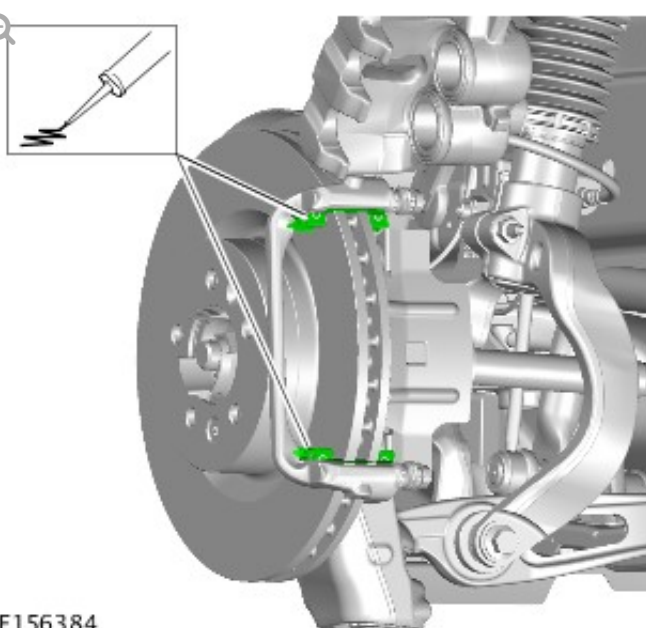

E156384

5.

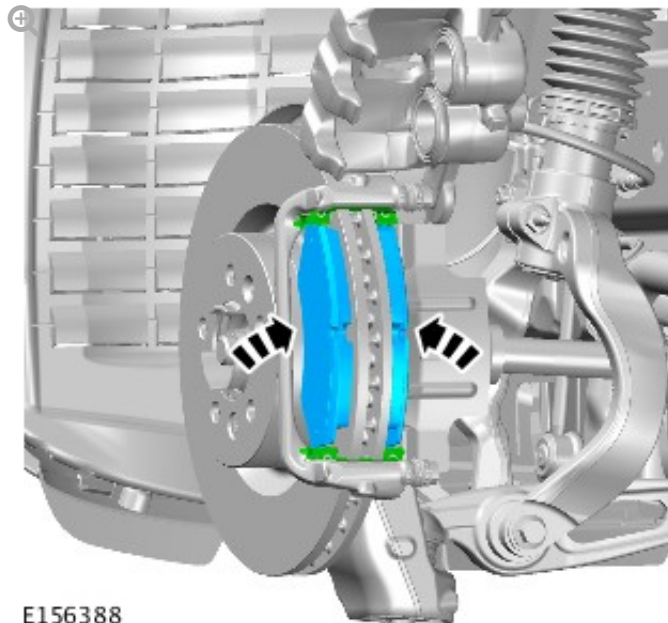


E156388

6.

CAUTIONS:

- If installed, the adhesive strips covering the outer brake pads must be removed before installation. Failure to follow this instruction may result in damage to the vehicle.
- Touching the adhesive surface will impair re-bonding.

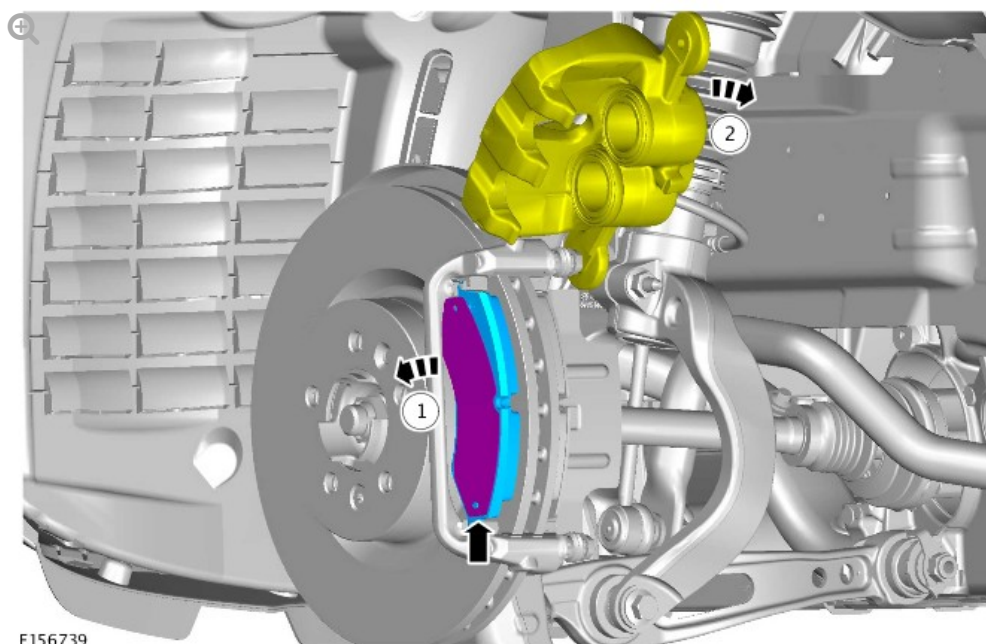


E156739

7.

CAUTIONS:

- Make sure that new bolts are installed.
- Make sure that the brake hose is not twisted and is correctly located.

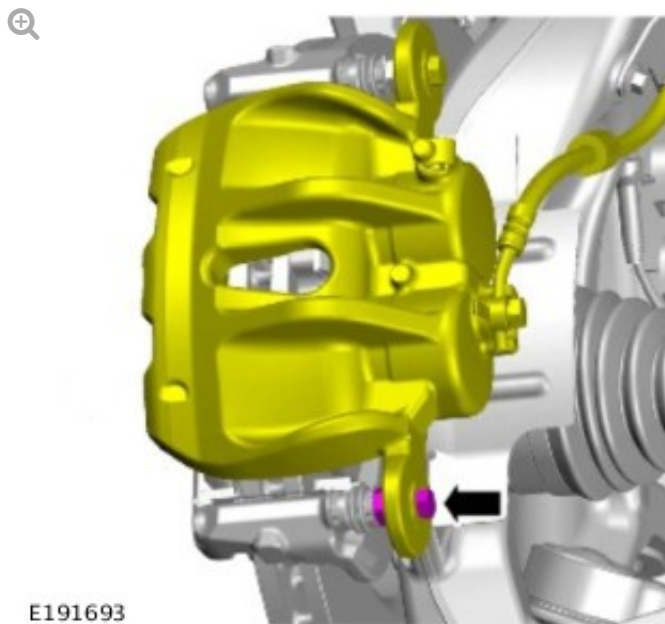

Renew Part: *Brake caliper carrier bolts.*


Torque: 35 Nm

8. Repeat the above procedure for the other side.

9.

NOTE:

Left side only.

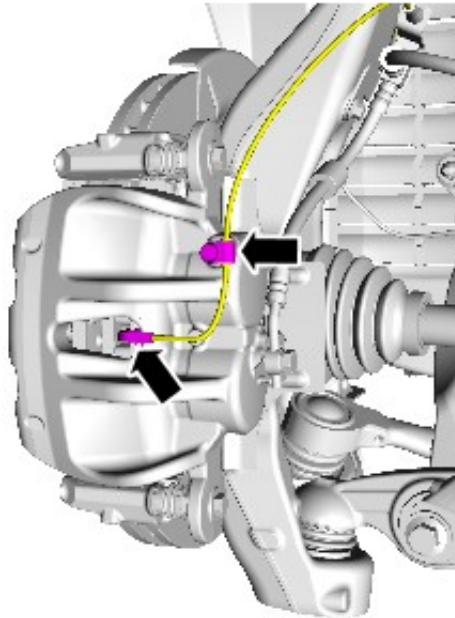

E173156

10. Install the front wheels and tires.
Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).
11. Depress the brake pedal several times, check the fluid level in the brake fluid reservoir and top-up with brake fluid if necessary.