

2016.0 RANGE ROVER (LG), 206-06

HYDRAULIC BRAKE ACTUATION

BRAKE FLUID RESERVOIR

[G1509079]

REMOVAL AND INSTALLATION

70.25.31	RESERVOIR - BRAKE FLUID - RENEW	ALL DERIVATIVES	0.9	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Brake master cylinder seal

REMOVAL


CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.


NOTES:

- Removal steps in this procedure may contain installation details.
- LHD illustration shown, RHD is similar.
- Some components shown removed for clarity.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.

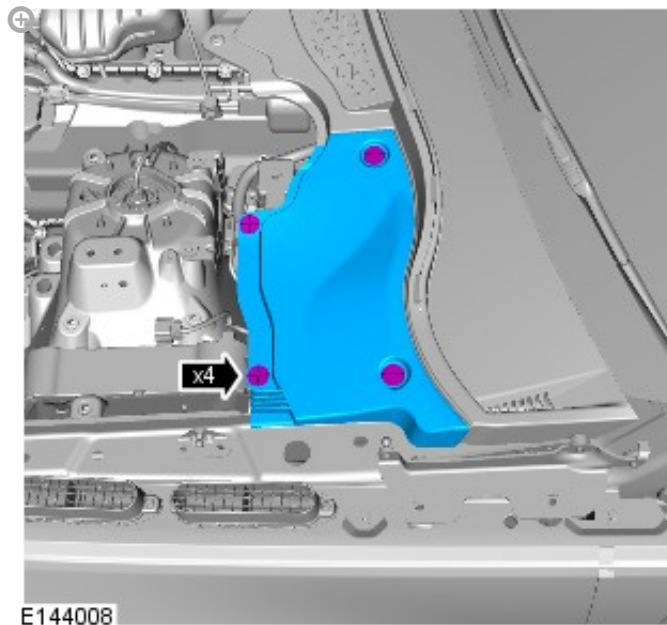

2.

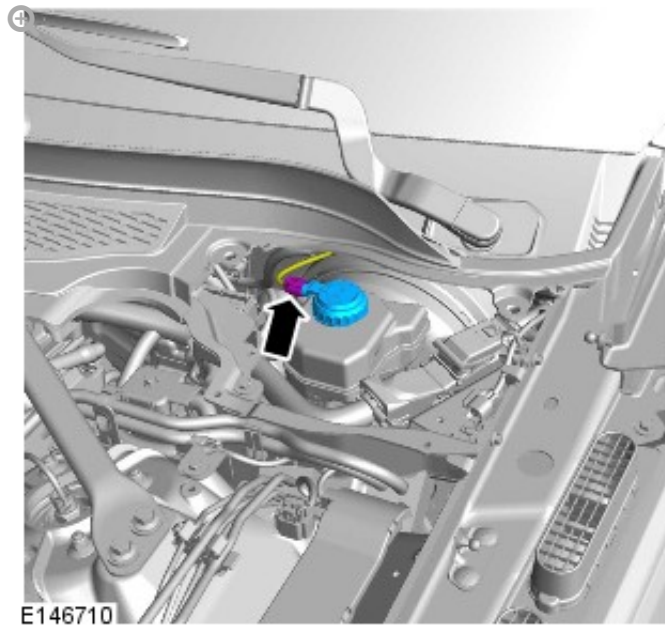


3. Using a suitable suction device drain the brake fluid reservoir.

4.

CAUTION:


Be prepared to collect escaping fluids.

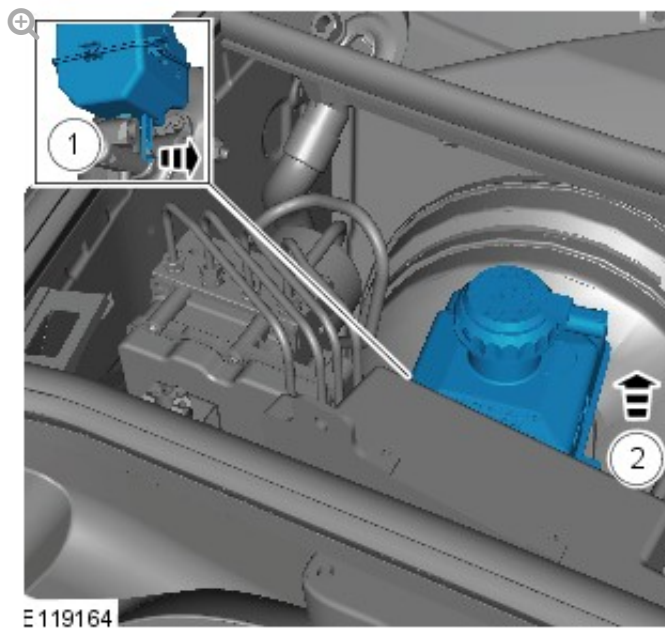

5.

CAUTION:

Discard the seals.

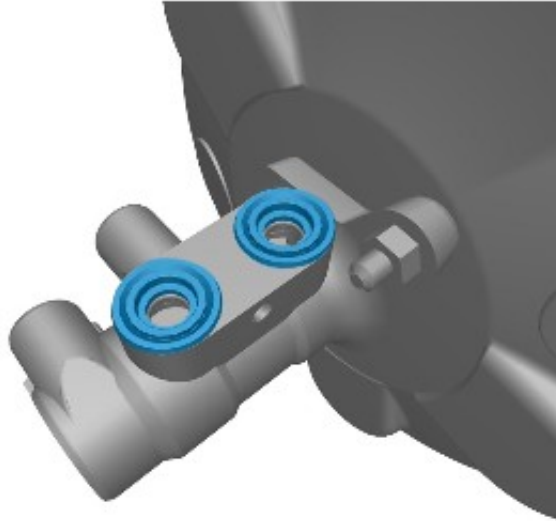

E132911

INSTALLATION

1.

NOTE:

Install new seals.

To install, reverse the removal procedure.

Renew Part: [Brake master cylinder seal](#).

2. Bleed the brake system.

Refer to: [Brake System Bleeding - Vehicles With: Standard Brakes](#)
(206-00 Brake System - General Information, General Procedures).

