

2016.0 RANGE ROVER (LG), 206-06

HYDRAULIC BRAKE ACTUATION

BRAKE MASTER CYLINDER -
RHD (G1509081)

REMOVAL AND INSTALLATION

70.30.08	CYLINDER - MASTER - TANDEM - RENEW	ALL DERIVATIVES	1.3	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 2	Renew Part	Brake master cylinder nuts
Removal Step 3	Renew Part	Brake master cylinder seal

REMOVAL

NOTE:


Removal steps in this procedure may contain installation details.

1. Refer to: [Brake Fluid Reservoir](#) (206-06 Hydraulic Brake Actuation, Removal and Installation).

2.

CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

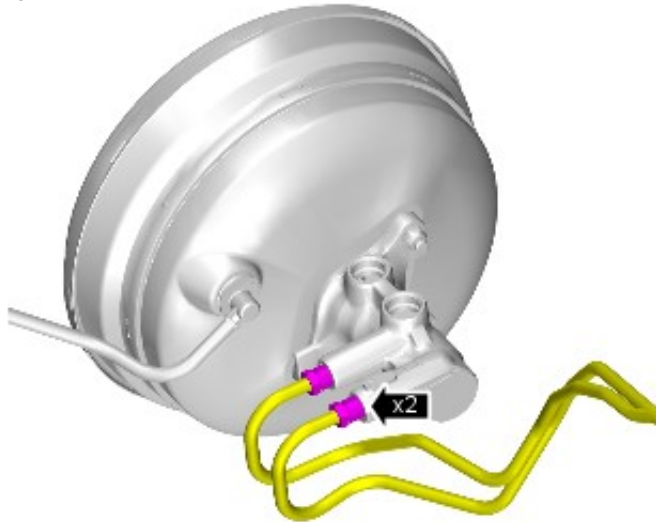

E147313

Renew Part: *Brake master cylinder nuts.*

Torque: **16 Nm**


3.

CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

NOTES:

- Discard the retaining nuts.
- Remove and discard the O-ring seal.
- Take extra care not to damage the component.

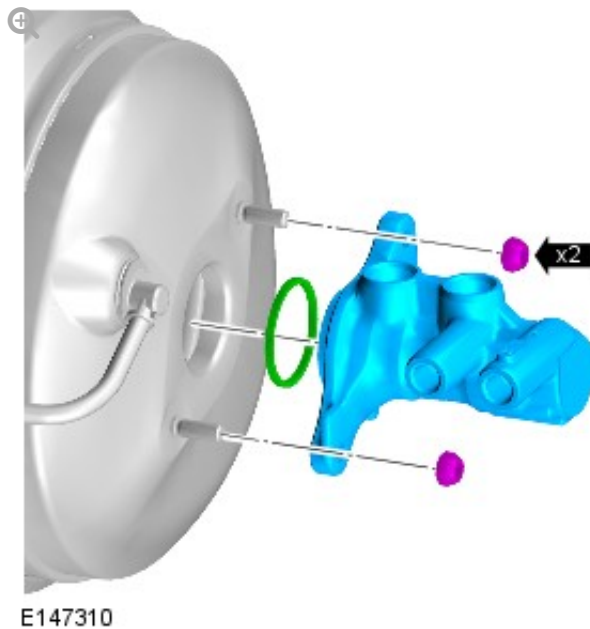

Renew Part: [Brake master cylinder seal](#).

Torque: **23 Nm**

INSTALLATION

1.

WARNING:

Make sure that new nuts are installed.

NOTES:

- Install a new O-ring seal.
- Remove and discard the blanking caps.
- Make sure that the seal is correctly positioned. Failure to follow this instruction may result in damage to the vehicle.

To install, reverse the removal procedure.

2. Refer to: [Brake System Bleeding - Vehicles With: Standard Brakes](#)
(206-00 Brake System - General Information, General Procedures).

3. Refer to: [Brake System Bleeding - Vehicles With: High Performance Brakes](#) (206-00 Brake System - General Information, General Procedures).