

2016.0 RANGE ROVER (LG), 206-06

HYDRAULIC BRAKE ACTUATION

BRAKE PEDAL AND BRACKET

[G1509082]

REMOVAL AND INSTALLATION


70.35.01	PEDAL - BRAKE - RENEW	ALL DERIVATIVES	0.4	USED WITHINS	+
----------	-----------------------------	--------------------	-----	-----------------	---

REMOVAL


NOTES:

- Removal steps in this procedure may contain installation details.
- LHD illustration shown, RHD is similar.

1.

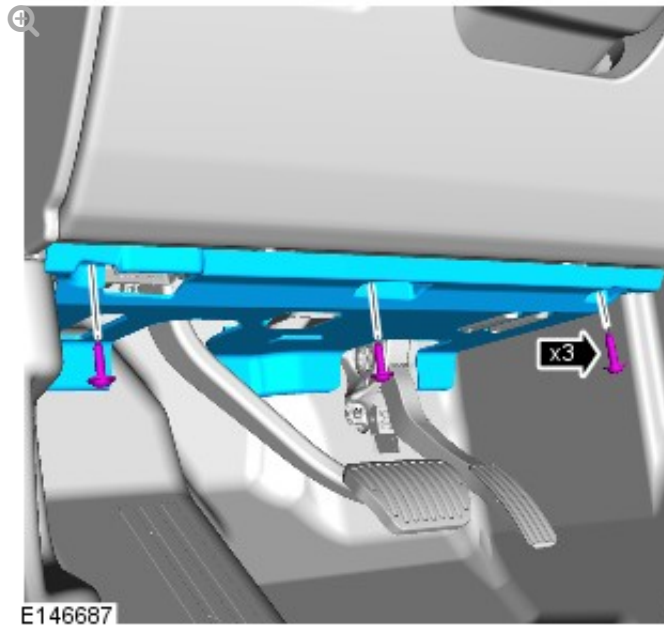


2.

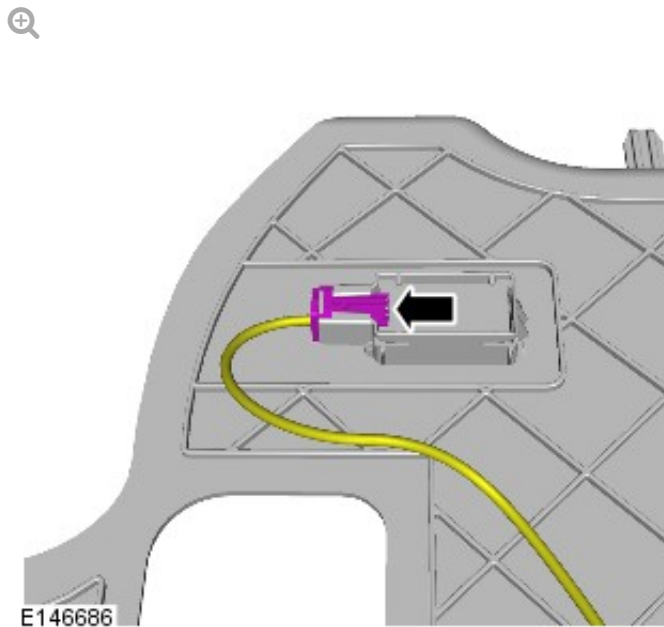


3.

CAUTION:

The brake pedal MUST NOT be depressed during this operation. Failure to follow this instruction will result in damage to the stoplamp switch.

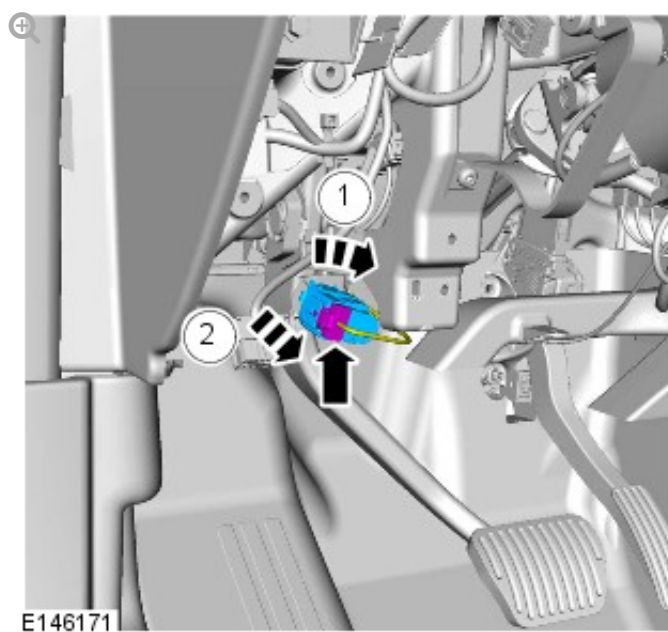

4.

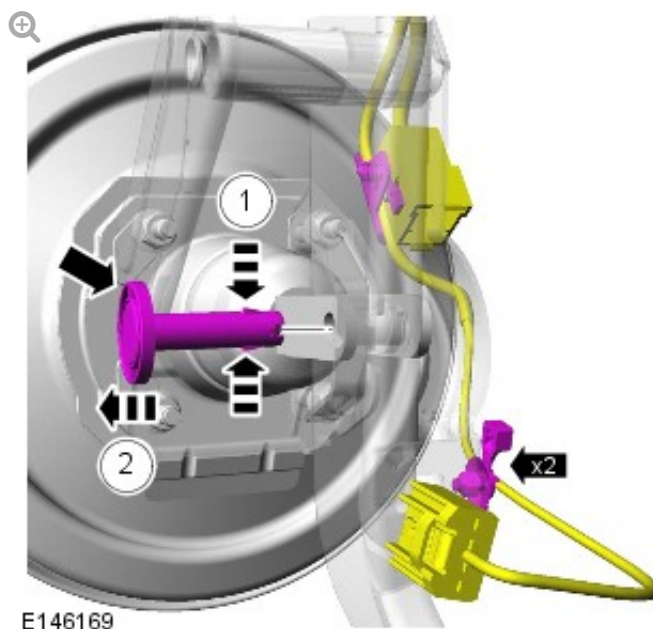

5.

CAUTION:

Discard the nuts.



E146170


6.

CAUTION:

Remove and discard the shim.

NOTE:

If equipped.

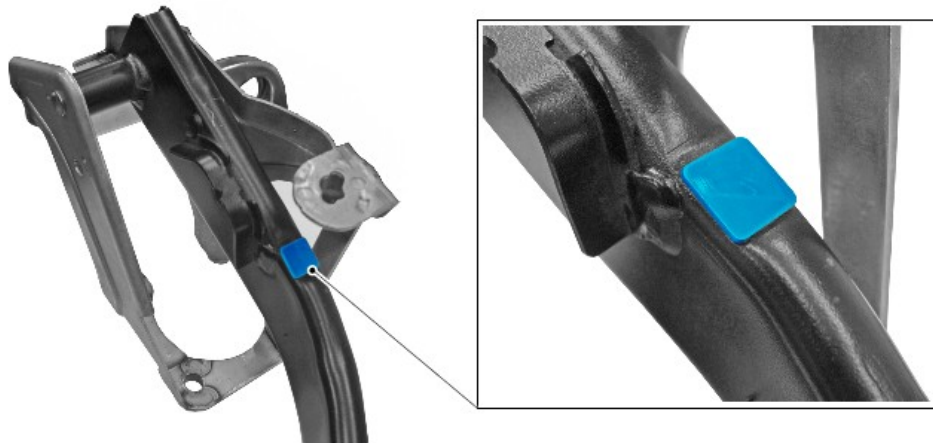

E174250

INSTALLATION

1.

CAUTION:


Make sure that new nuts are installed.



E146170

Torque: 26 Nm


2.

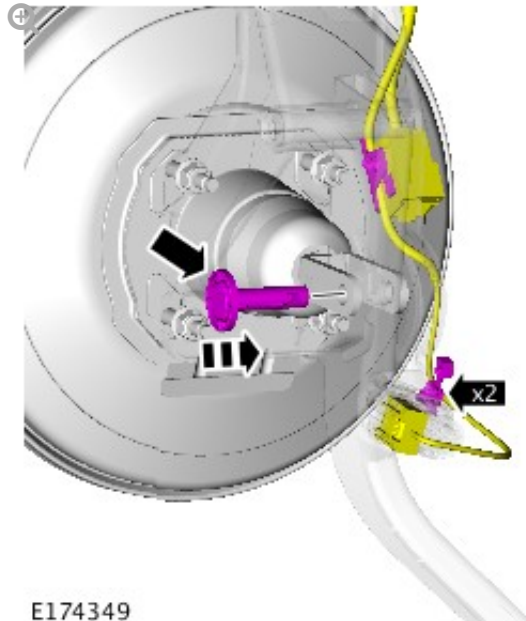


3.

CAUTIONS:

- The brake pedal **MUST NOT** be depressed during this operation. Failure to follow this instruction will result in damage to the stoplamp switch.
- Make sure that excessive force is not used when installing the stoplamp switch. Failure to follow this instruction may result in damage to the stoplamp switch.

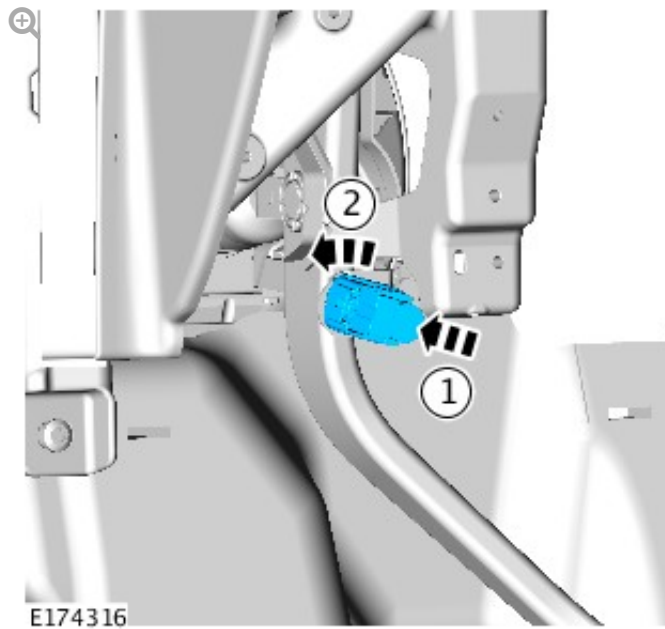


4.

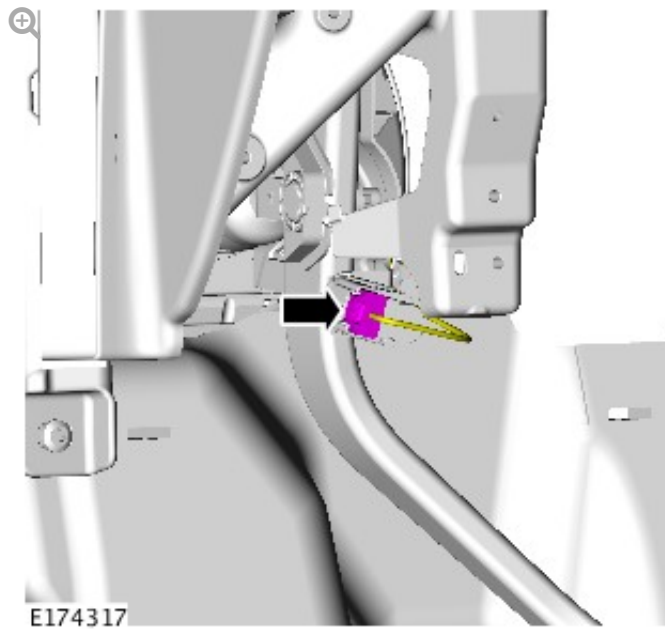

5.


CAUTIONS:

- Make sure that the area around the component is clean and free of foreign material.
- Install a new shim.

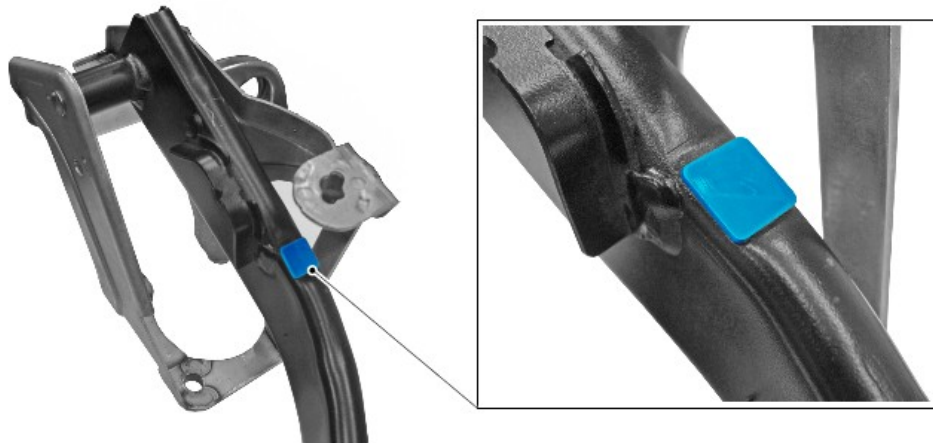

E174250

6.

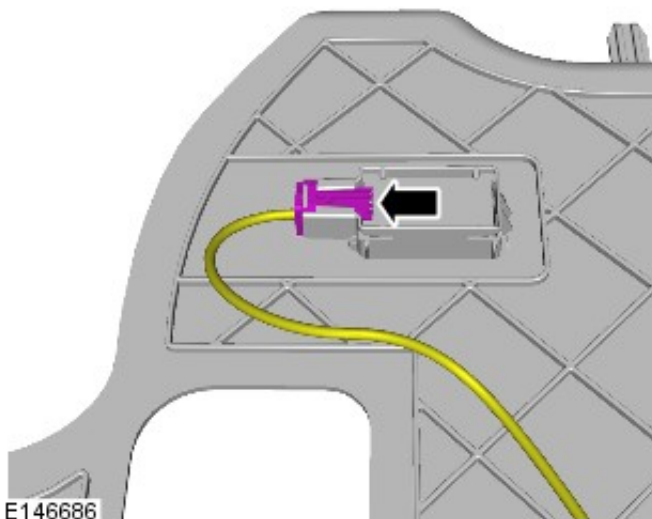

E146686

7.

