

2016.0 RANGE ROVER (LG), 206-05

## PARKING BRAKE AND ACTUATION

# PARKING BRAKE RELEASE ACTUATOR (G1509078)

### REMOVAL AND INSTALLATION

#### PART(S)

| STEP                | REPLACE PART / RENEW PART | PART NAME                                |
|---------------------|---------------------------|------------------------------------------|
| Installation Step 1 | Renew Part                | Electric park brake actuator fitting kit |

### REMOVAL

#### NOTES:

- Removal steps in this procedure may contain installation details.
- Some components shown removed for clarity.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Connect the diagnostic tool and set the electronic park brake (EPB) to the maintenance position.
2. Disconnect the battery ground cable.  
Refer to: [Specifications](#) (414-00 Battery and Charging System -

3.

**WARNING:**

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

4.

Remove the rear wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

5.

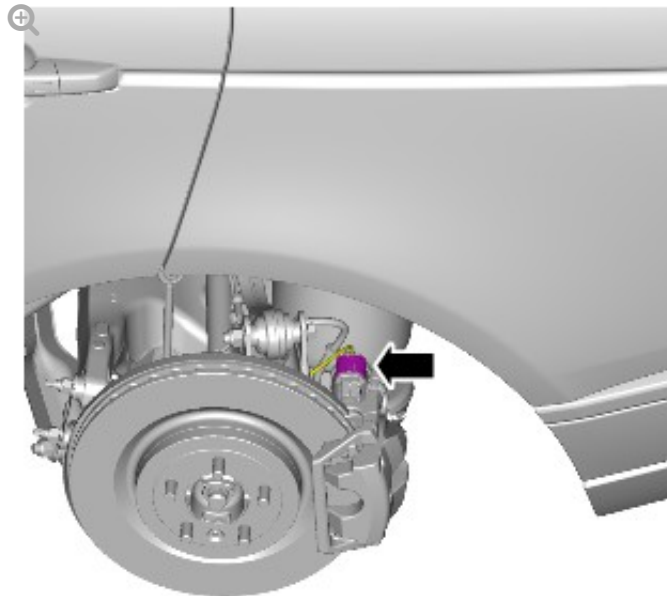


E146982

6.

**NOTE:**

Remove and discard the retaining bolts and O-ring seal.

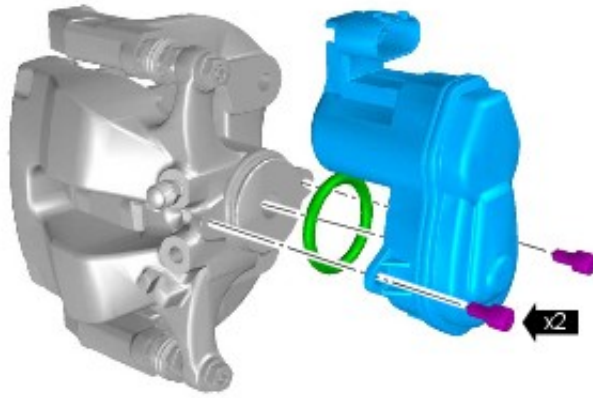

E146983

*Torque: 11 Nm*

---

## INSTALLATION

1.

### NOTE:

New retaining bolts and O-ring seal are to be installed.

To install, reverse the removal procedure.

Renew Part: [Electric park brake actuator fitting kit](#).

2. Calibrate the electric parking brake (EPB) using the diagnostic tool.