

2016.0 RANGE ROVER (LG), 206-07

POWER BRAKE ACTUATION

BRAKE BOOSTER – LHD (G1772260)

REMOVAL AND INSTALLATION

70.50.01	BRAKE BOOSTER ASSEMBLY - RENEW	RIGHT HAND DRIVE	1.7	USED WITHINS	+
----------	---	------------------------	-----	-----------------	---


REMOVAL

NOTE:


Removal steps in this procedure may contain installation details.

1. Refer to: Secondary Bulkhead Panel LH (501-02, Removal and Installation).
2. Refer to: Brake Master Cylinder - LHD (206-06 Hydraulic Brake Actuation, Removal and Installation).


3.

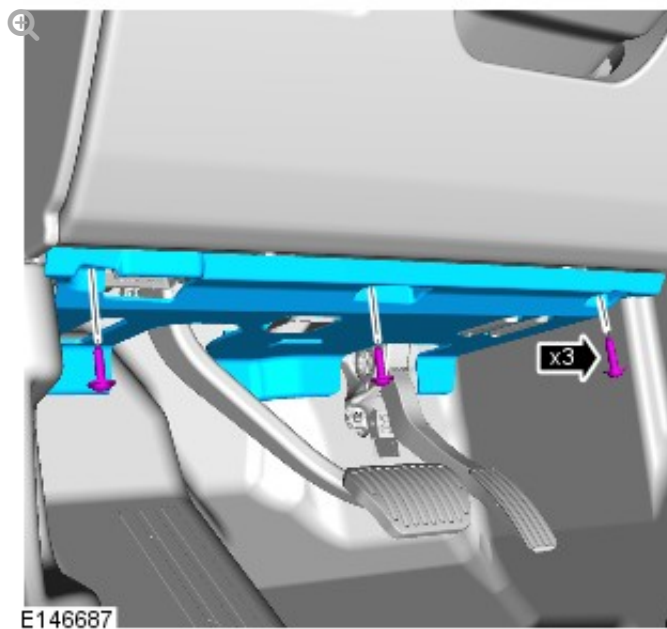

4.

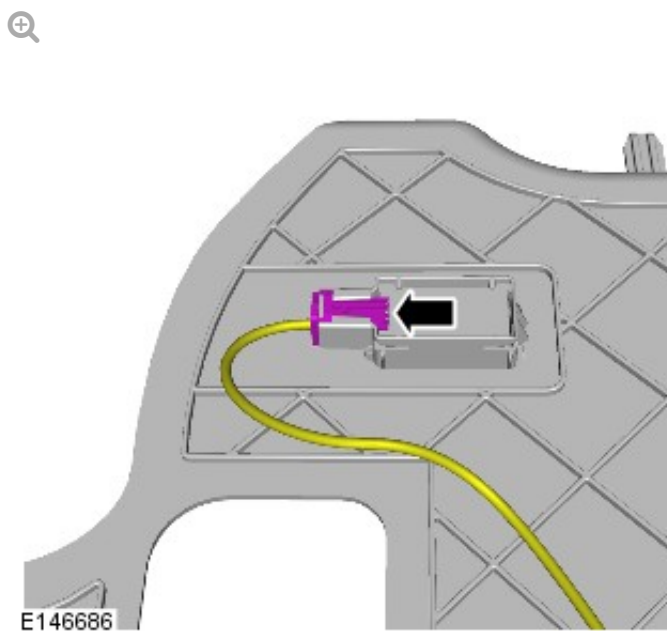


5.

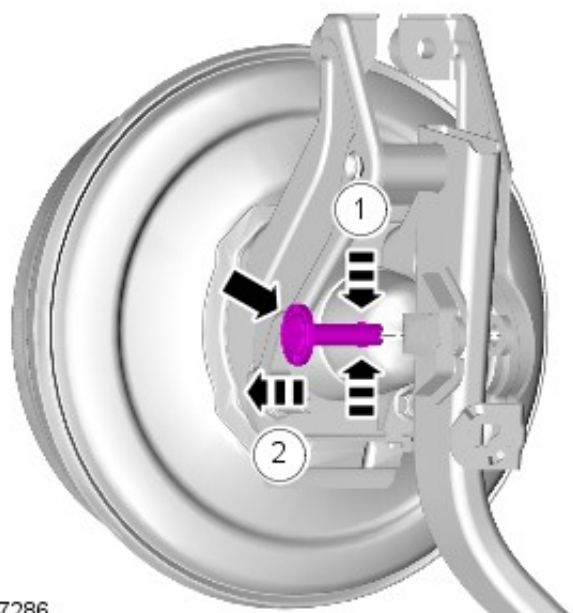

E147286


6.

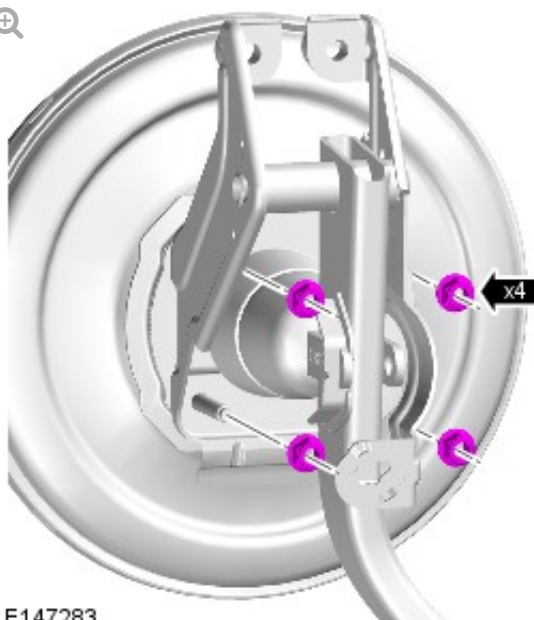

E147283


Torque: 25 Nm

7.

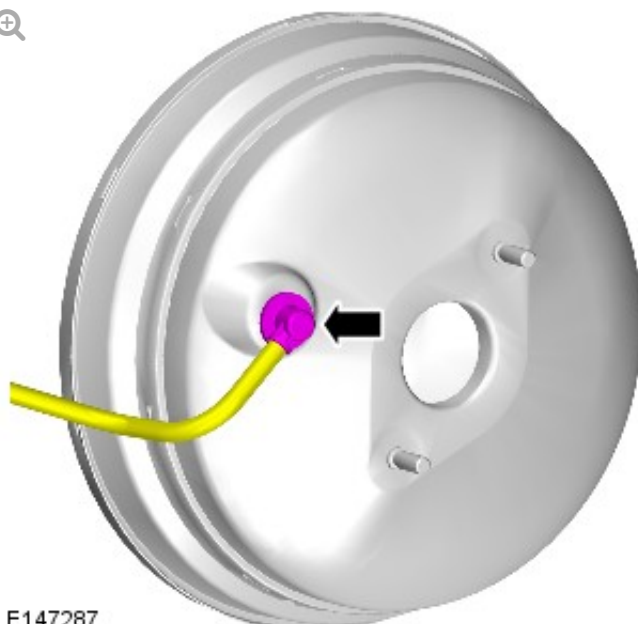

E147287


8.

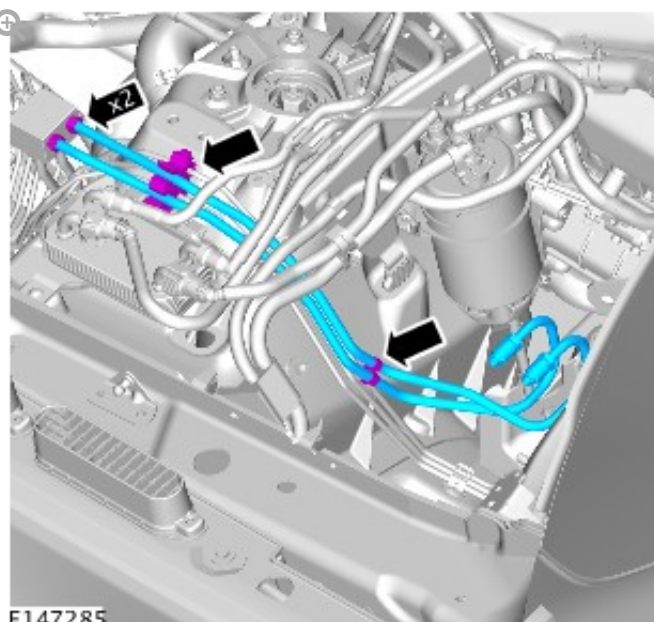

E147285

Torque: 16 Nm

9.

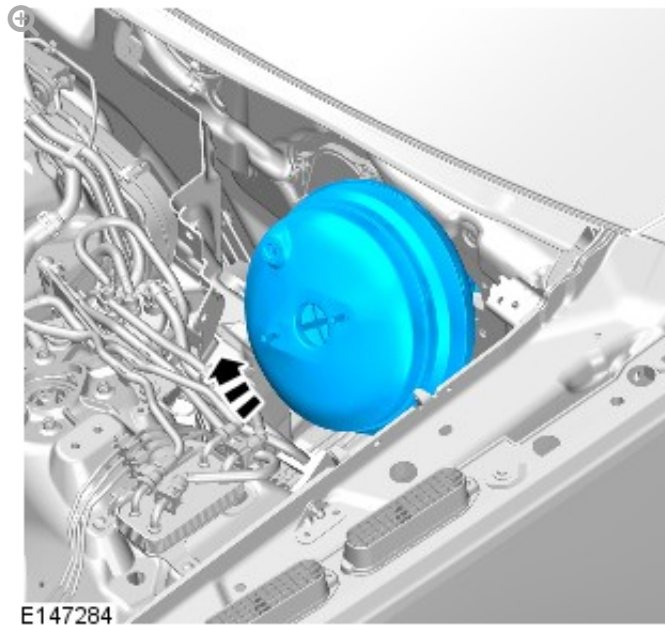

INSTALLATION



All vehicles

1. To install, reverse the removal procedure.



Vehicles with standard brakes

2. Refer to: Brake System Bleeding - Vehicles With: Standard Brakes (206-00 Brake System - General Information, General Procedures).



Vehicles with high performance brakes

3. Refer to: Brake System Bleeding - Vehicles With: High Performance Brakes (206-00 Brake System - General Information, General Procedures).

