

2016.0 RANGE ROVER (LG), 206-07

POWER BRAKE ACTUATION

BRAKE VACUUM PUMP –
TDV6 3.0L DIESEL (G1509087)

REMOVAL AND INSTALLATION

70.50.19	VACUUM PUMP – BRAKE BOOSTER – RENEW	3000 CC, TDV6	1.2	USED WITHINS	+
----------	---	------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 8	Renew Part	Brake vacuum pump O-ring seal

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.


WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).

3.

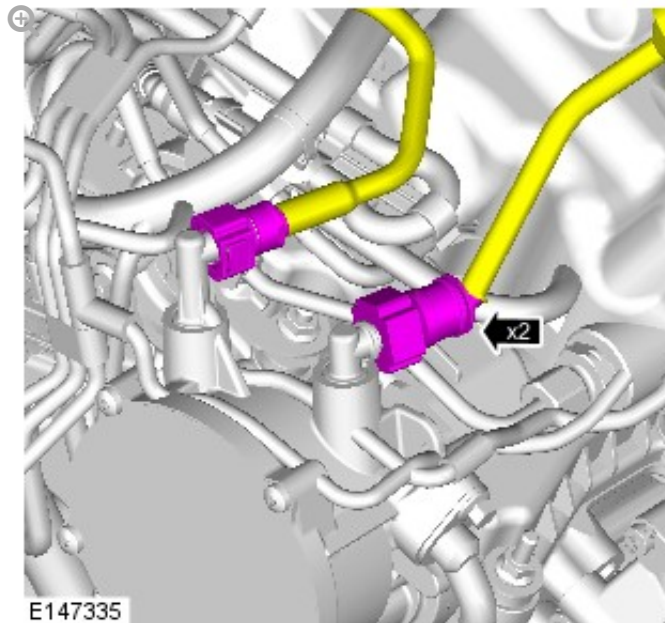


4.

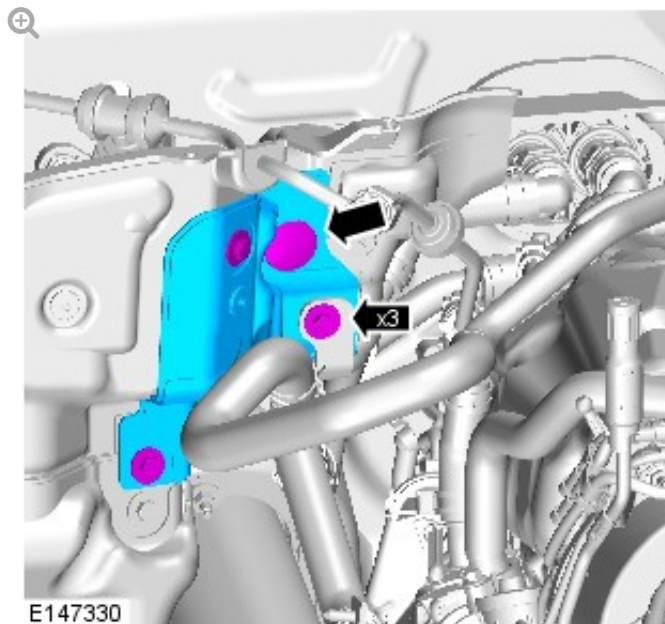


Torque: 6 Nm


5.

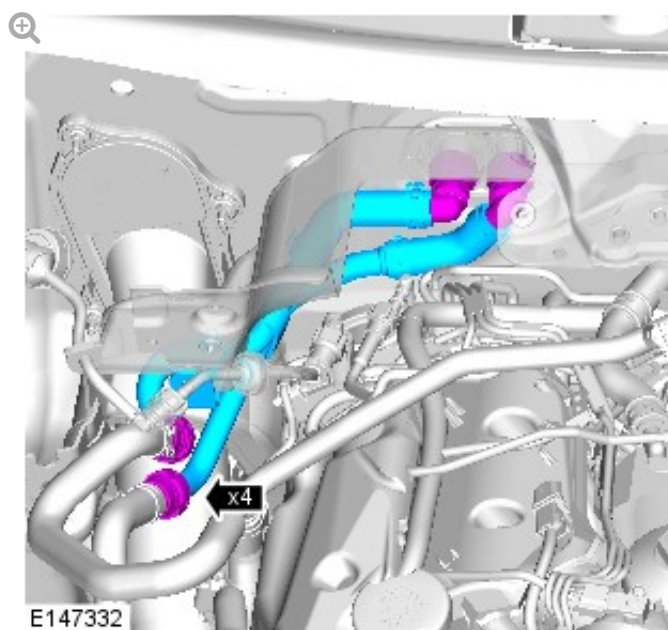

6.

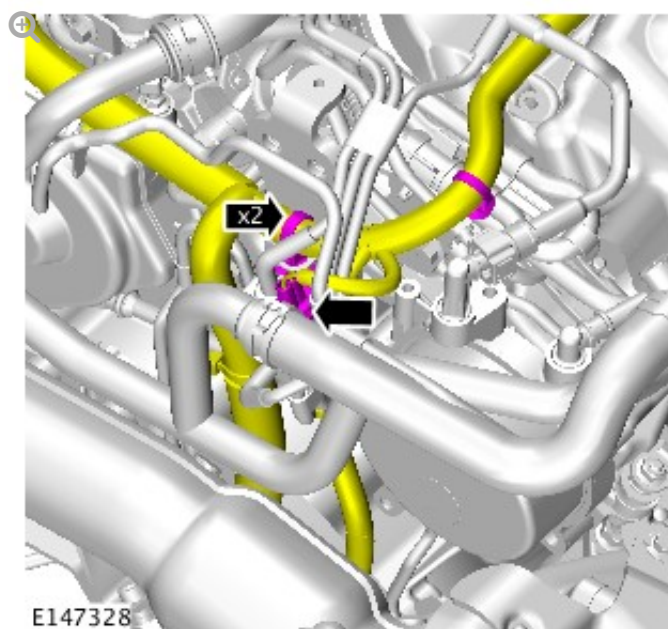


7.

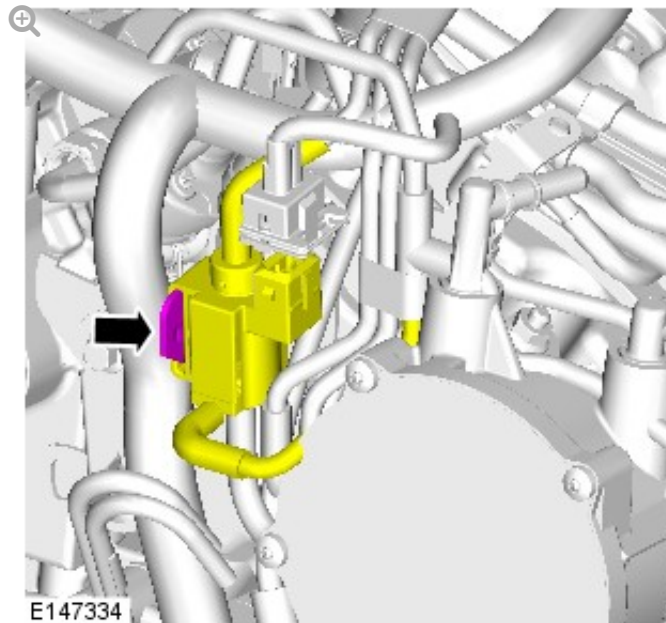

8.

NOTE:


Remove and discard the O-ring seal.

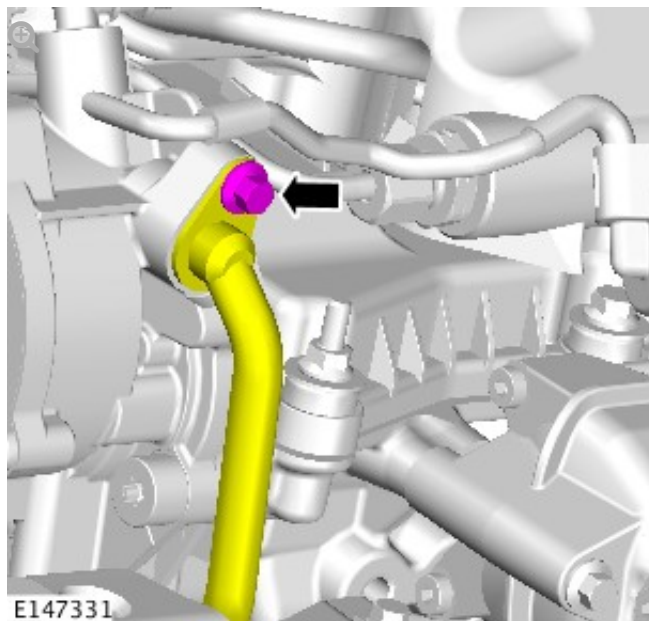

Renew Part: *Brake vacuum pump O-ring seal.*


Torque: 10 Nm

9.

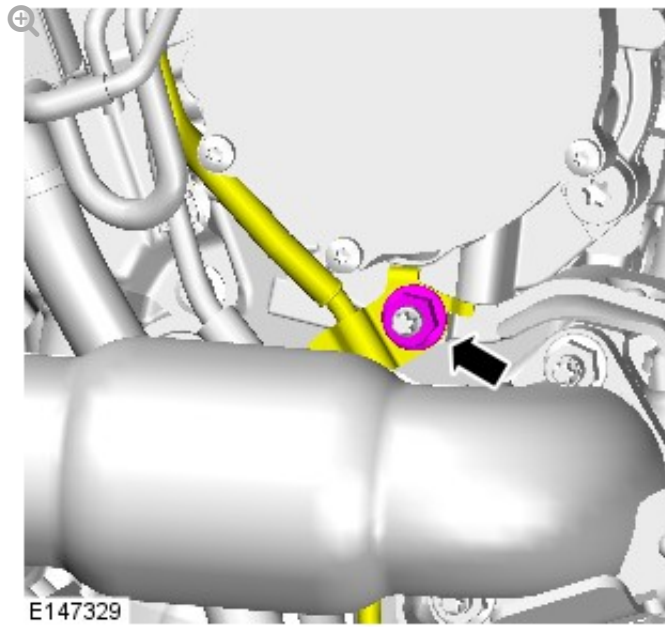


Torque: 23 Nm

10.

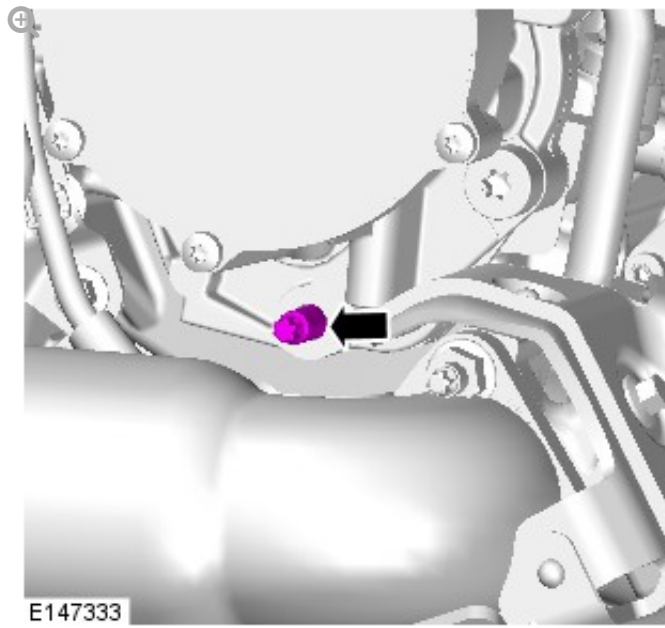


Torque: 13 Nm

11.

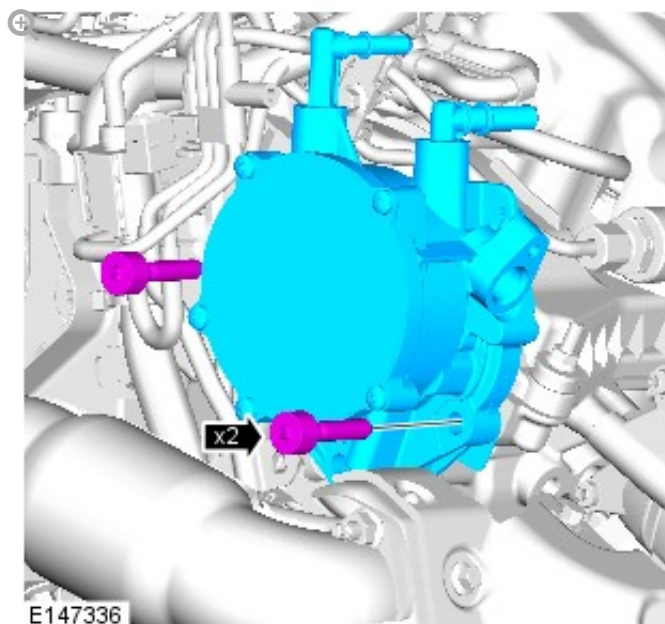

Torque: 23 Nm

12.

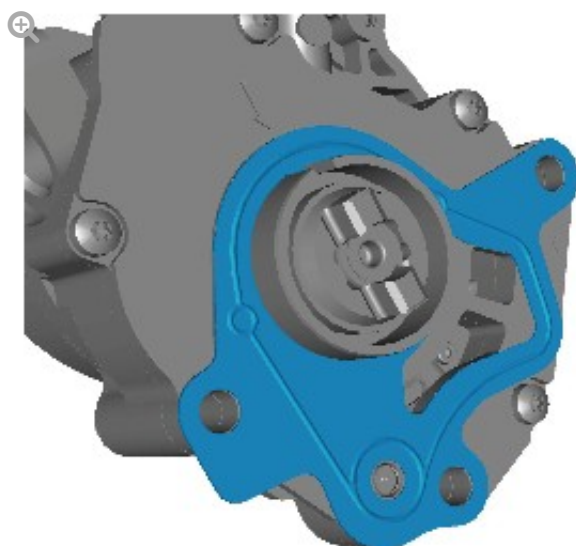


INSTALLATION

1.

NOTES:

- Install a new gasket.
- Install a new O-ring seal.
- Apply silicone gasket sealant or equivalent meeting Land Rover specification.
- The application of sealant must be 10 mm square in two places. Install the brake vacuum pump immediately after applying the sealant.
- The brake vacuum pump should be fitted directly to the engine without smearing the sealant.
- Make sure that the drive coupling is aligned with camshaft coupling.

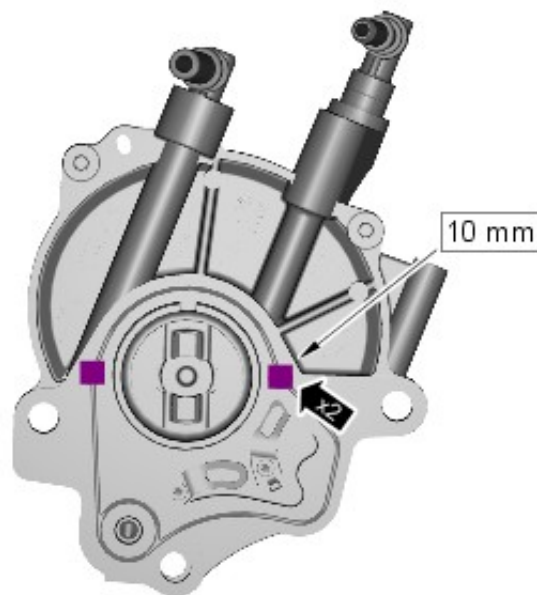

E116820

To install, reverse the removal procedure.