

2016.0 RANGE ROVER (LG), 206-04

REAR DISC BRAKE

BRAKE CALIPER (G1509070)

REMOVAL AND INSTALLATION					
70.55.25	HOUSING ASSEMBLY - BRAKE CALIPER - REAR - EACH - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+

GENERAL EQUIPMENT

EQUIPMENT NAME
Land Rover diagnostic equipment

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Electric park brake actuator O-ring seal

REMOVAL

NOTE:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1. Connect the diagnostic tool and set the electronic park brake (EPB) to the maintenance position.

General Equipment: [Land Rover diagnostic equipment](#)

- 2.

NOTE:

This step is only required if the diagnostic tool is not available.

Refer to: [Electronic Parking Brake Service Mode Activation and Deactivation](#) (206-05 Parking Brake and Actuation, General Procedures).

- 3.

NOTE:

This step is only required if the vehicle has no battery power.

Refer to: [Electronic Parking Brake Release When the Vehicle Has No Electrical Power](#) (206-05 Parking Brake and Actuation, General Procedures).

- 4.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


5. Remove the wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

- 6.

NOTE:

Right side only.

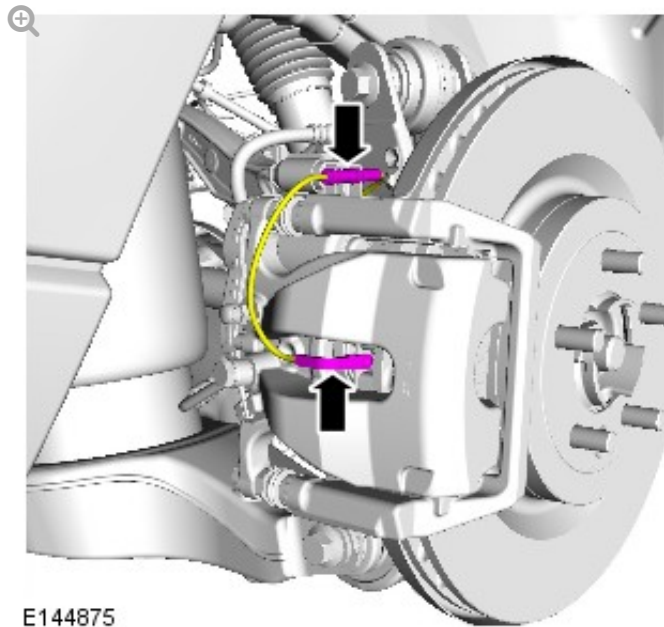

Remove the brake pad wear indicator sensor.


- 7.

WARNING:

Be prepared to collect escaping fluids.


CAUTION:

- Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean.
- Using a suitable hose clamp, clamp the brake hose prior to removal.

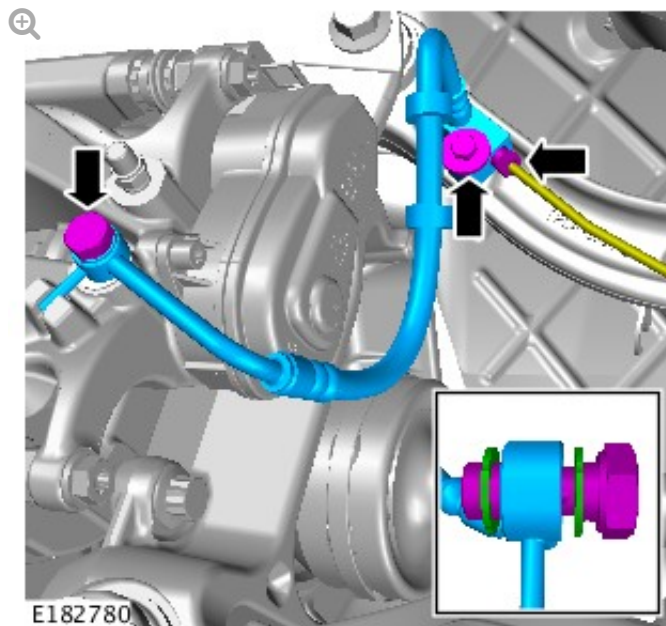

Remove the brake hose.

8.

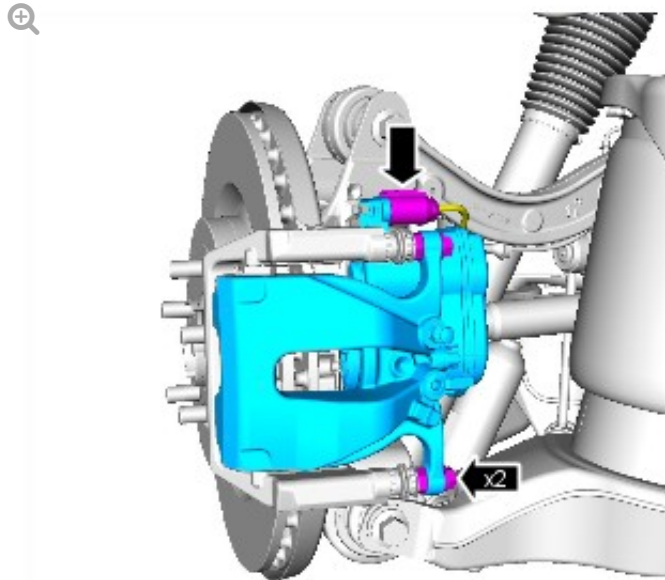

E144965

1. Disconnect the electrical connector.
2. Remove the brake caliper.


9.

CAUTION:

Discard the seal.

NOTE:

Do not disassemble further if the component is removed for access only.

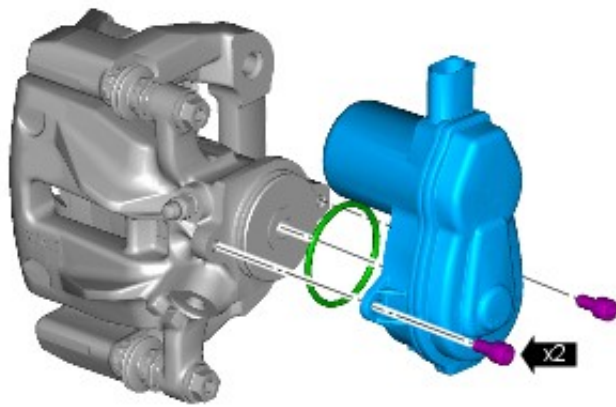

E132983

INSTALLATION


1.

CAUTION:

Install a new O-ring seal.

NOTE:


Only carry out this step if previously removed.

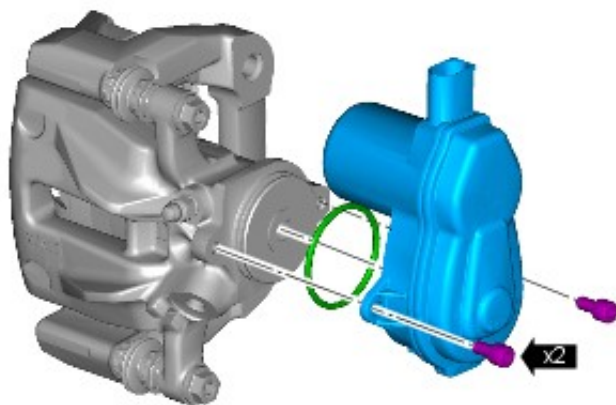

E132983

Renew Part: [Electric park brake actuator O-ring seal](#).


2.

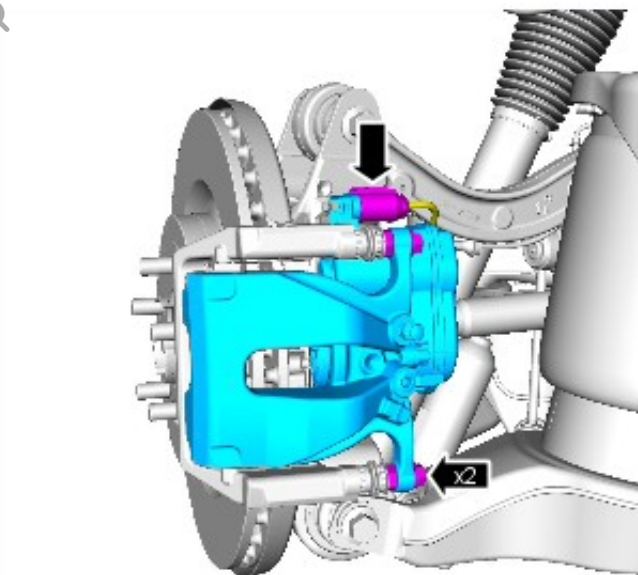

E144965

1. Install the brake caliper.
Torque: 35 Nm
2. Connect the electrical connector.

3.

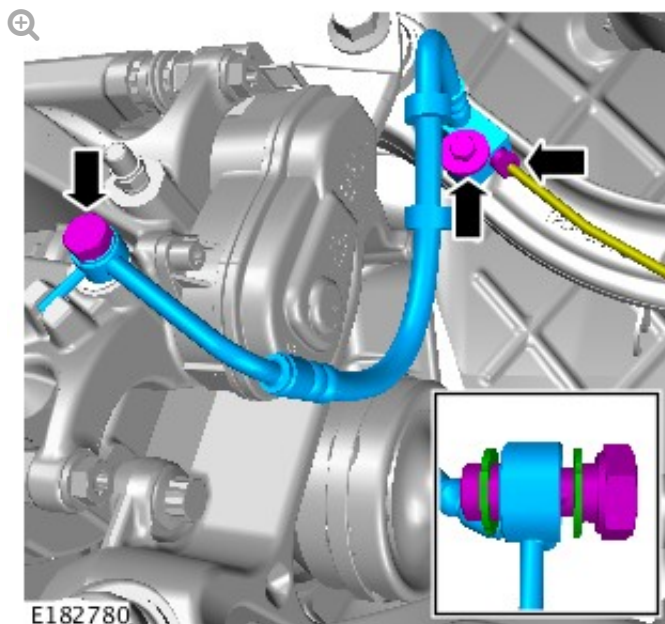

1. Install the brake hose.

Torque:


Brake pipe banjo bolt **32 Nm**

Brake pipe union **16 Nm**

4.

NOTE:

Right side only.

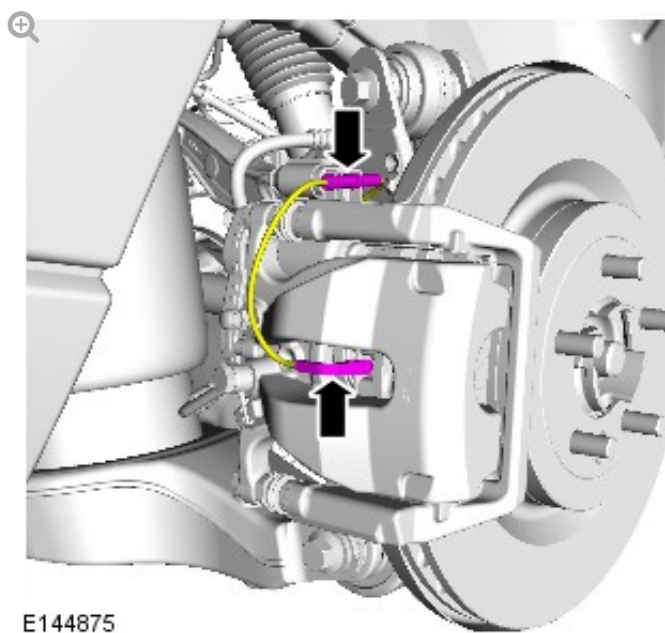

Install the brake pad wear indicator sensor.

5. Bleed the brake system.

Refer to: [Brake System Bleeding - Vehicles With: High Performance Brakes](#) (206-00 Brake System - General Information, General Procedures).

6. Install the wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

7. Calibrate the electric parking brake (EPB) using the diagnostic tool.
General Equipment: [Land Rover diagnostic equipment](#)

8. **NOTE:**

This step is only required if the diagnostic tool is not available.

Refer to: [Electronic Parking Brake Service Mode Activation and Deactivation](#) (206-05 Parking Brake and Actuation, General Procedures).

9. **NOTE:**

This step is only required if the vehicle has no battery power.

Refer to: [Electronic Parking Brake Release When the Vehicle Has No Electrical Power](#) (206-05 Parking Brake and Actuation, General Procedures).

