

2016.0 RANGE ROVER (LG), 206-04

REAR DISC BRAKE

BRAKE DISC (G1885321)

REMOVAL AND INSTALLATION

70.12.13	DISCS - REAR - SET - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+
70.12.33	DISC - REAR - EACH - RENEW	ALL DERIVATIVES	1	USED WITHINS	+

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 3	Renew Part	Brake caliper carrier bolts
Installation Step 5	Renew Part	Brake caliper carrier bolts

REMOVAL

WARNING:

If installing a new brake disc, install new brake pads.

CAUTIONS:

- Brake discs must be renewed in pairs.
- LH illustration shown, RH is similar.

NOTES:

- The brake pad wear warning indicator sensor must be replaced each time the brake pads are serviced.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1. Connect the diagnostic tool and set the electronic park brake (EPB) to the maintenance position.

2.

NOTE:

This step is only required if the diagnostic tool is not available.

Refer to: [Electronic Parking Brake Service Mode Activation and Deactivation](#) (206-05 Parking Brake and Actuation, General Procedures).

3.

NOTE:

This step is only required if the vehicle has no battery power.

Refer to: [Electronic Parking Brake Release When the Vehicle Has No](#)

[Electrical Power](#) (206-05 Parking Brake and Actuation, General Procedures).

4.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

5.


Remove the wheel and tire.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).


6.

NOTE:

RH side only.

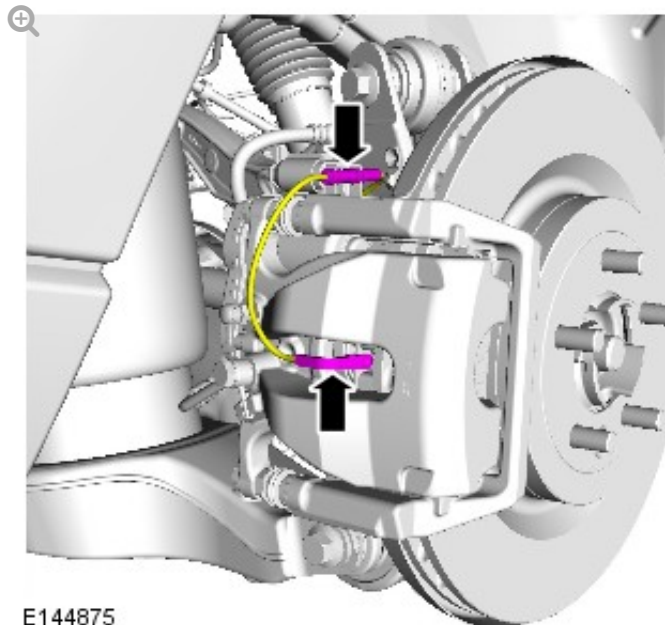

7.

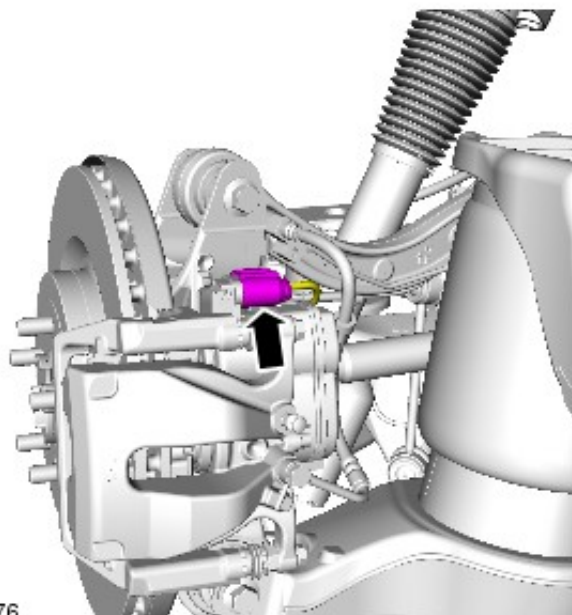


E144876

8.


CAUTION:

Discard the bolts.

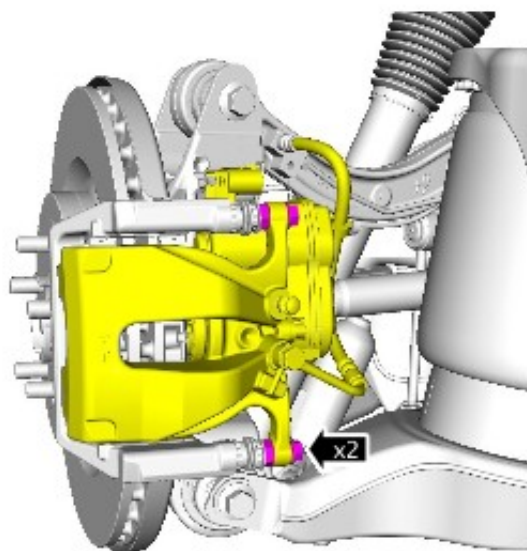


E144877

9.

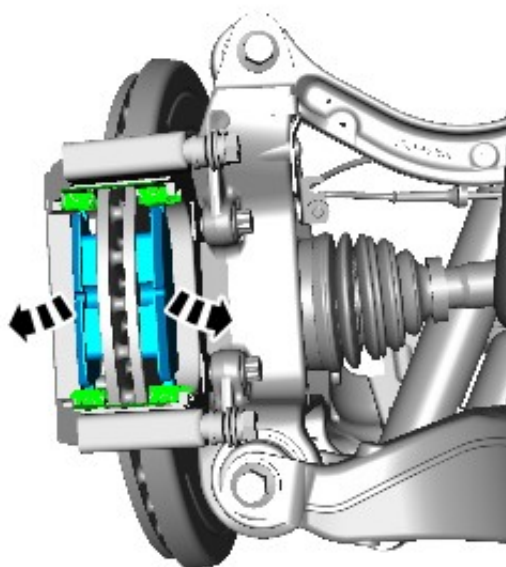

E144878

10.

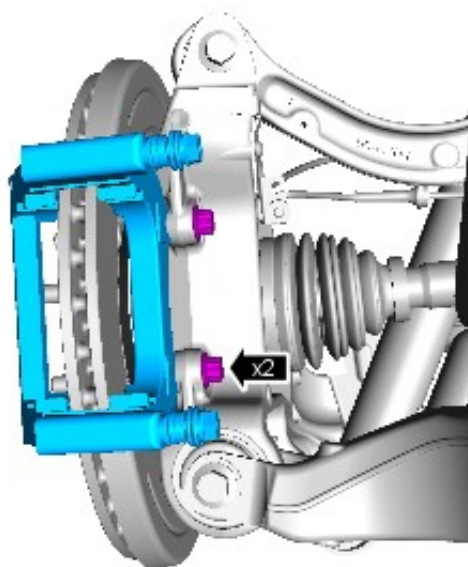

E144879

11.




E144880

INSTALLATION

1.

CAUTION:

Make sure that the mating faces are clean and free of foreign material.

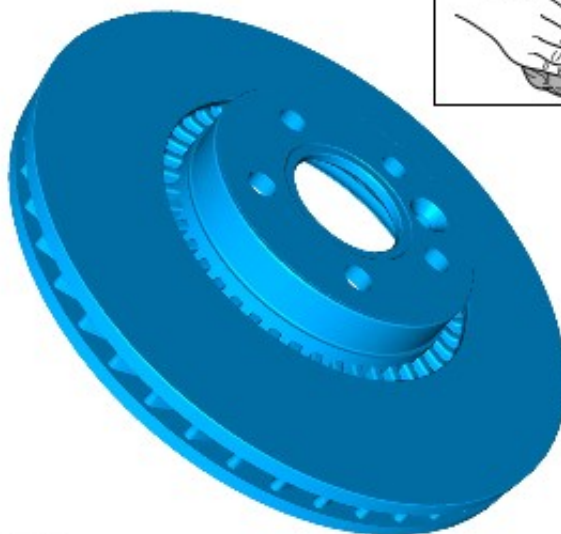

E132111

Clean the brake disc using brake cleaning fluid.

2.




E144880

Torque: 35 Nm

3.

CAUTION:

Make sure that new bolts are installed.

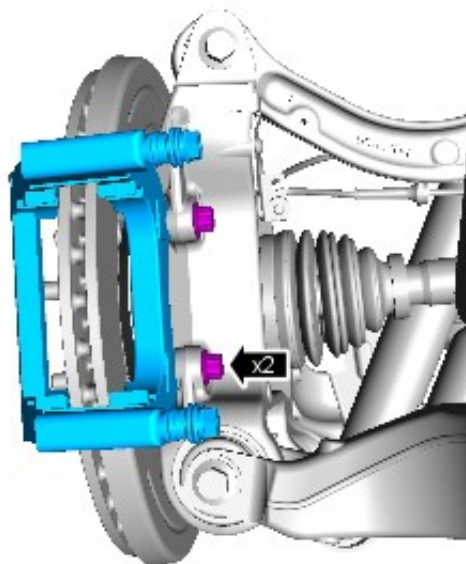

E144879


Renew Part: [Brake caliper carrier bolts](#).

Torque:

Stage 1: 110 Nm

Stage 2: 120°

4.

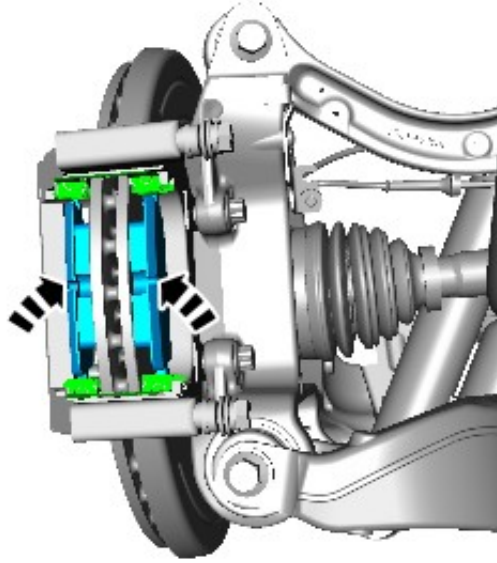


E144881

5.

CAUTIONS:

- Make sure that new bolts are installed.
- Make sure that the brake hose is not twisted and is correctly located.

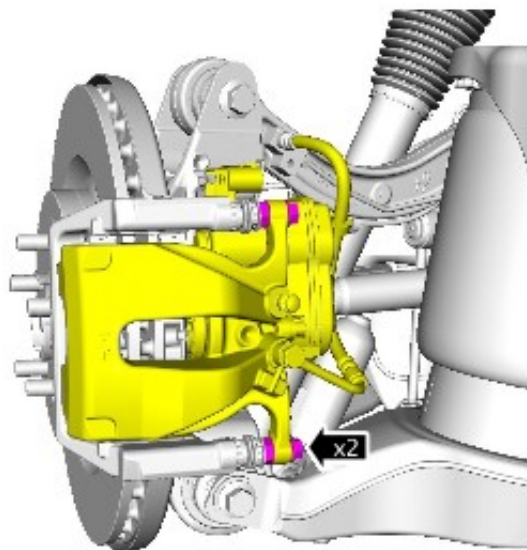


E144877

Renew Part: *Brake caliper carrier bolts.*

Torque: 35 Nm

6.

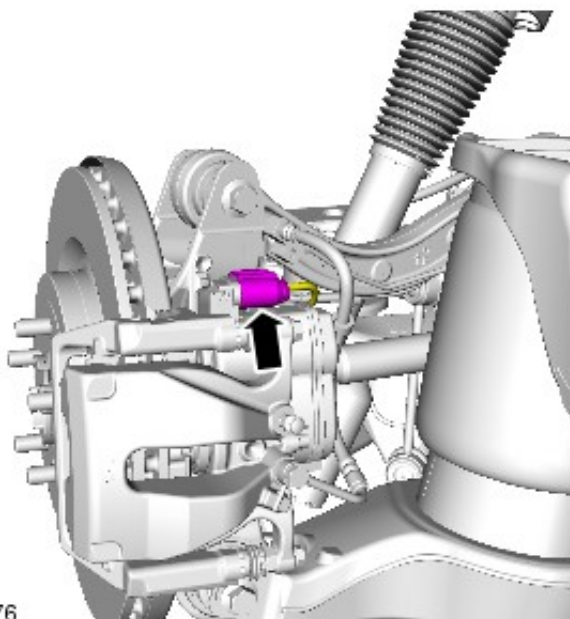


E144876

7.

NOTE:

RH side only.

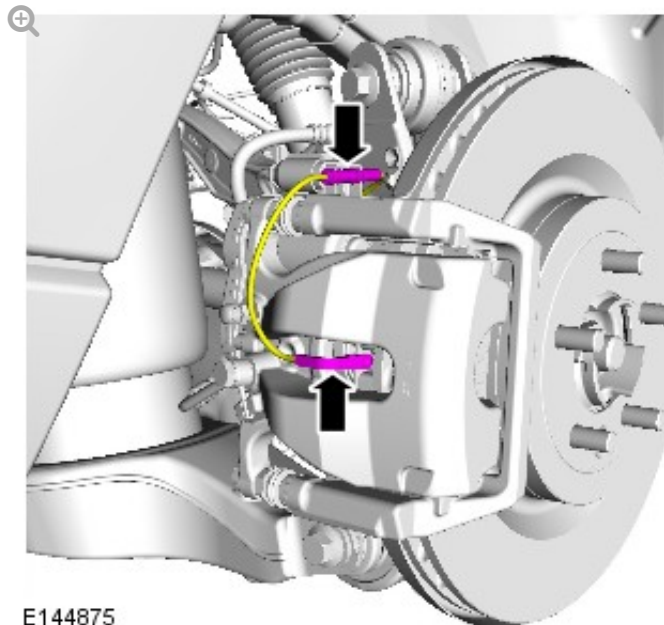

E144875

8. Install the rear wheel.
Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).
9. Depress the brake pedal several times, check the fluid level in the brake fluid reservoir and top-up with brake fluid if necessary.
10. Calibrate the electric parking brake (EPB) using the diagnostic tool.

11.

NOTE:

This step is only required if the diagnostic tool is not available.

Refer to: [Electronic Parking Brake Service Mode Activation and Deactivation](#) (206-05 Parking Brake and Actuation, General Procedures).

