

2016.0 RANGE ROVER (LG), 206-04

REAR DISC BRAKE

BRAKE PADS – VEHICLES WITH: STANDARD BRAKES

[G1509072]

REMOVAL AND INSTALLATION					
70.40.02	SHOES/PADS - FRONT - SET - RENEW	ALL DERIVATIVES	0.6	USED WITHINS	+
70.40.02.36	SHOES/PADS - FRONT - SET - RENEW - BREMBO/SPORTS BRAKES FITTED	ALL DERIVATIVES	0.7	USED WITHINS	+
70.40.03	SHOES/PADS - REAR - SET - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+

REMOVAL

WARNINGS:

- Brake pads must be renewed in axle sets only. Failure to follow this instruction may result in braking efficiency being impaired.
- If the brake pad wear warning light has been activated, a new brake pad wear sensor must be installed.

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Left illustration shown, right is similar.

1. Connect the diagnostic tool and set the electronic park brake (EPB) to the maintenance position.

2.

NOTE:

This step is only required if the diagnostic tool is not available.

Refer to: Electronic Parking Brake (EPB) Service Mode Activation and Deactivation (206-05, General Procedures).

3.

NOTE:

This step is only required if the vehicle has no battery power.

Refer to: Electronic Parking Brake (EPB) Release When the Vehicle Has No Electrical Power (206-05, General Procedures).

4.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

5. Refer to: Wheel and Tire - TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (204-04, Removal and Installation).


6.

CAUTION:

The brake pad wear indicator sensor is easily damaged. Do not use a lever to remove the sensor. Use fingers only.

NOTE:

Right side only.

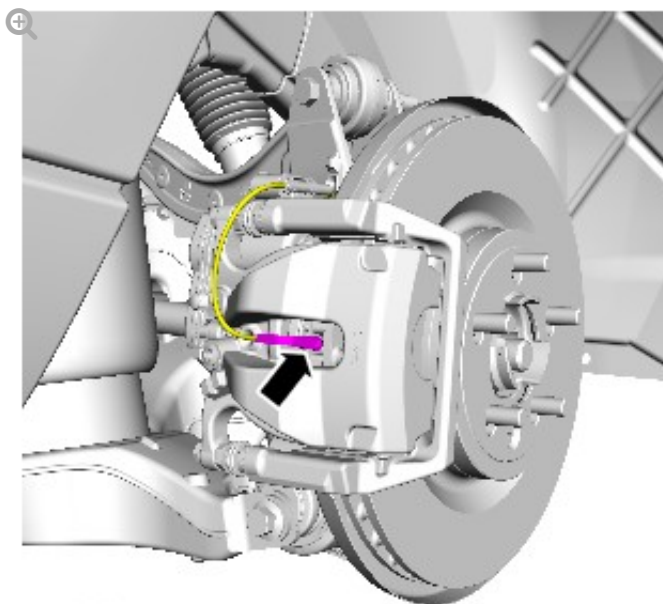


E173189

Inspect the brake pad wear sensor for signs of wear or damage.


Install a new sensor if necessary.

7.

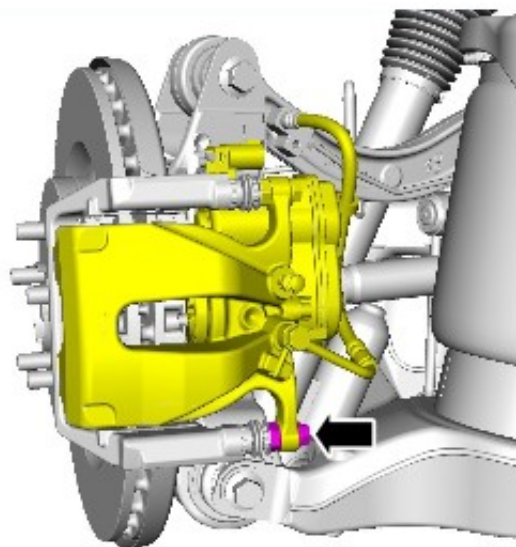

E144921

8.

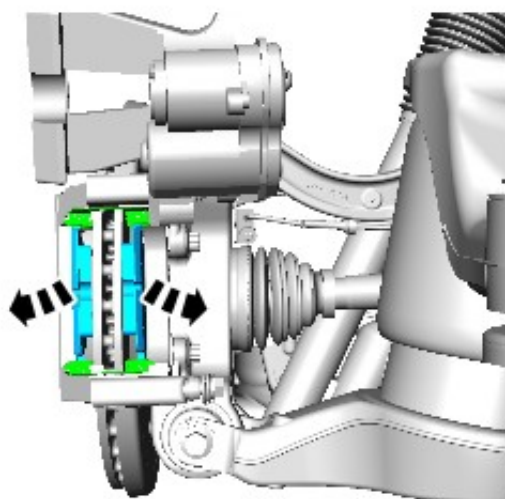

E144923


9. Repeat the above procedure for the other side.

INSTALLATION

1.

WARNING:


Do not use compressed air to clean brake components. Dust from friction materials can be harmful if inhaled.

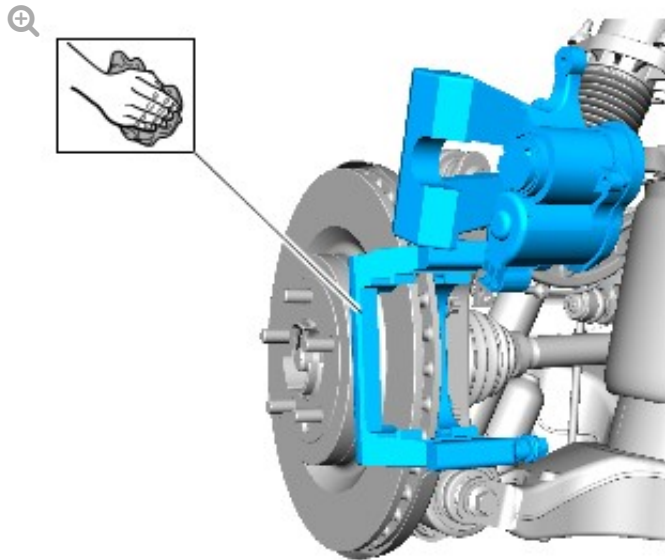

E144922

Clean the brake caliper housing and anchor plate using brake cleaning fluid.


2.

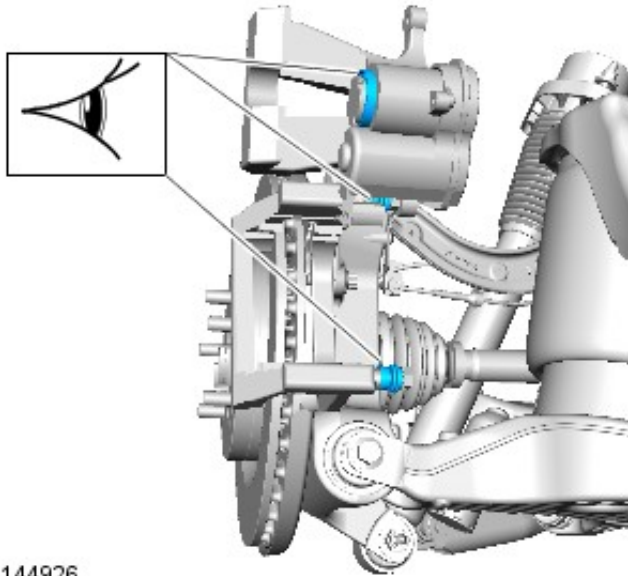

E144926

Inspect the caliper piston and slide pin seals for damage.

3.

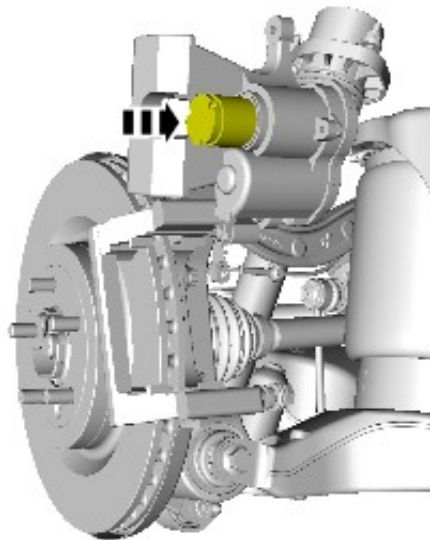


E144925

4.

CAUTION:

Make sure that the brake pad with the rubber shim is installed to the inboard side only.

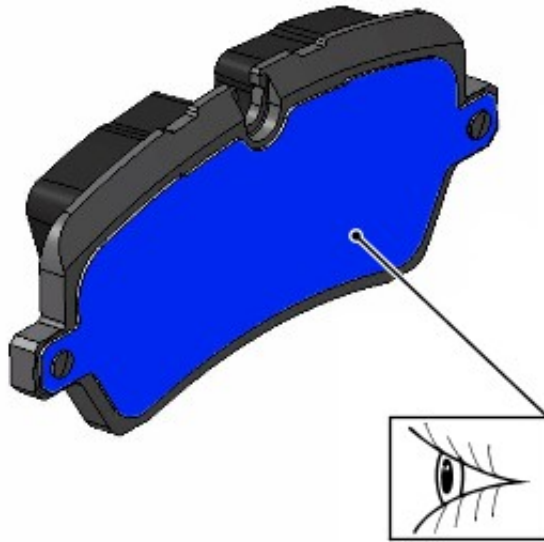

E172018


5.

WARNINGS:

- Outboard brake pad only.
- Take care not to contaminate the brake pad friction materials.


CAUTION:

Make sure that the grease is evenly applied across the shim face.

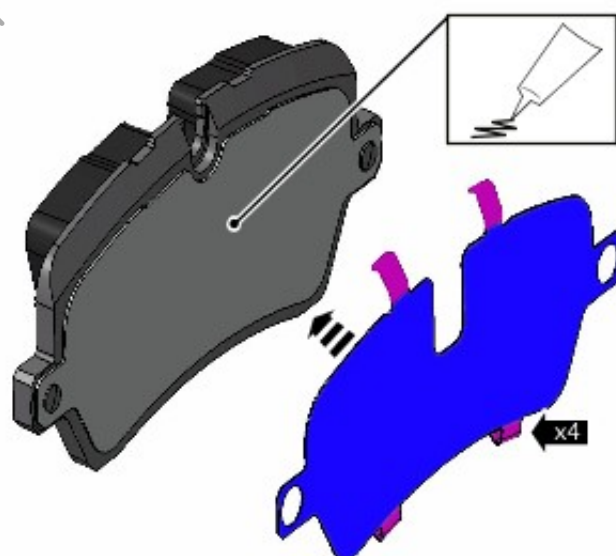


E171856

6.

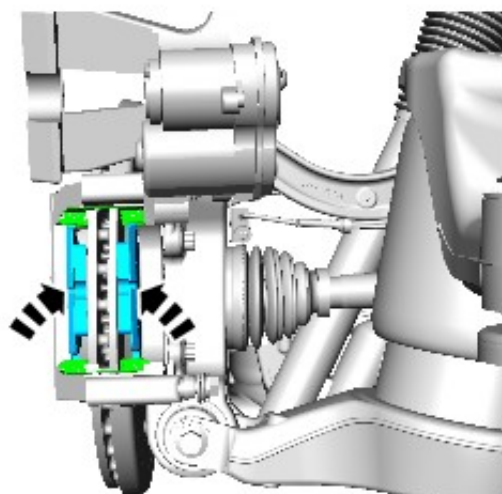

E144924

7.

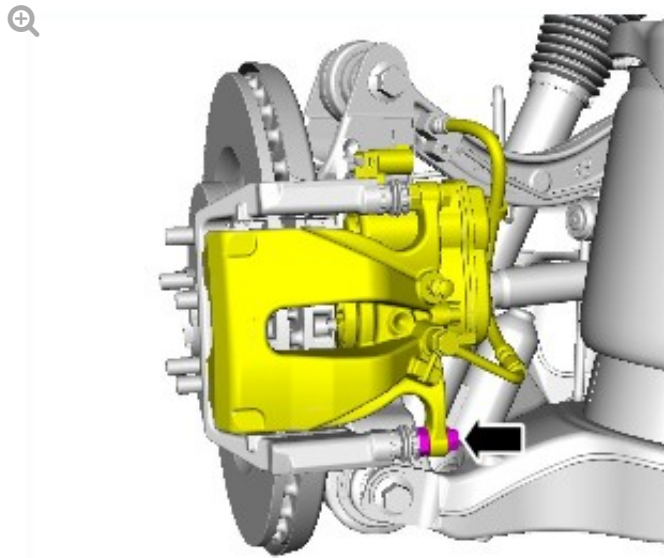


E144921

Torque: 35 Nm

8.

NOTE:

Right side only.

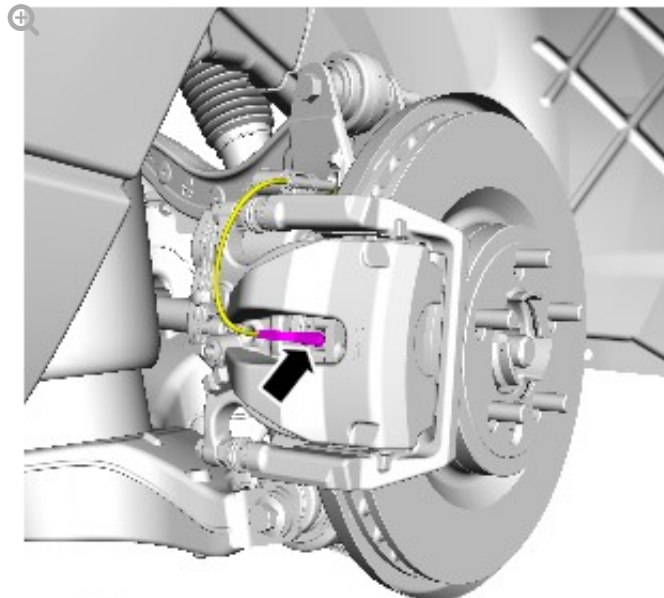

E173189

9. Repeat the above procedure for the other side.

10. Refer to: Wheel and Tire - TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (204-04, Removal and Installation).
11. Depress the brake pedal several times, check the fluid level in the brake fluid reservoir and top-up with brake fluid if necessary.

12.

NOTE:

This step is only required if the diagnostic tool is not available.

Refer to: Electronic Parking Brake (EPB) Service Mode Activation and Deactivation (206-05, General Procedures).

13. Calibrate the electric parking brake (EPB) using the diagnostic tool.