

2016.0 RANGE ROVER (LG), 205-01

DRIVESHAFT

FRONT DRIVESHAFT – TDV6 3.0L DIESEL (G1509295)

REMOVAL AND INSTALLATION

47.15.02	DRIVESHAFT - FRONT - RENEW	3000 CC, TDV6	1.3	USED WITHINS	+
----------	----------------------------------	------------------	-----	-----------------	---

SPECIAL TOOL(S)



303-1142

Viscous Coupling
Wrench



JLR-205-993

Remover/Installer,
Driveshaft Nut

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Transmission Support Crossmember - TDV6 3.0L Diesel](#)
(502-02 Full Frame and Body Mounting, Removal and Installation).

3.

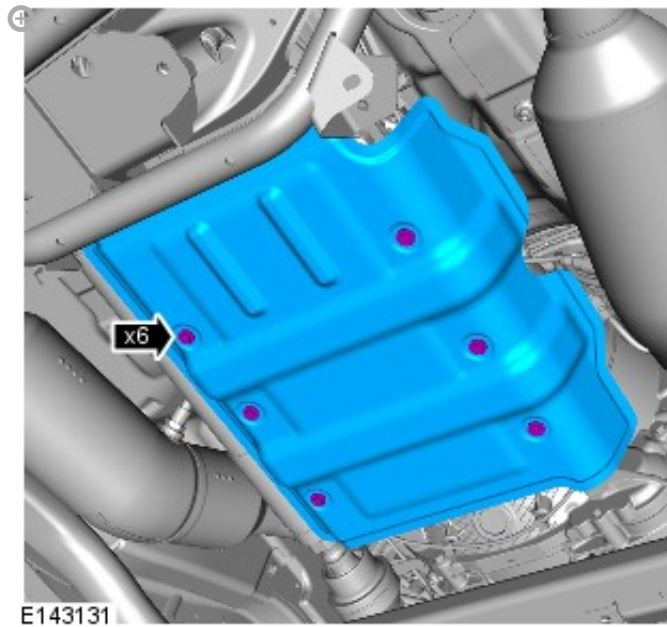


Torque: 10 Nm

4.

CAUTION:

To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.

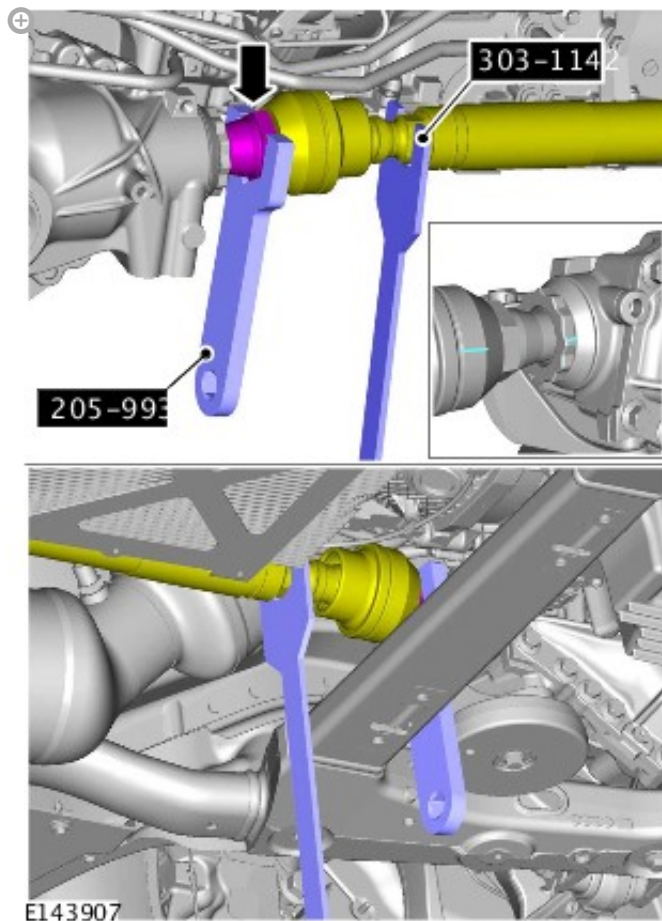


Special Tool(s): [JLR-205-993](#), [303-1142](#)

5.

CAUTIONS:

- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Make sure that new bolts are installed.

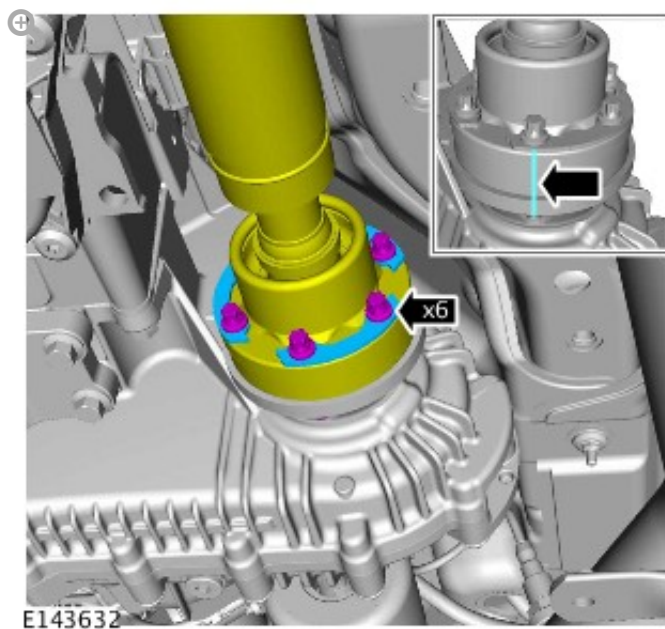


Torque:

Stage 1: **45 Nm**

Stage 2: **90°**

6.

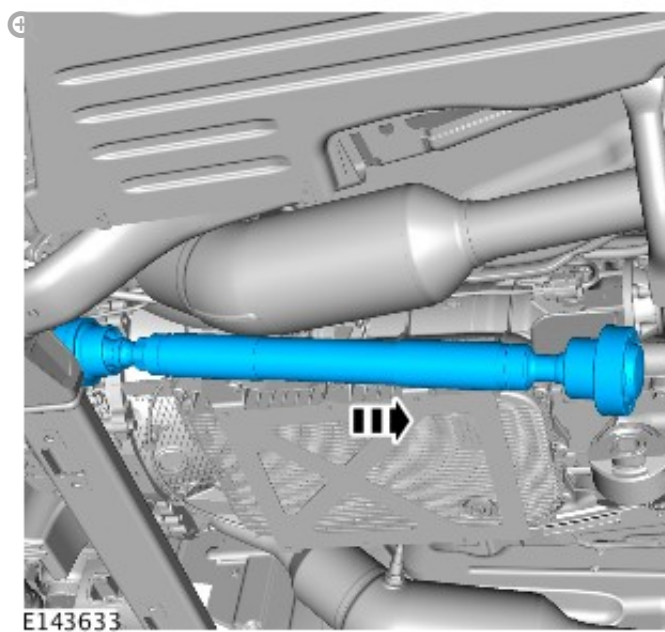


INSTALLATION

1.

CAUTION:

Make sure the torque wrench setting procedure is followed correctly. Failure to follow this instruction may result in damage to the vehicle.

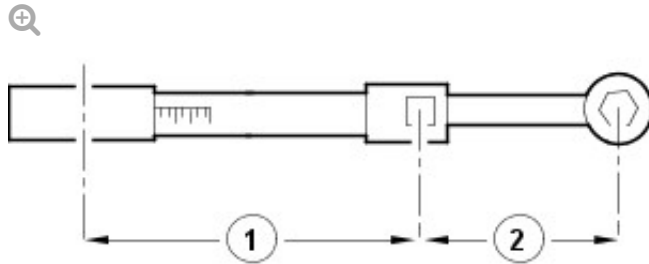


E37107

1. Calculate the setting for the torque wrench:
2. Stage 1: Multiply the required torque by the effective length of the torque wrench (1).
3. Stage 2: Add the effective length of the special tool (2) to the effective length of the torque wrench.
4. Stage 3: Divide the total of stage 1 by the total of stage 2.
5. Stage 4: Set the torque wrench to the figure arrived at in stage 3.

2.

CAUTION:

Make sure the torque wrench setting procedure is followed correctly. Failure to follow this instruction may result in damage to the vehicle.

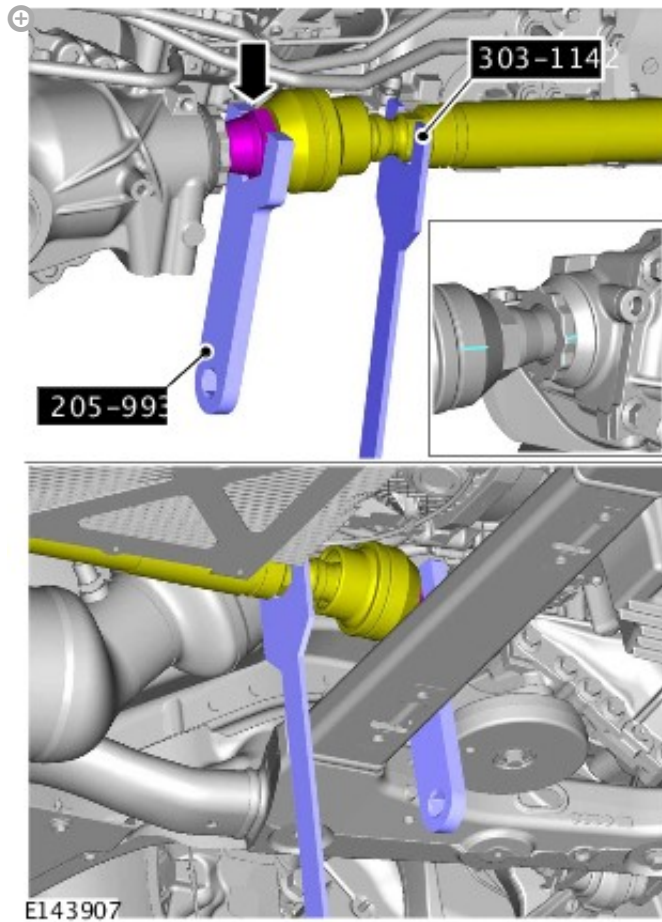

Special Tool(s): [JLR-205-993](#), [303-1142](#)

Torque: **150 Nm**

3. To install, reverse the removal procedure.