

PUBLISHED: 11-SEP-2012
2015.0 RANGE ROVER (LG), 205-01

DRIVESHAFT


FRONT DRIVESHAFT - TDV8 4.4L DIESEL (G1509296)

REMOVAL AND INSTALLATION

47.15.02	DRIVESHAFT - FRONT - RENEW	4400 CC, TDV8	1	USED WITHINS
----------	----------------------------------	------------------	---	-----------------

SPECIAL TOOL(S)

303-114

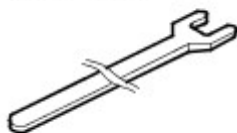

E46076

303-1142

Viscous Coupling
Wrench

205-993



E144020

JLR-205-993

Remover/Installer,
Driveshaft Nut

GENERAL EQUIPMENT

EQUIPMENT NAME

Transmission jack

REMOVAL



NOTE:

Removal steps in this procedure may contain installation details.

1.




WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2.

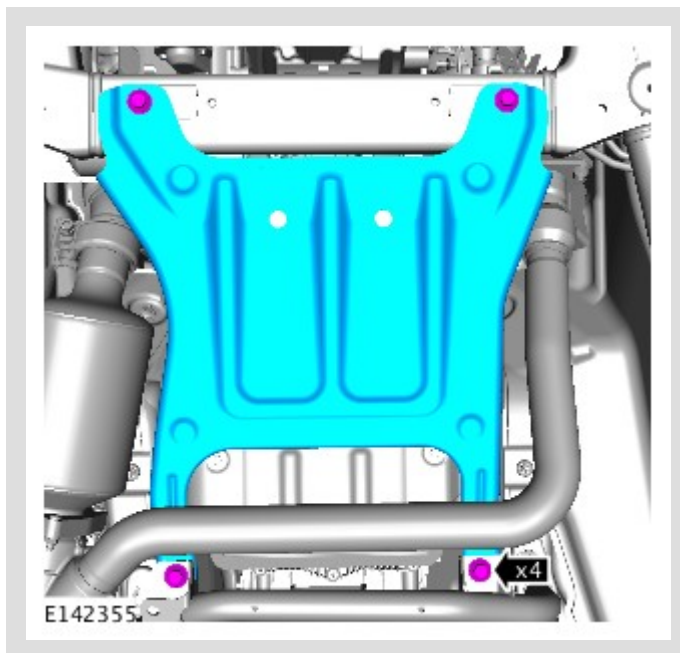


Torque: 60 Nm

3.

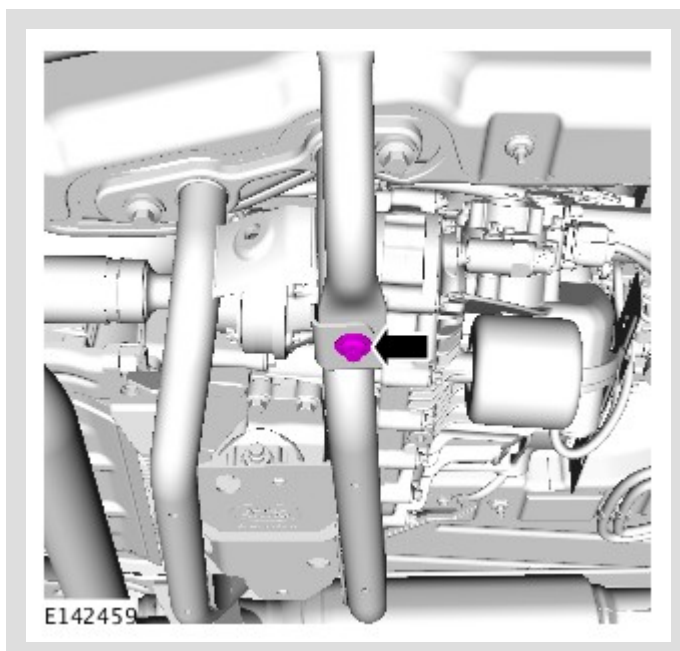

Torque: 24 Nm


4.

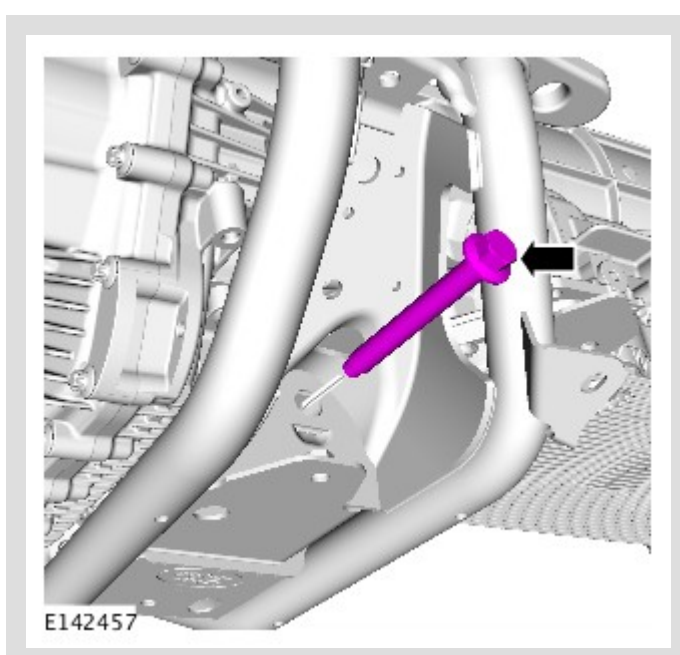

General Equipment: [Transmission jack](#)


Torque: 175 Nm

5.

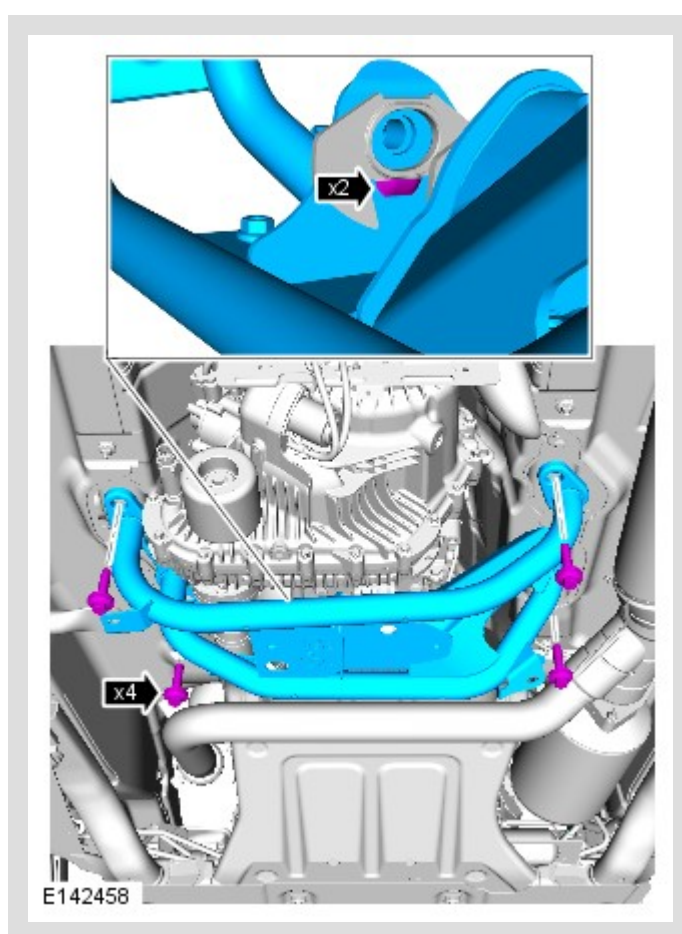


Torque: 110 Nm

6.

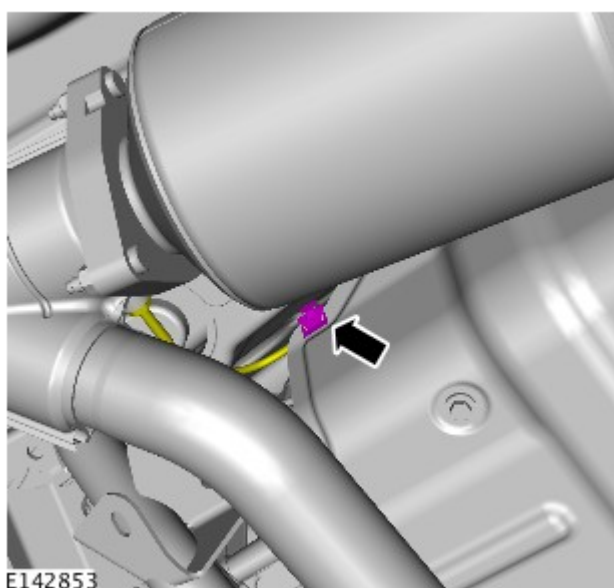

E142853

7.

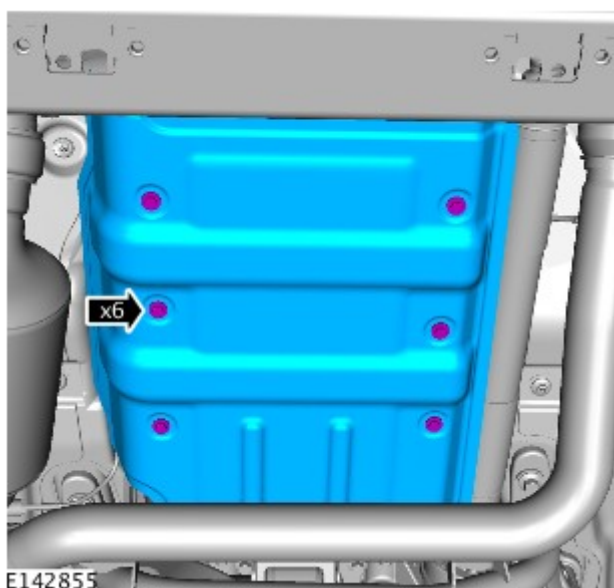


E142855

Torque: 10 Nm

8.

⚠ CAUTION:

To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.

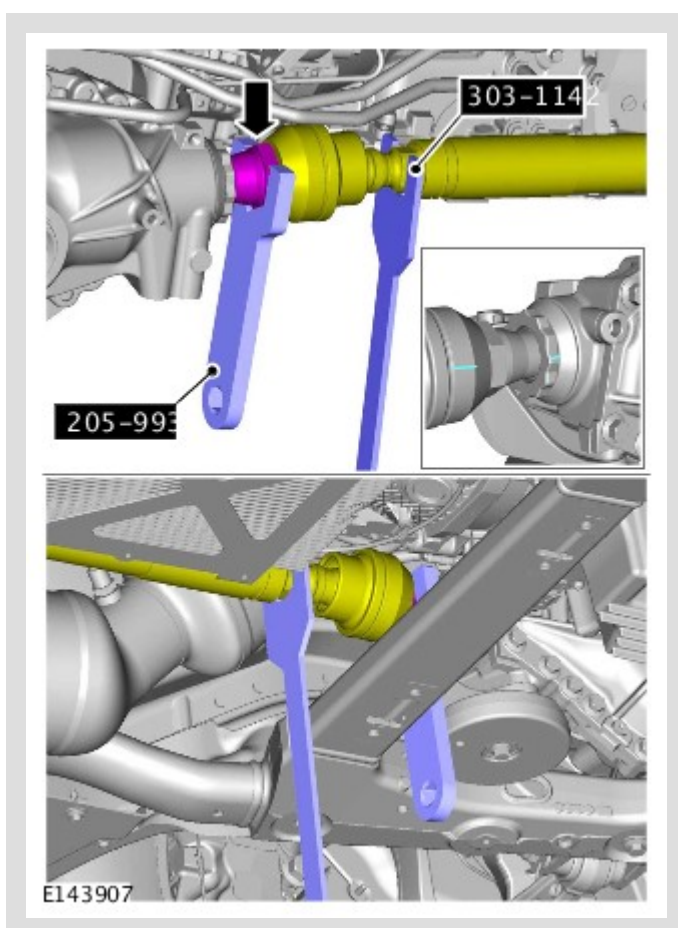


Special Tool(s): JLR-205-993 , 303-1142

9.

⚠ CAUTIONS:


- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Make sure that new bolts are installed.

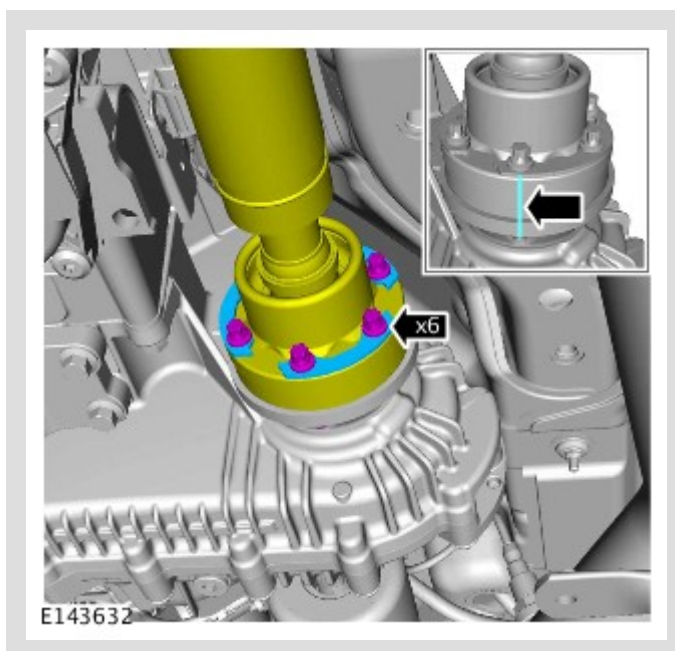

Torque:

Stage 1: **45 Nm**

Stage 2: **90°**

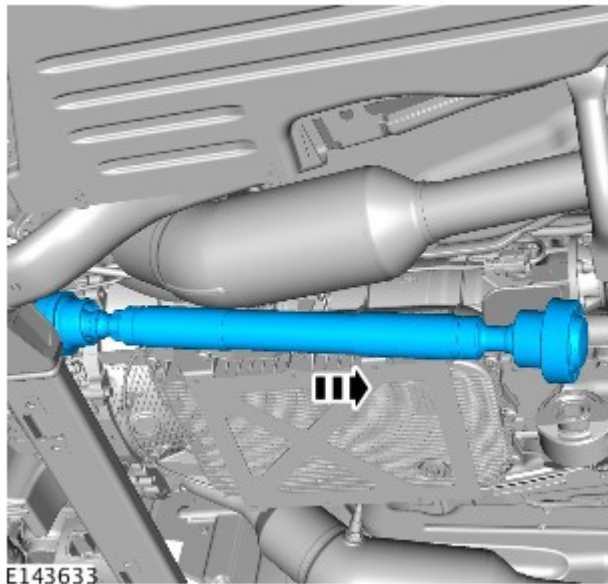


INSTALLATION

1.

⚠ CAUTION:

Make sure the torque wrench setting procedure is followed correctly.
Failure to follow this instruction may result in damage to the vehicle.

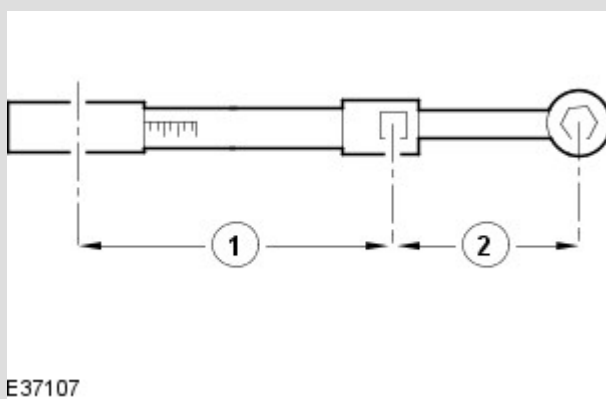

- Calculate the setting for the torque wrench:
- Stage 1: Multiply the required torque by the effective length of the torque wrench (1).
- Stage 2: Add the effective length of the special tool (2) to the effective length of the torque wrench.
- Stage 3: Divide the total of stage 1 by the total of stage 2.


- Stage 4: Set the torque wrench to the figure arrived at in stage 3.

2.



CAUTION:

Make sure the torque wrench setting procedure is followed correctly.
Failure to follow this instruction may result in damage to the vehicle.

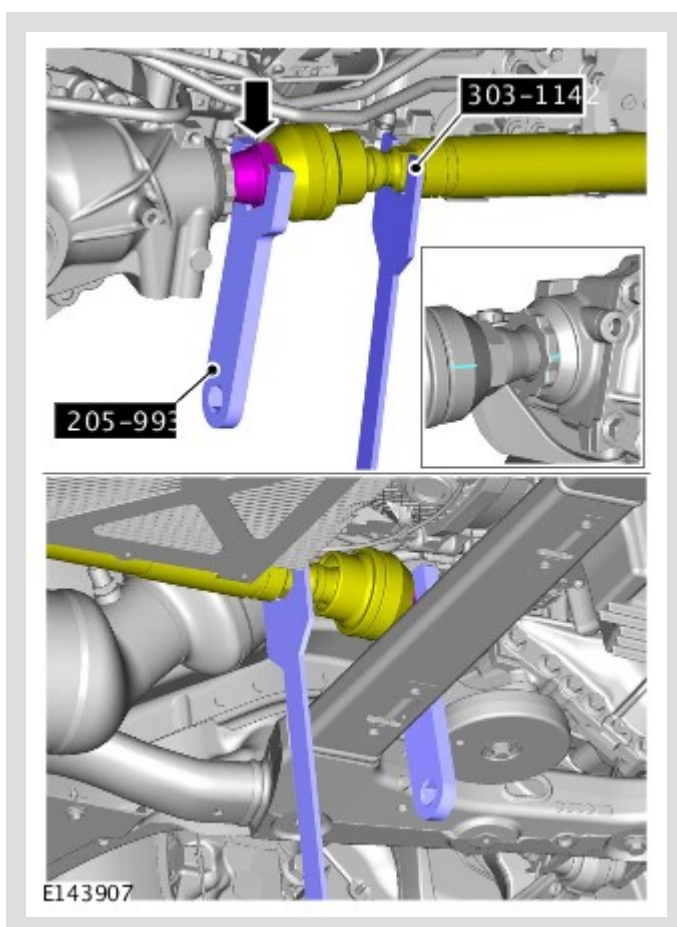

Special Tool(s): JLR-205-993 , 303-1142

Torque: 150 Nm

3. To install, reverse the removal procedure.