

PUBLISHED: 11-SEP-2012
2014.0 RANGE ROVER (LG), 205-01

DRIVESHAFT


**FRONT DRIVESHAFT - V6 S/C 3.0L
PETROL /V8 N/A 5.0L PETROL/V8 S/C
5.0L PETROL** (G1509297)

REMOVAL AND INSTALLATION

47.15.02	DRIVESHAFT - FRONT - RENEW	5000 CC, AJ V8	1.1	USED WITHINS	
----------	----------------------------------	-------------------	-----	-----------------	--

SPECIAL TOOL(S)

303-114

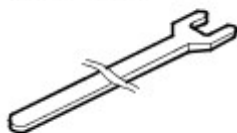

E46076

303-1142

Viscous Coupling
Wrench

205-993



E144020

JLR-205-993

Remover/Installer,
Driveshaft Nut

REMOVAL

 NOTE:

Removal steps in this procedure may contain installation details.

1.

 WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

Refer to: Transmission Support Crossmember - V8 5.0L Petrol/V8 S/C 5.0L Petrol (502-02, Removal and Installation).

3.

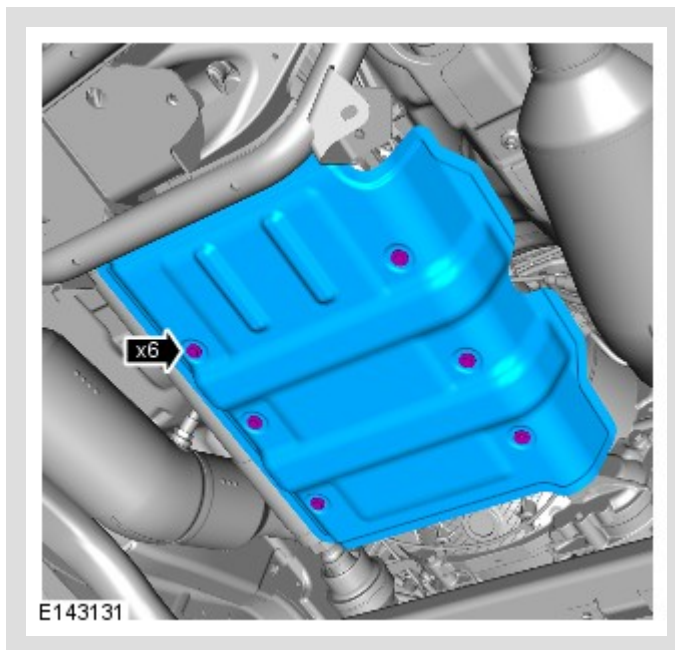


Torque: 10 Nm

4.



CAUTION:

To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.

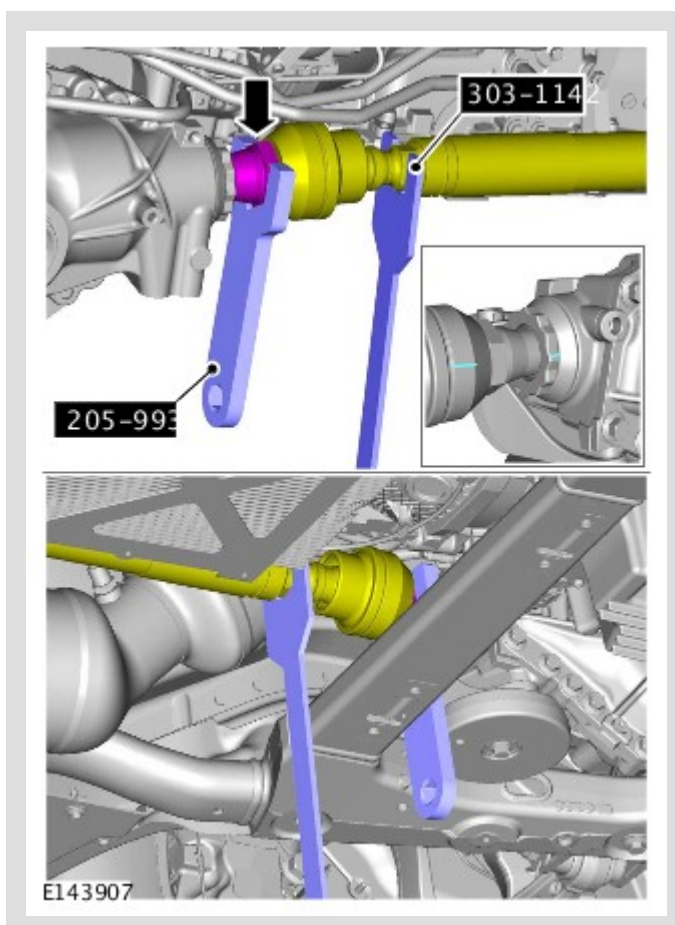


Special Tool(s): [JLR-205-993](#) , [303-1142](#)

5.



CAUTIONS:


- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Make sure that new bolts are installed.

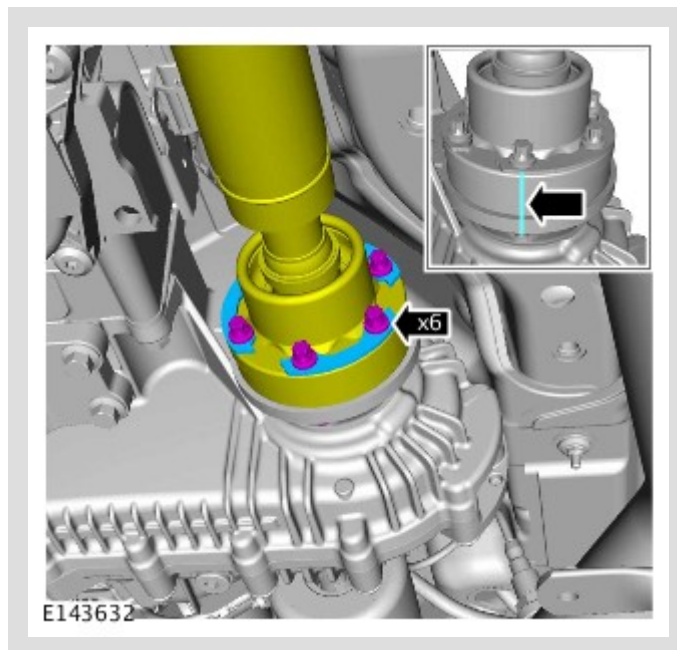

Torque:

Stage 1: 45 Nm

Stage 2: 90°

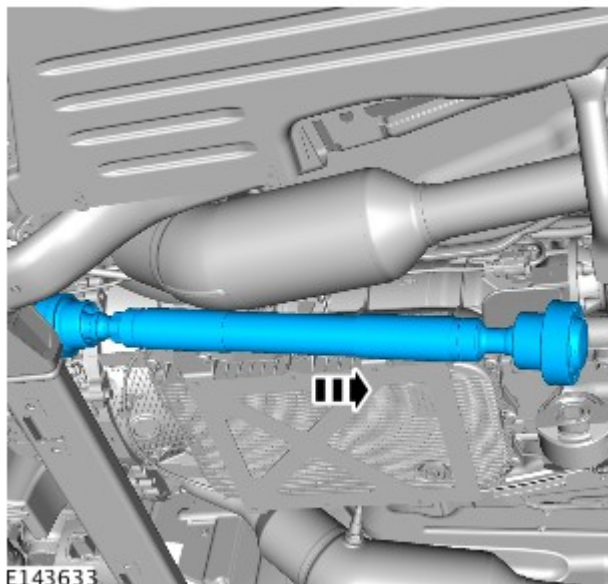


INSTALLATION

1.

⚠ CAUTION:

Make sure the torque wrench setting procedure is followed correctly. Failure to follow this instruction may result in damage to the vehicle.

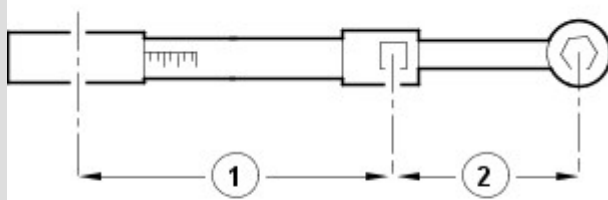

E37107


- Calculate the setting for the torque wrench:
- Stage 1: Multiply the required torque by the effective length of the torque wrench (1).
- Stage 2: Add the effective length of the special tool (2) to the effective length of the torque wrench.

- Stage 3: Divide the total of stage 1 by the total of stage 2.
- Stage 4: Set the torque wrench to the figure arrived at in stage 3.

2.

⚠ CAUTION:

Make sure the torque wrench setting procedure is followed correctly.
Failure to follow this instruction may result in damage to the vehicle.

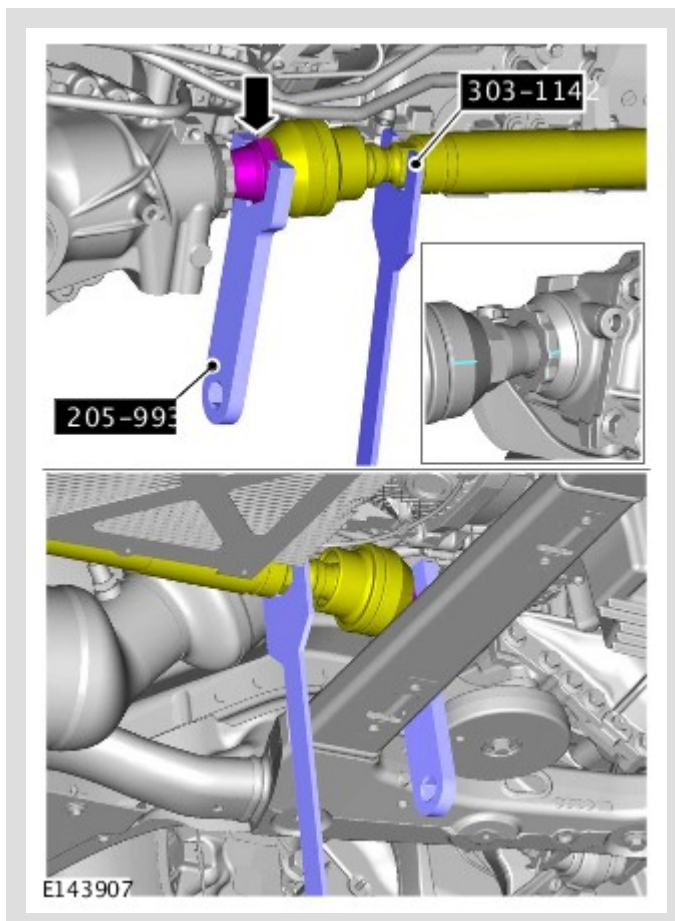

Special Tool(s): [JLR-205-993](#) , [303-1142](#)

Torque: **150 Nm**

-
3. To install, reverse the removal procedure.