

2016.0 RANGE ROVER (LG), 205-01

DRIVESHAFT

REAR DRIVESHAFT – TDV6 3.0L DIESEL (G1875551)

REMOVAL AND INSTALLATION

47.15.03	DRIVESHAFT - REAR - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	1.7	USED WITHINS	+
----------	---------------------------------	--	-----	-----------------	---

SPECIAL TOOL(S)



303-1142

Viscous Coupling
Wrench



JLR-205-993

Remover/Installer,
Driveshaft Nut

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Refer to: [Exhaust System - Vehicles Without: Diesel Particulate Filter \(DPF\)](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).

Refer to: [Exhaust System - Vehicles With: Diesel Particulate Filter \(DPF\)](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).


Refer to: [Exhaust System - Vehicles With: Diesel Exhaust Fluid](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).

3.

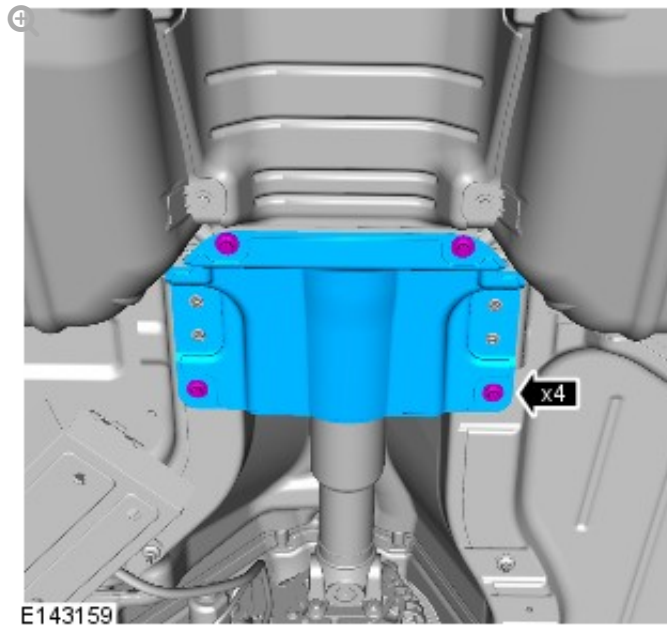

Torque: 5 Nm

4.

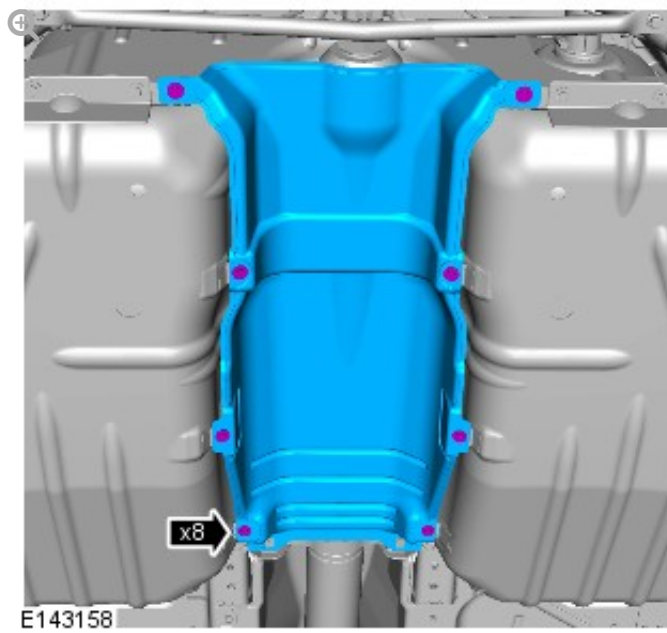


Torque: 5 Nm

5.

CAUTIONS:

- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Make sure that new bolts are installed.

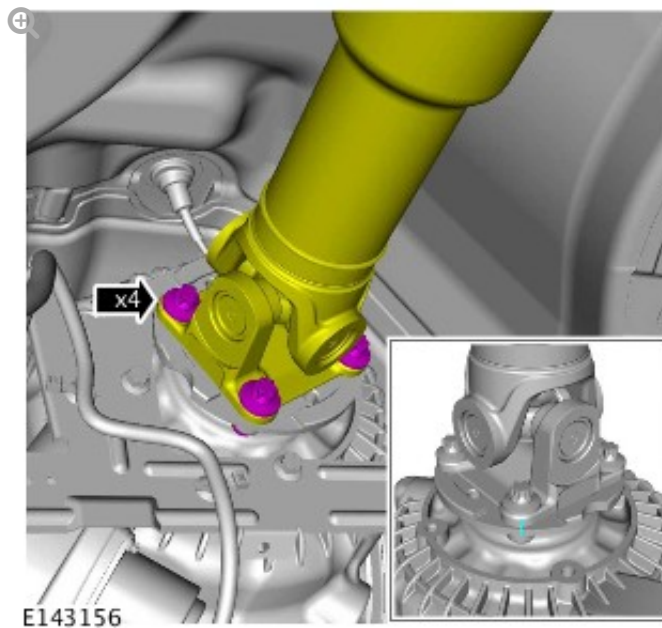


Torque: 150 Nm

6.

CAUTION:

To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.

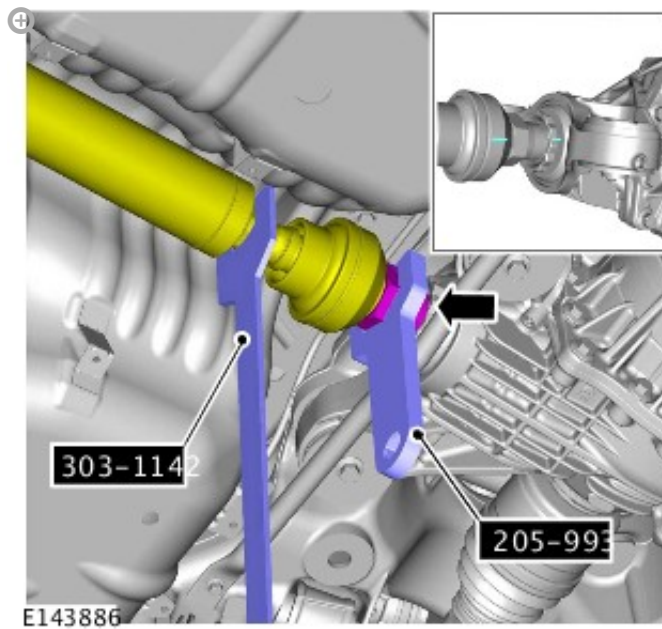


Special Tool(s): [JLR-205-993](#), [303-1142](#)

7.


CAUTION:

Note the fitted position of the component prior to removal.

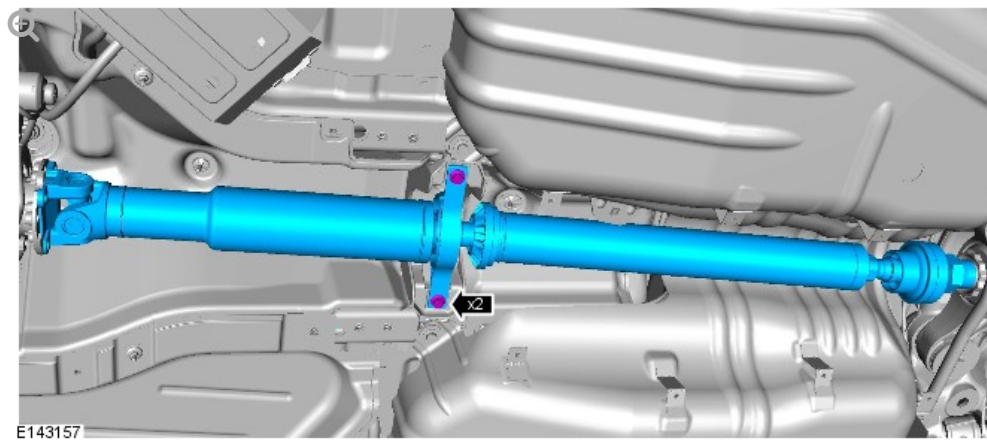

INSTALLATION

1.

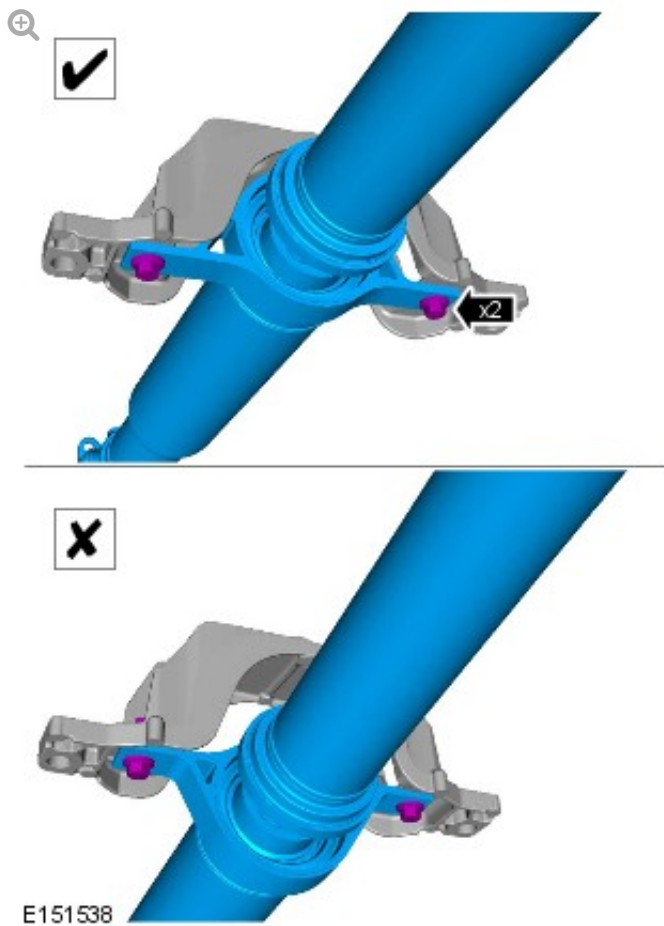


Torque: 48 Nm

2.

CAUTION:

Make sure the torque wrench setting procedure is followed correctly. Failure to follow this instruction may result in damage to the vehicle.

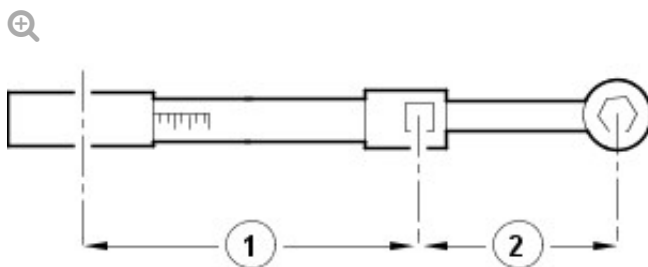


E37107

1. Calculate the setting for the torque wrench:
2. Stage 1: Multiply the required torque by the effective length of the torque wrench (1).
3. Stage 2: Add the effective length of the special tool (2) to the effective length of the torque wrench.
4. Stage 3: Divide the total of stage 1 by the total of stage 2.
5. Stage 4: Set the torque wrench to the figure arrived at in stage 3.

3.

CAUTION:

Make sure the torque wrench setting procedure is followed correctly. Failure to follow this instruction may result in damage to the vehicle.

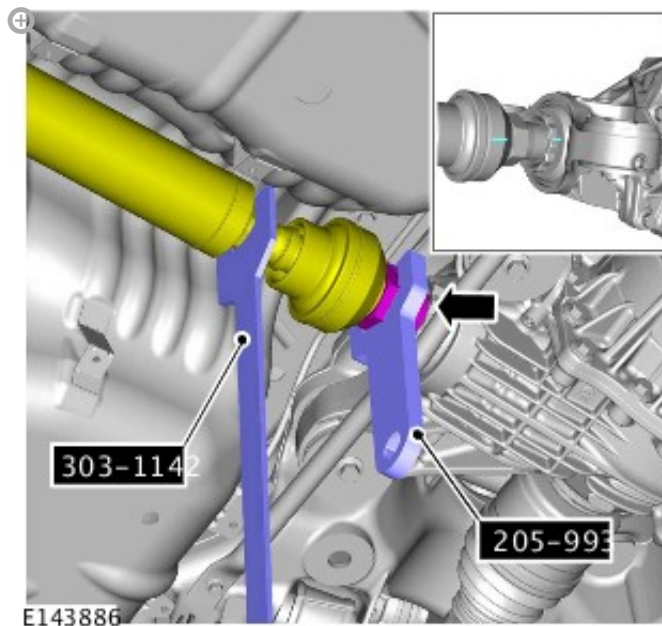

Special Tool(s): [JLR-205-993](#), [303-1142](#)

Torque: 150 Nm

4. To install, reverse the removal procedure.

