

PUBLISHED: 07-NOV-2012
2015.0 RANGE ROVER (LG), 205-01

DRIVESHAFT

REAR DRIVESHAFT - TDV8 4.4L DIESEL (G1509299)

REMOVAL AND INSTALLATION

47.15.03

DRIVESHAFT
- REAR -
RENEW


4400 CC,
TDV8, WITH
PARTICULATE
FILTER

1.5

USED
WITHINS

SPECIAL TOOL(S)

303-114

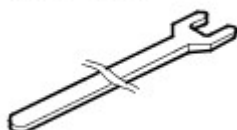

E46076

303-1142

Viscous Coupling
Wrench

205-993



E144020

JLR-205-993

Remover/Installer,
Driveshaft Nut

REMOVAL



NOTE:

Removal steps in this procedure may contain installation details.

1.



WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2.

Refer to: [Exhaust System - Vehicles With: Diesel Particulate Filter \(DPF\)](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).


Refer to: [Exhaust System - Vehicles Without: Diesel Particulate Filter \(DPF\)](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).

3.

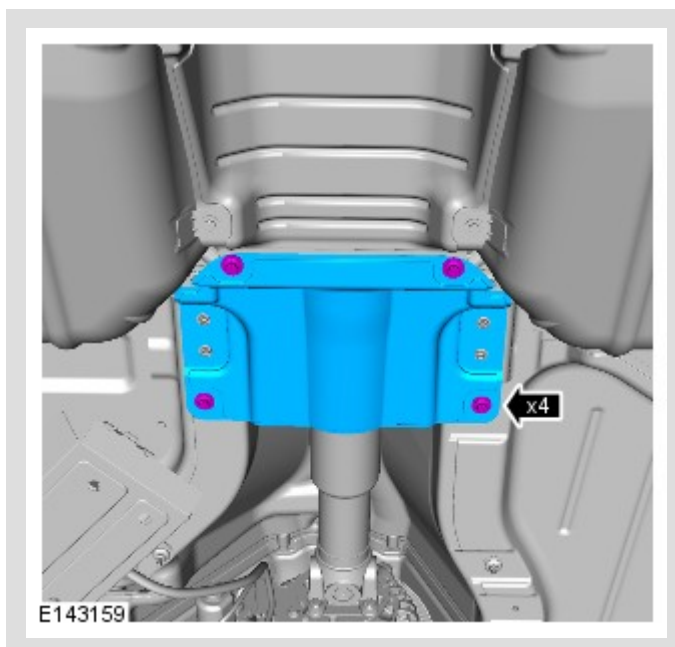

Torque: 5 Nm

4.

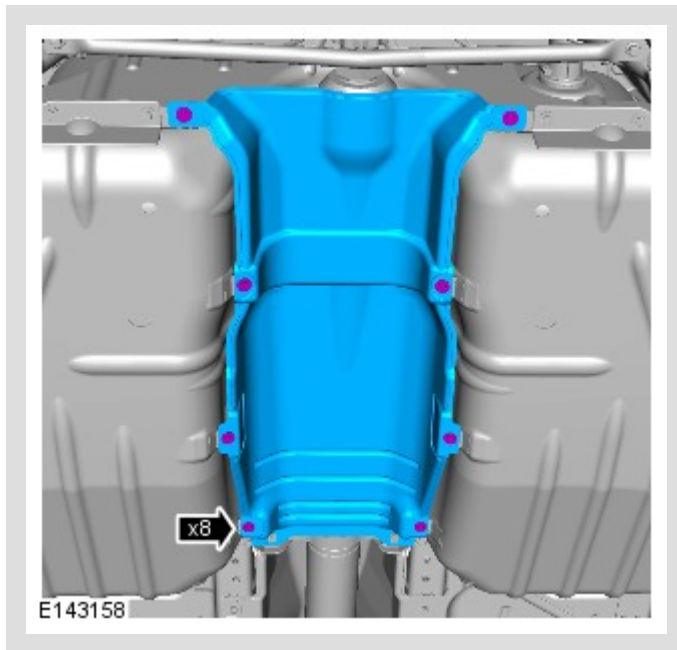


Torque: 5 Nm

5.



CAUTIONS:

- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Make sure that new bolts are installed.

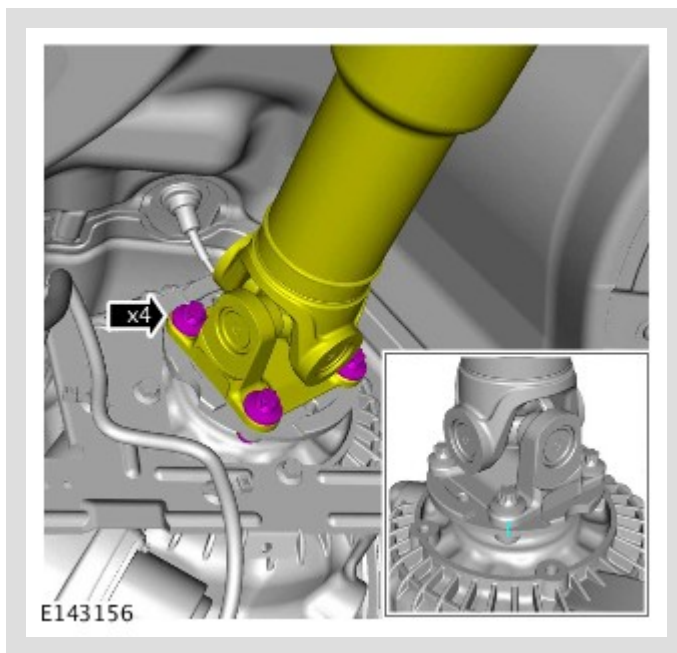


Torque: 150 Nm

6.

⚠ **CAUTION:**

To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.

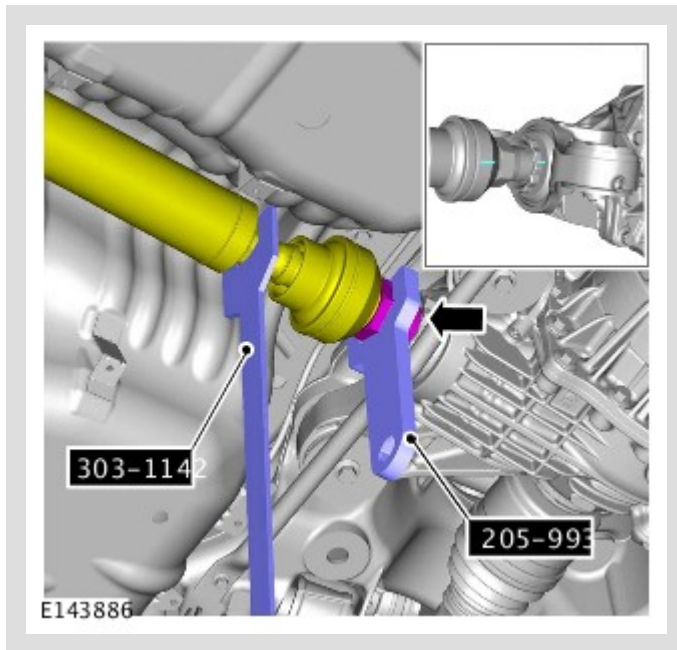


Special Tool(s): [JLR-205-993](#) , [303-1142](#)

7.


ⓘ CAUTION:

Note the fitted position of the component prior to removal.

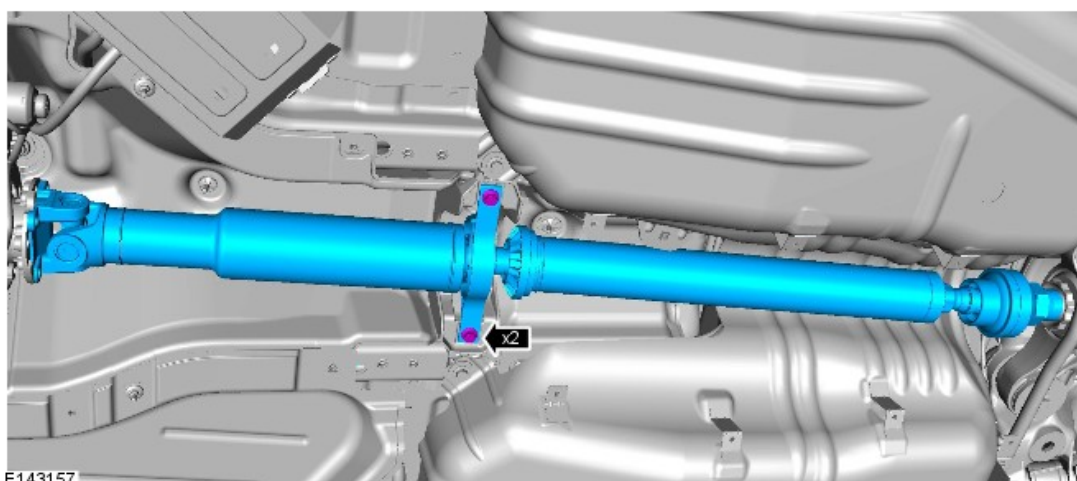

INSTALLATION

1.

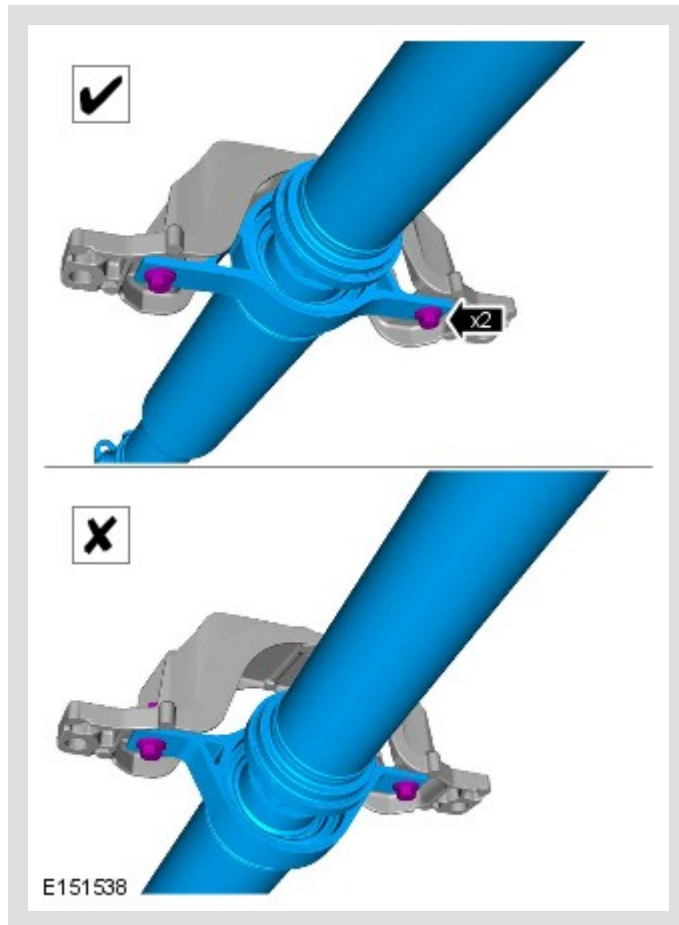


Torque: 48 Nm

2.

⚠ CAUTION:

Make sure the torque wrench setting procedure is followed correctly.
Failure to follow this instruction may result in damage to the vehicle.

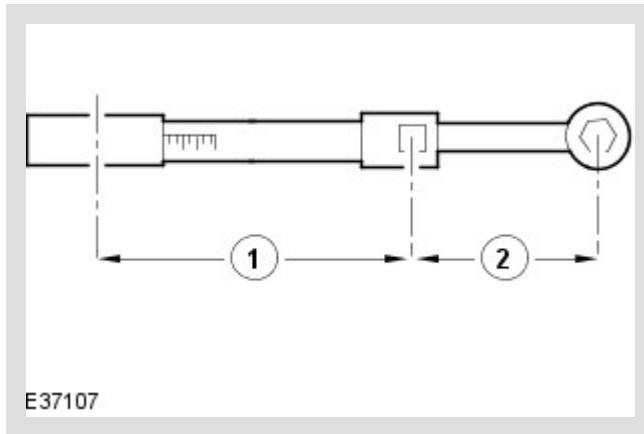


- Calculate the setting for the torque wrench:
- Stage 1: Multiply the required torque by the effective length of the torque wrench (1).
- Stage 2: Add the effective length of the special tool (2) to the effective length of the torque wrench.
- Stage 3: Divide the total of stage 1 by the total of stage 2.
- Stage 4: Set the torque wrench to the figure arrived at in stage 3.

3.

! CAUTION:

Make sure the torque wrench setting procedure is followed correctly.
Failure to follow this instruction may result in damage to the vehicle.

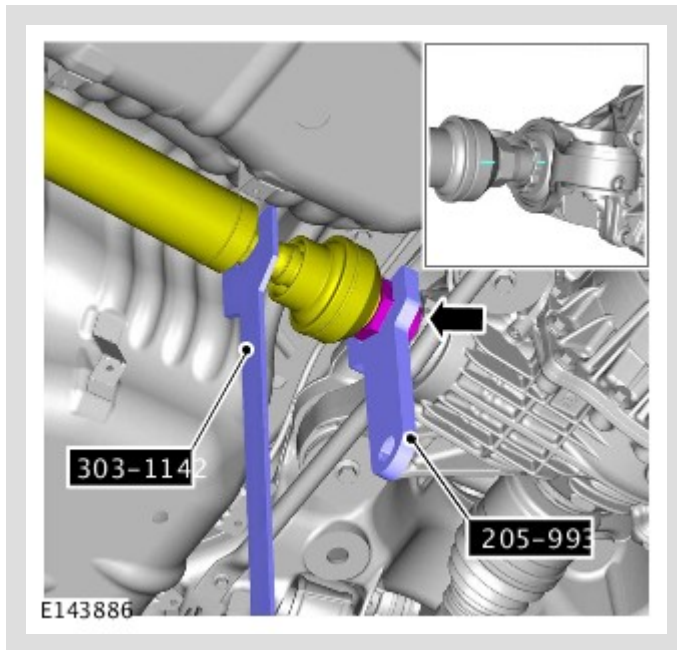

Special Tool(s): [JLR-205-993](#) , [303-1142](#)

Torque: **150 Nm**

-
4. To install, reverse the removal procedure.