

PUBLISHED: 12-JUN-2017  
2014.0 RANGE ROVER (LG), 205-01

DRIVESHAFT

**REAR DRIVESHAFT - V6 S/C 3.0L  
PETROL /V8 N/A 5.0L PETROL/V8 S/C  
5.0L PETROL** (G1509300)

## REMOVAL AND INSTALLATION

47.15.03

DRIVESHAFT  
- REAR -  
RENEW


5000 CC,  
AJ V8

0.8

USED  
WITHINS

### SPECIAL TOOL(S)

303-114

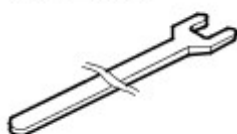

E46076

**303-1142**

Viscous Coupling  
Wrench

205-993



E144020

**JLR-205-993**

Remover/Installer,  
Driveshaft Nut

## REMOVAL

 **NOTE:**

Removal steps in this procedure may contain installation details.

1.

 **WARNING:**

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2.

Refer to: Front Muffler (309-00B, Removal and Installation).


Refer to: Front Muffler (309-00C, Removal and Installation).

3.

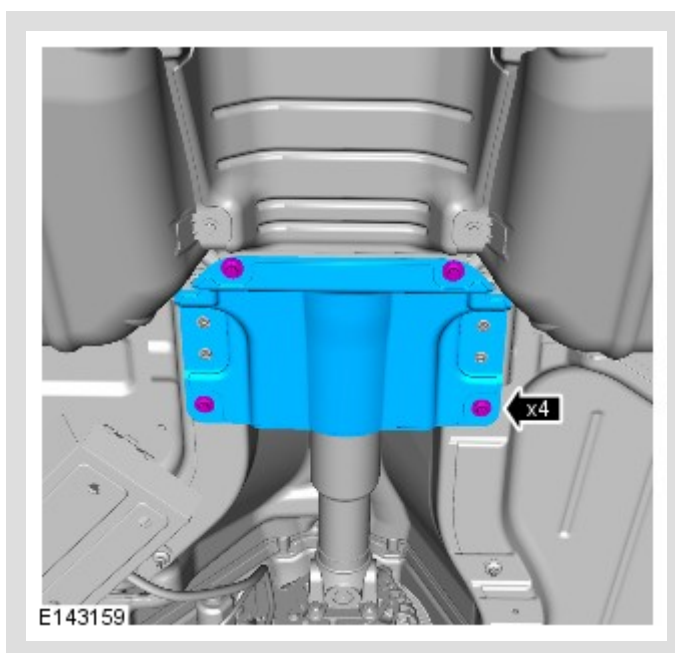

*Torque: 5 Nm*

4.

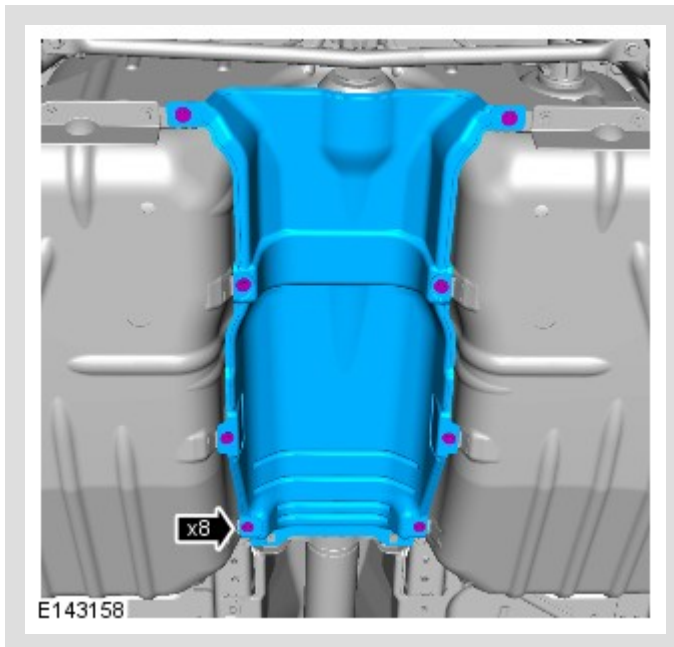


*Torque: 5 Nm*

5.



#### CAUTIONS:

- Mark the position of the driveshaft flange in relation to the drive pinion flange.
- To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.
- Make sure that new bolts are installed.

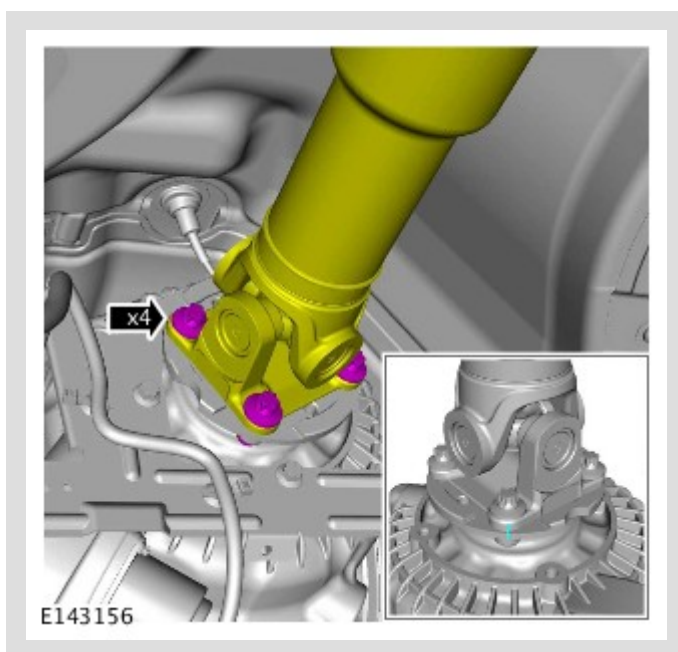


*Torque: 150 Nm*

6.

**⚠ CAUTION:**

To avoid damage to the joint or gaiter, do not allow the driveshaft to hang.

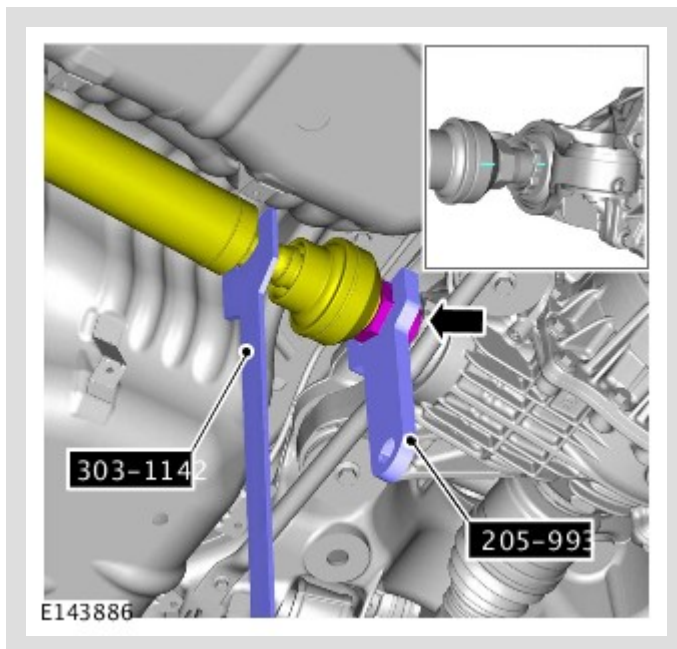


Special Tool(s): [JLR-205-993](#) , [303-1142](#)

7.




#### CAUTION:

Note the fitted position of the component prior to removal.

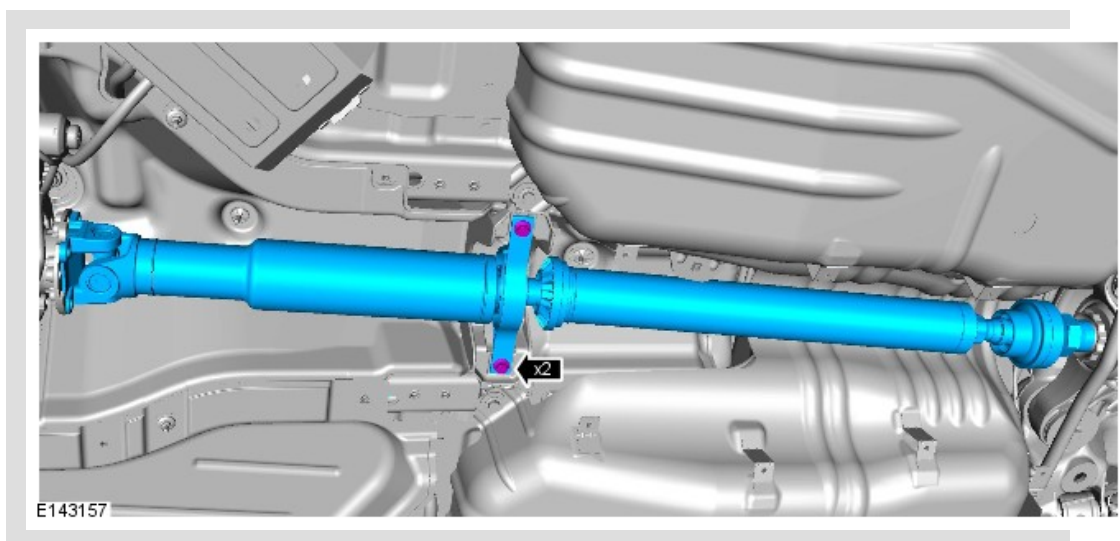

## INSTALLATION

1.

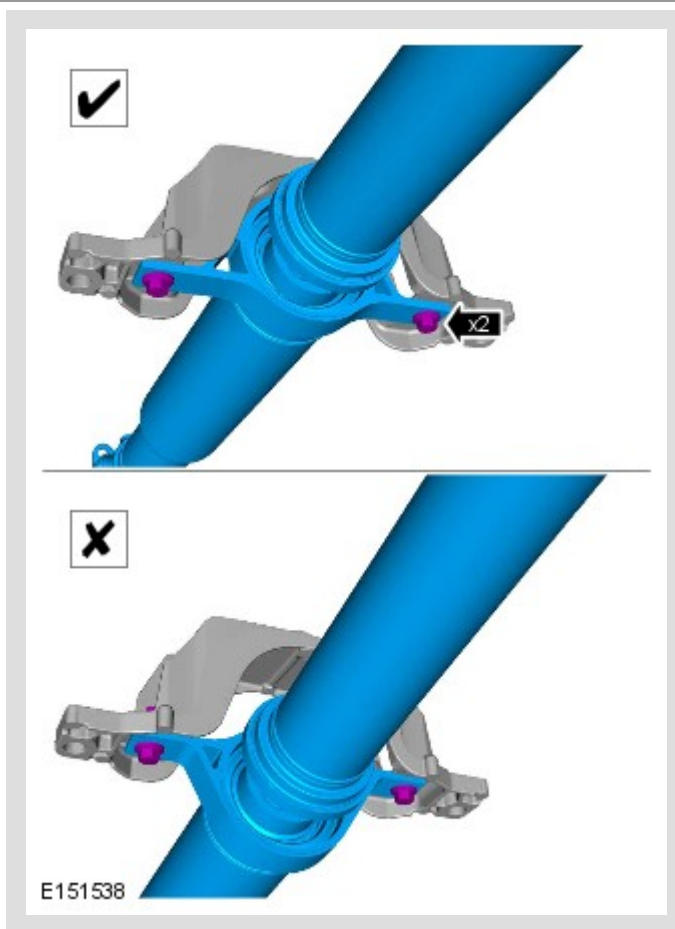


*Torque: 48 Nm*

2.

### ⓘ CAUTION:

Make sure the torque wrench setting procedure is followed correctly.  
Failure to follow this instruction may result in damage to the vehicle.

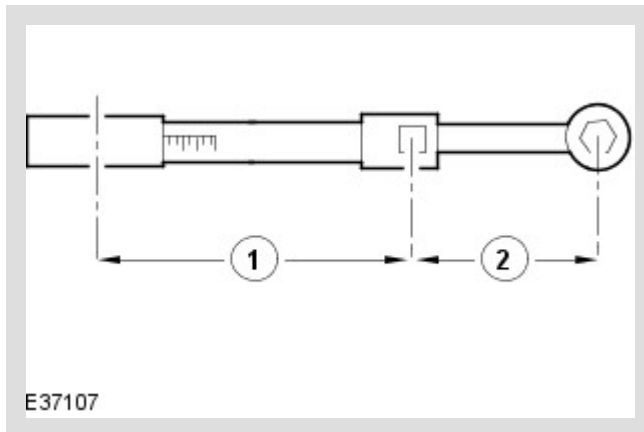

- Calculate the setting for the torque wrench:
- Stage 1: Multiply the required torque by the effective length of the torque wrench (1).
- Stage 2: Add the effective length of the special tool (2) to the effective length of the torque wrench.
- Stage 3: Divide the total of stage 1 by the total of stage 2.
- Stage 4: Set the torque wrench to the figure arrived at in stage 3.


3.



**CAUTION:**

Make sure the torque wrench setting procedure is followed correctly.  
Failure to follow this instruction may result in damage to the vehicle.



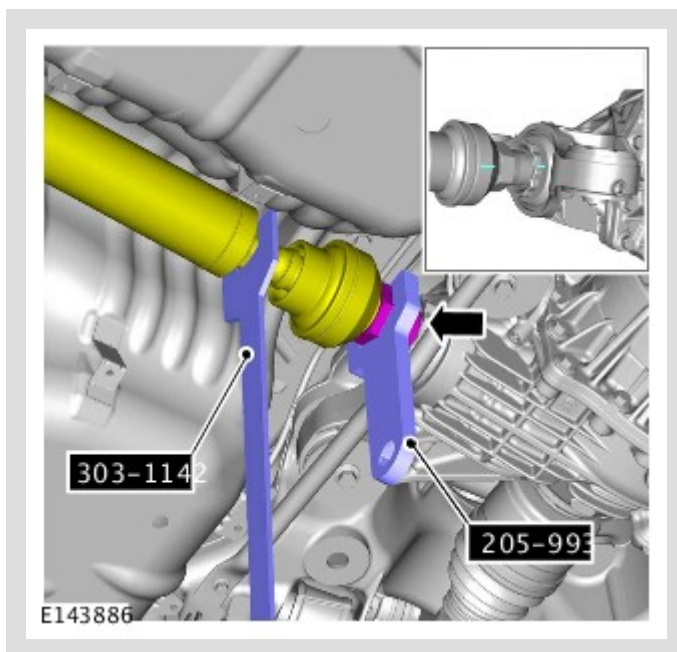

*Special Tool(s):* [JLR-205-993](#) , [303-1142](#)

*Torque:* **150 Nm**

- 
4. To install, reverse the removal procedure.