

2016.0 RANGE ROVER (LG), 205-03

FRONT DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL CASE (G1557046)

REMOVAL AND INSTALLATION

51.15.01	DIFFERENTIAL - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	3.9	USED WITHINS	+
----------	-------------------------	--	-----	-----------------	---

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.

1. Refer to: [Exhaust System - Vehicles With: Diesel Particulate Filter \(DPF\)](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Exhaust System - Vehicles Without: Diesel Particulate Filter \(DPF\)](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Exhaust System - Vehicles With: Diesel Particulate Filter](#)

(DPF) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).

Refer to: [Diesel Particulate Filter - Vehicles Without: Diesel Exhaust Fluid](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).

Refer to: [Exhaust System](#) (309-00C Exhaust System - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

2. Refer to: [Front Driveshaft - TDV6 3.0L Diesel](#) (205-01 Driveshaft, Removal and Installation).


Refer to: [Front Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Front Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (205-01 Driveshaft, Removal and Installation).

3. Refer to: [Front Left Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).

4. Refer to: [Front Right Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).


5.

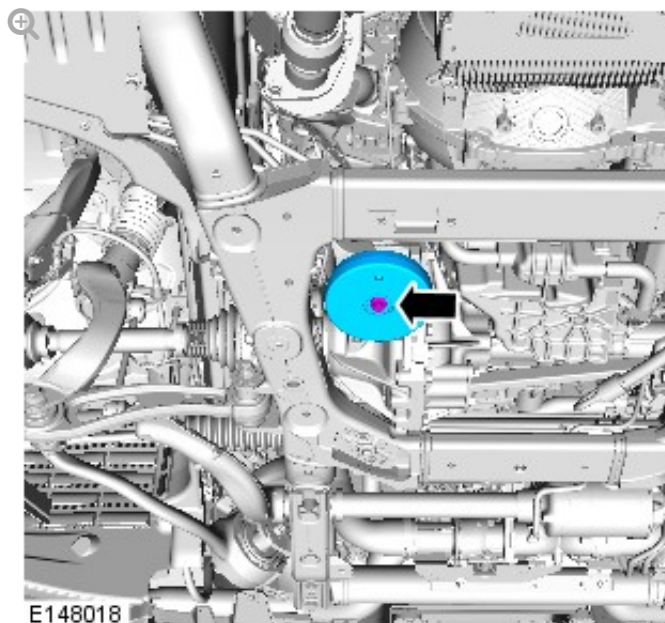

6.

NOTE:


If equipped.

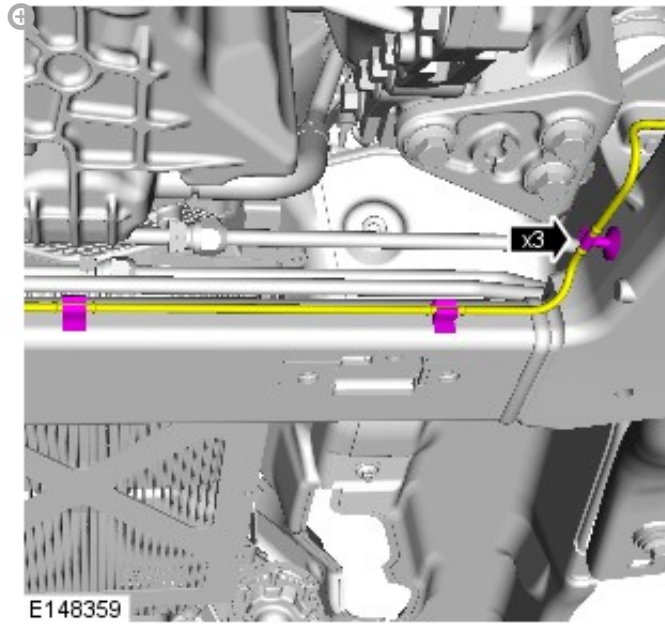


7.

NOTE:


If equipped.

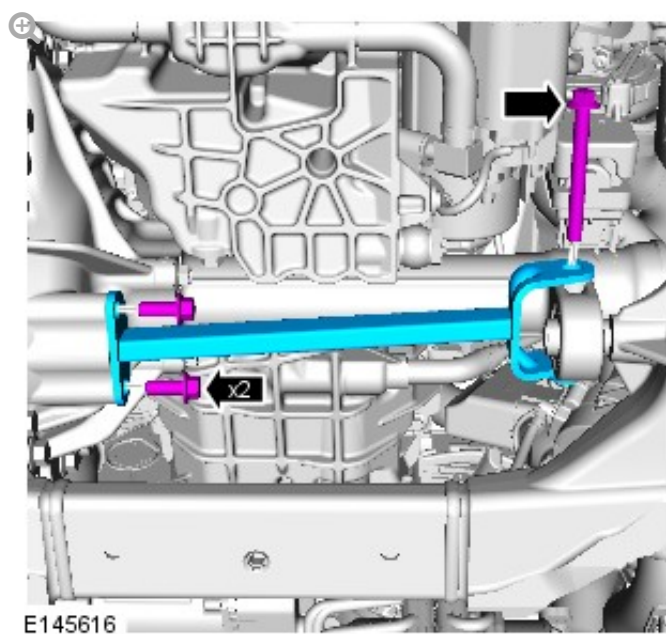

8.

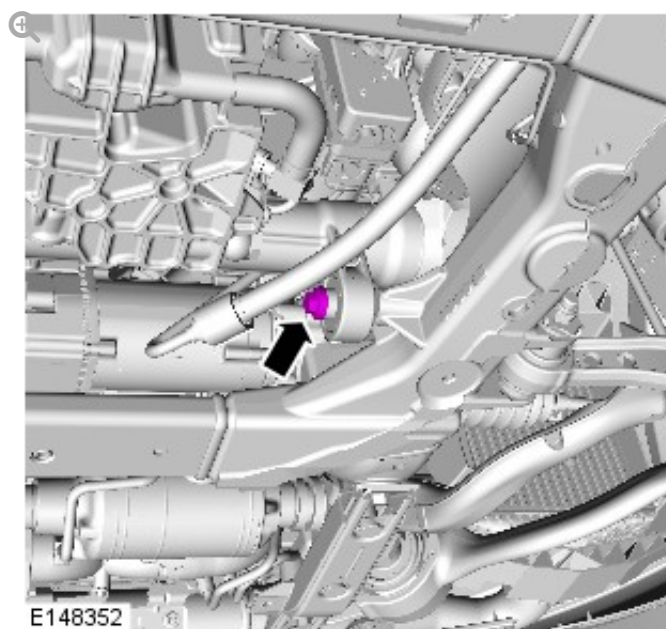

9.

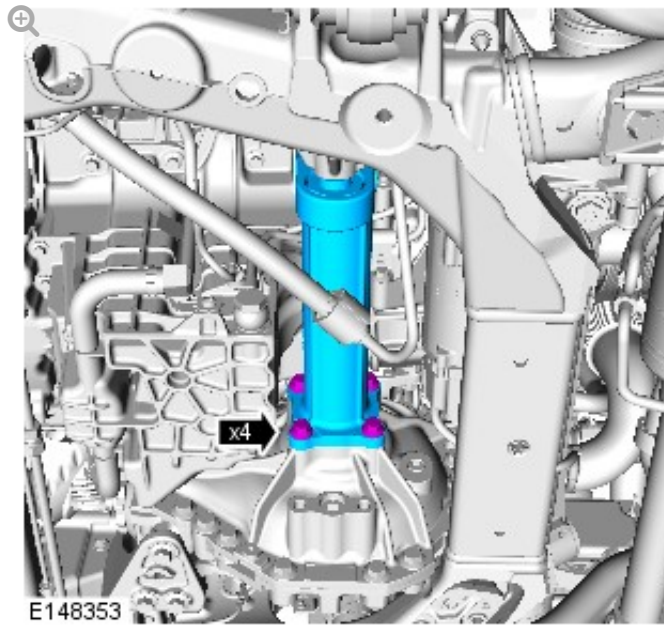

10. Using a transmission jack, support the differential.


11.

CAUTION:

Discard the bolt.


NOTE:

Left hand drive only.

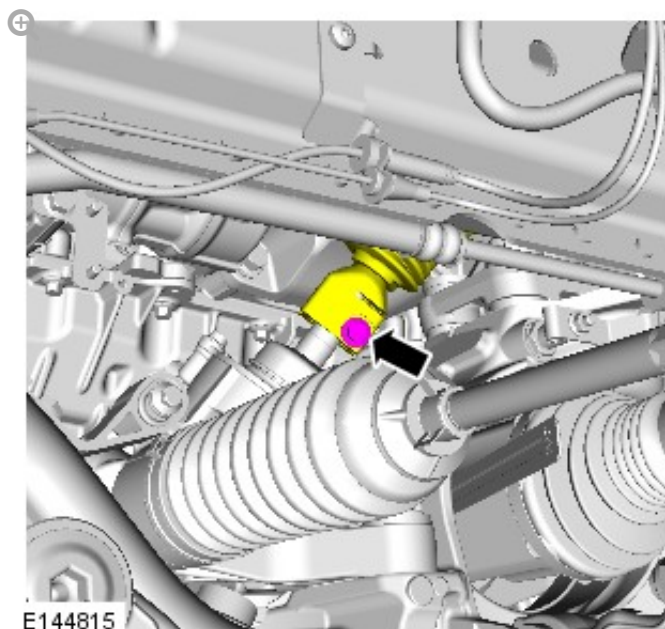

Align the steering wheel to straight ahead.

12.

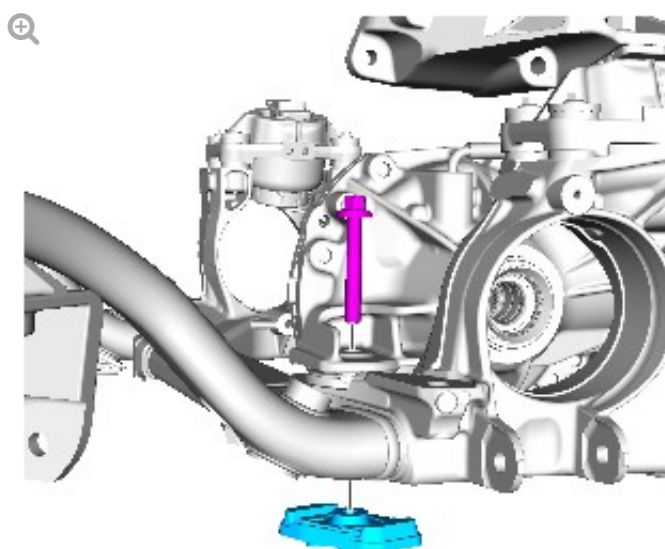


E148354

13.

CAUTION:


Discard the bolt.

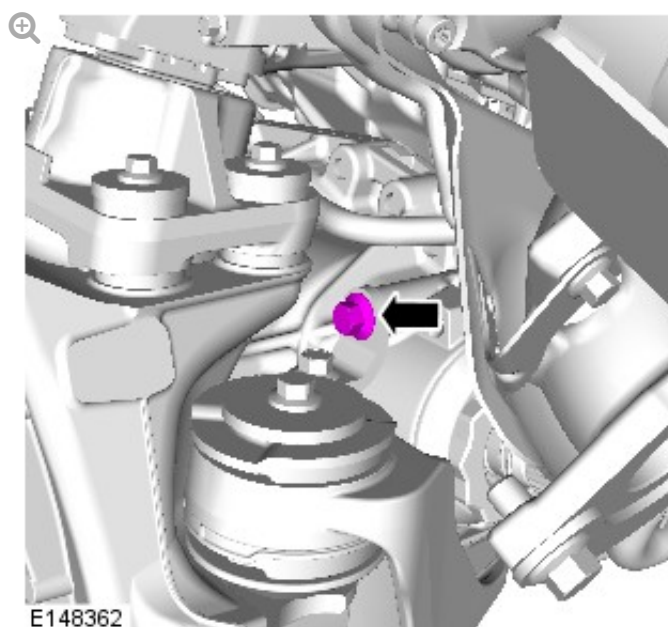

14.

CAUTION:


Discard the bolt.

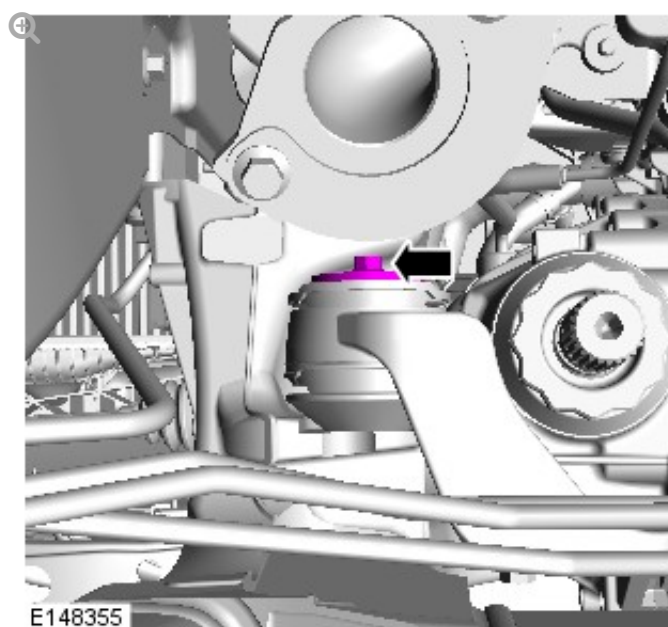

15.


CAUTION:

Discard the bolts.

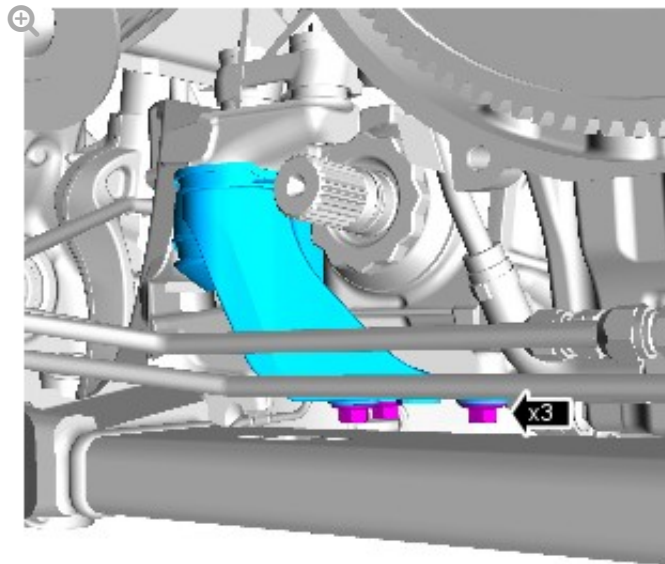

E148356

16.

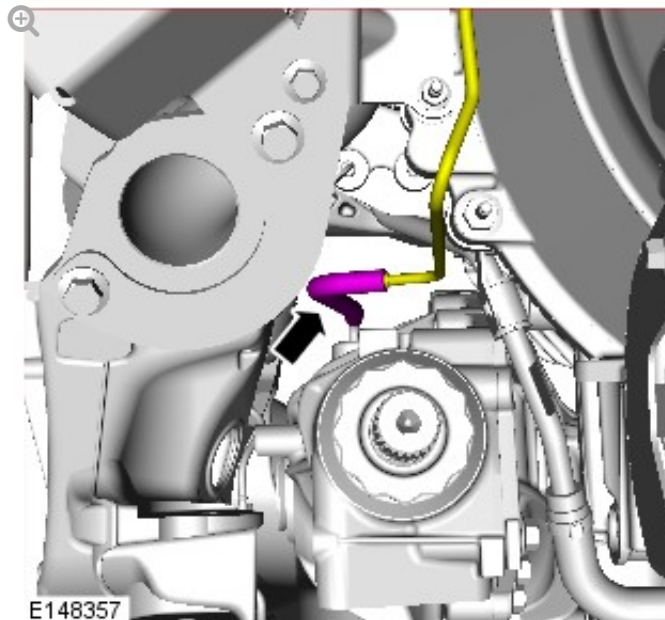


E148357

17.

NOTE:

With assistance remove the component.

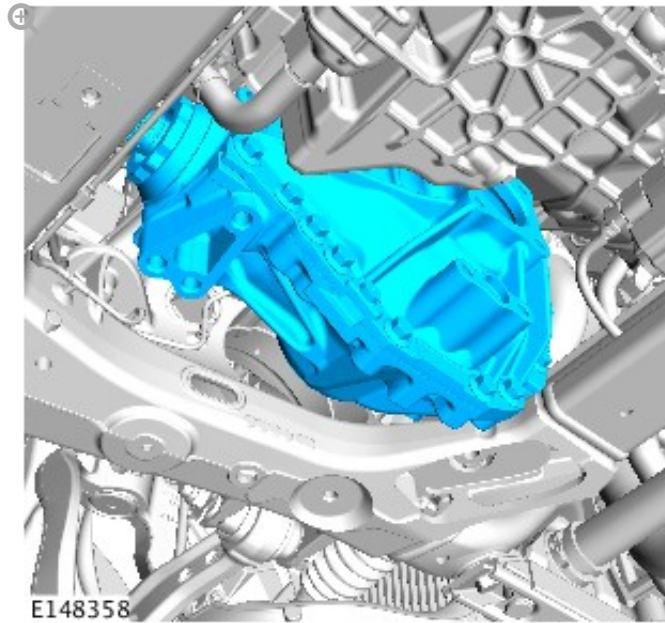


INSTALLATION


1.

NOTE:

With assistance, install the component.

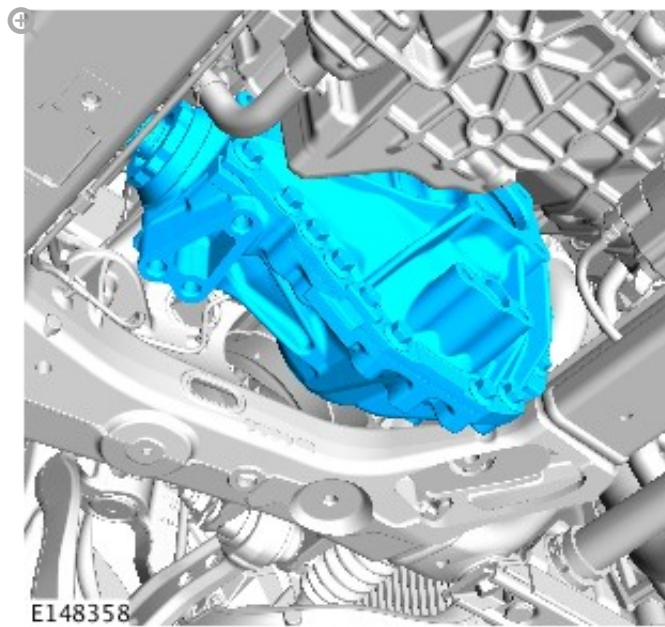


2.

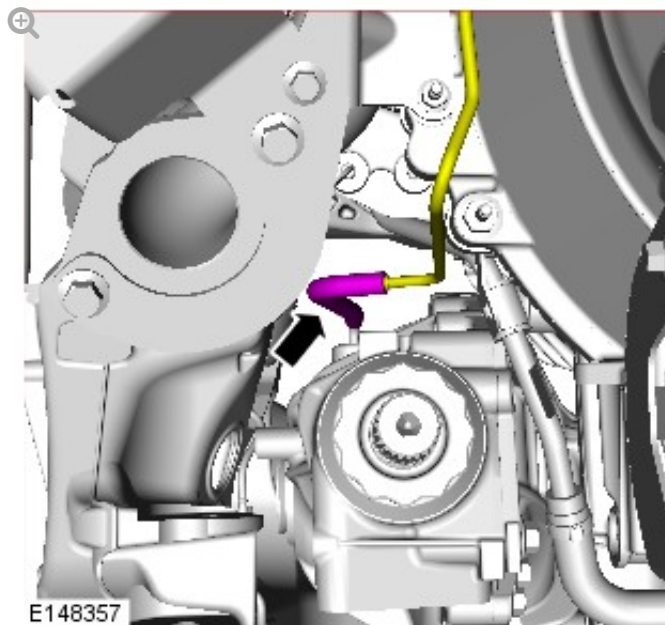

3.

CAUTIONS:

- Make sure that new bolts are installed.
- Only tighten the bolts finger-tight at this stage.

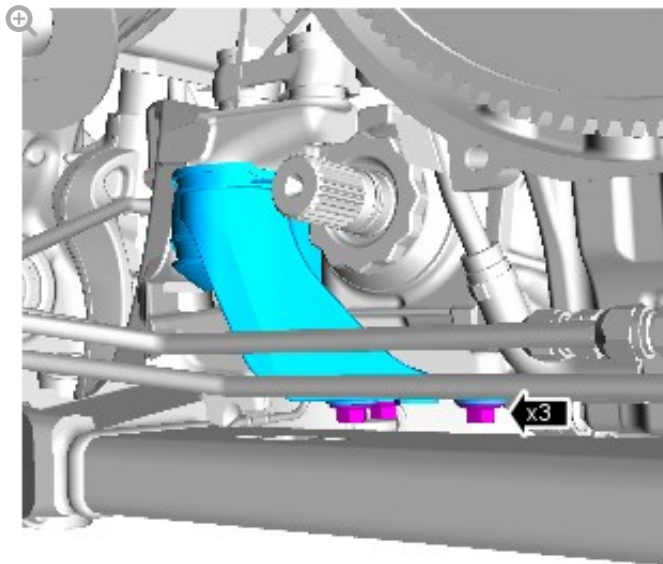


E148356

4.

CAUTIONS:

- Make sure that a new bolt is installed.
- Install the bolt finger tight.

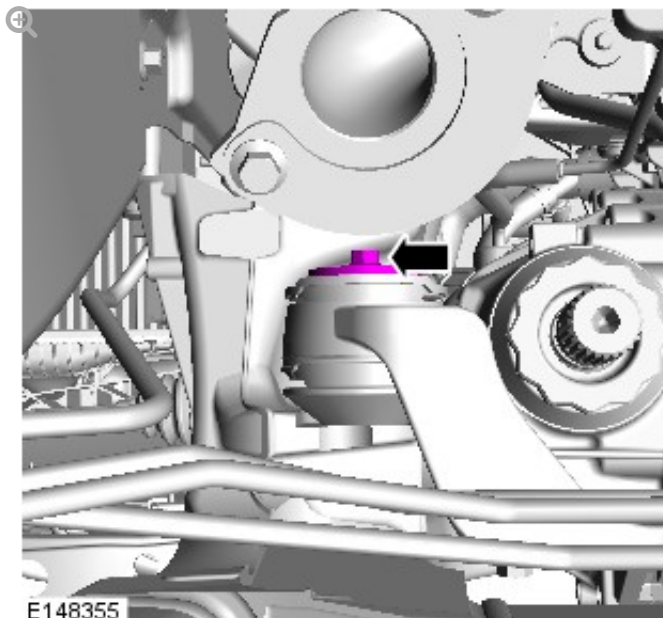


E148355

5.

CAUTIONS:


- Make sure that a new bolt is installed.
- Install the bolt finger tight.

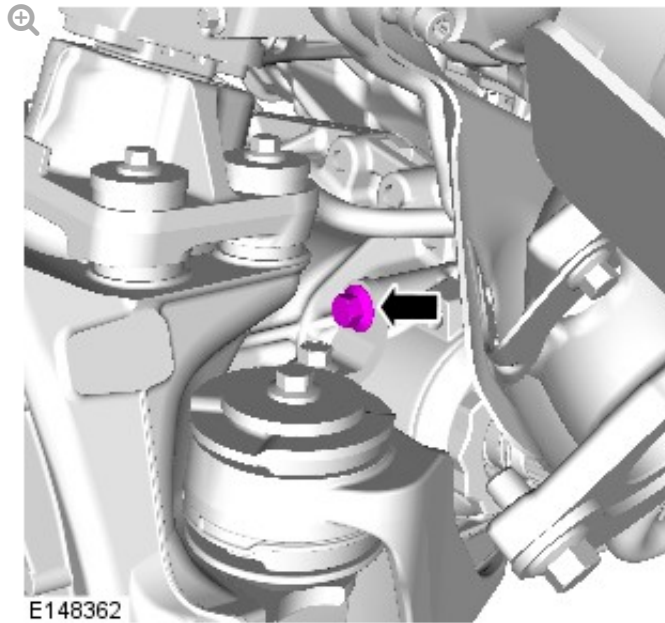

6.


CAUTION:

Install the bolt finger tight.

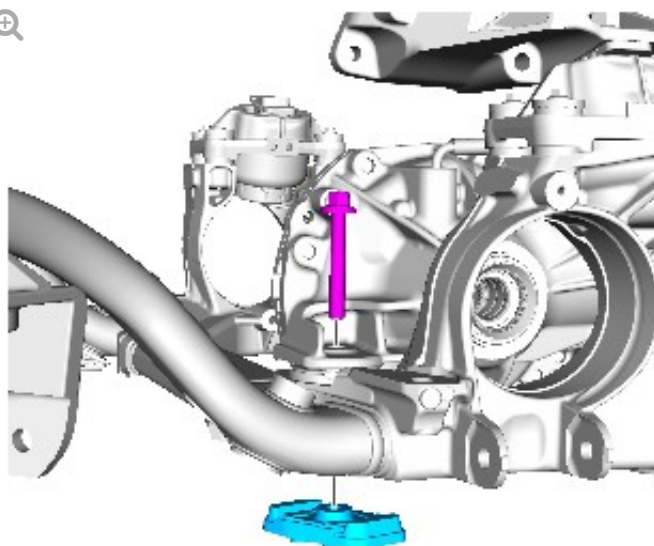

E148354


7.

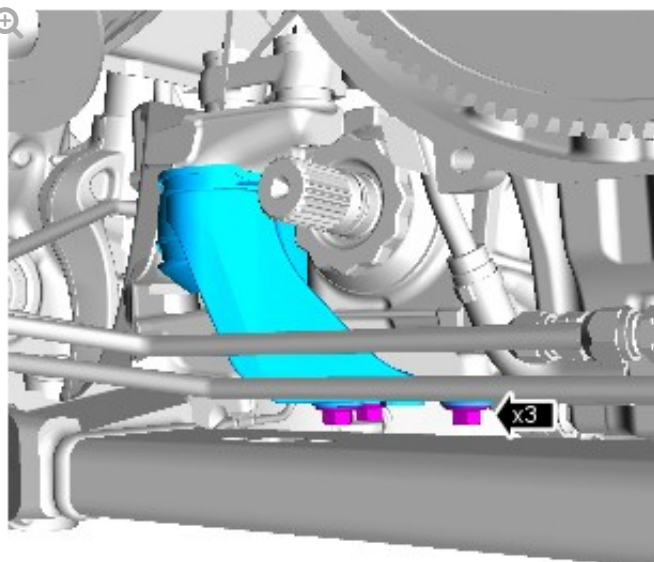

E148356


Torque: 125 Nm

8.

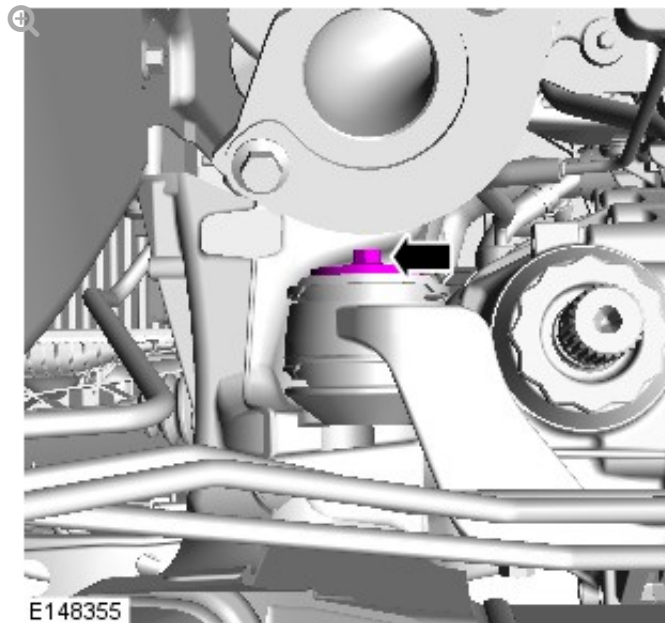

Torque: 60 Nm

9.


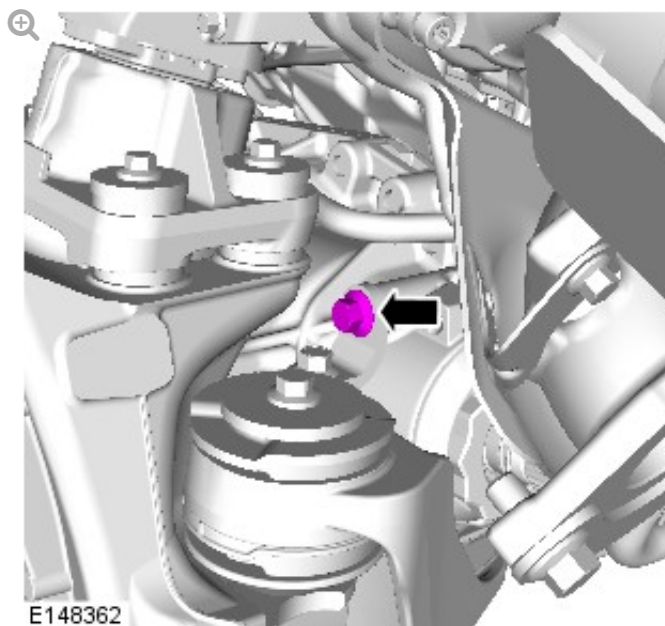


Torque: 77 Nm

10.

NOTE:

Make sure that the component is installed with the correct orientation, as shown.

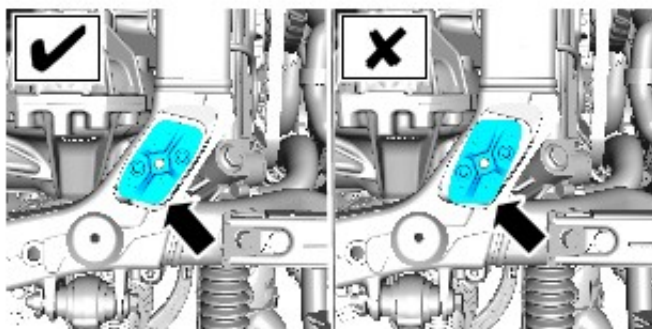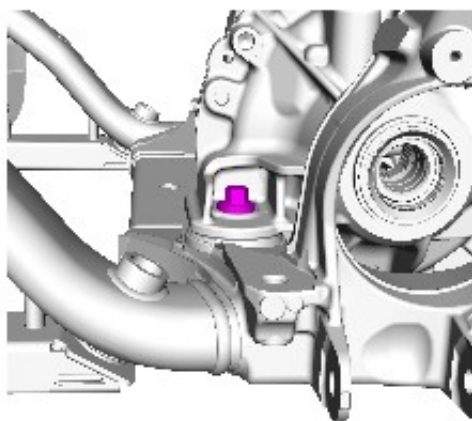

E148361

Torque: 110 Nm


11.

CAUTION:

Make sure that a new bolt is installed.

NOTE:

Left hand drive only.

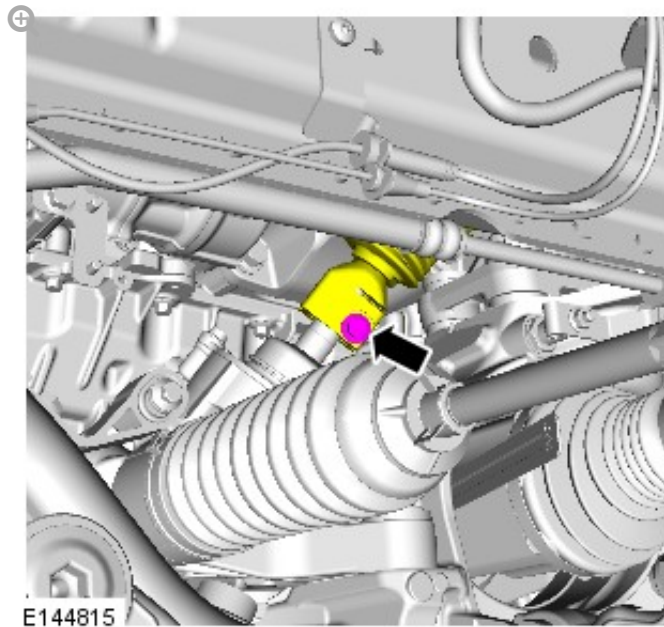

Using a suitable tool, clean out the threads.

Torque: 30 Nm

12. Remove the transmission jack.


- 13.

CAUTION:

Make sure all mating faces are clean and dry before applying sealant.


NOTE:

Apply silicone gasket sealant or equivalent meeting Land Rover specification.

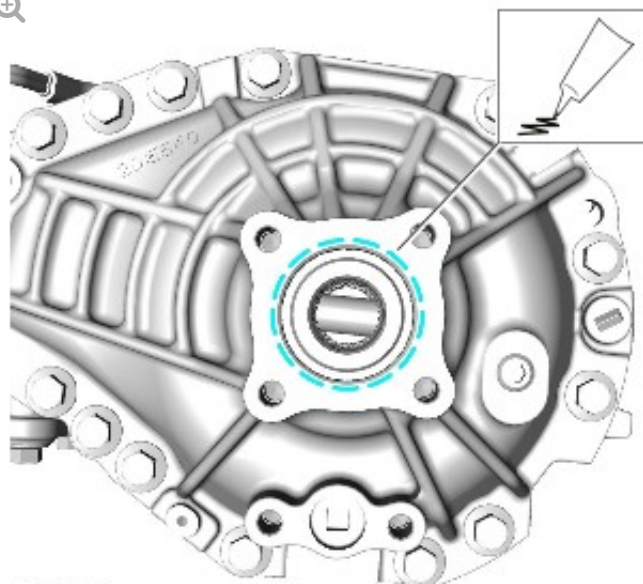

E148360


14.

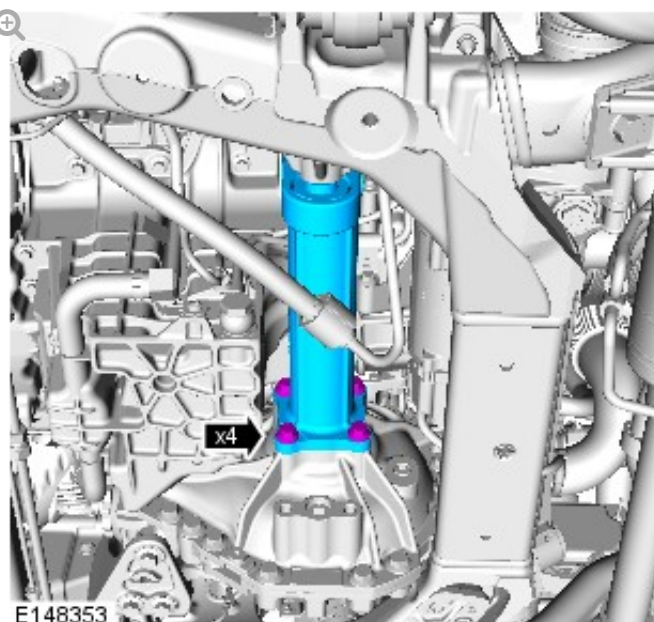

E148353

Torque: 45 Nm

15.

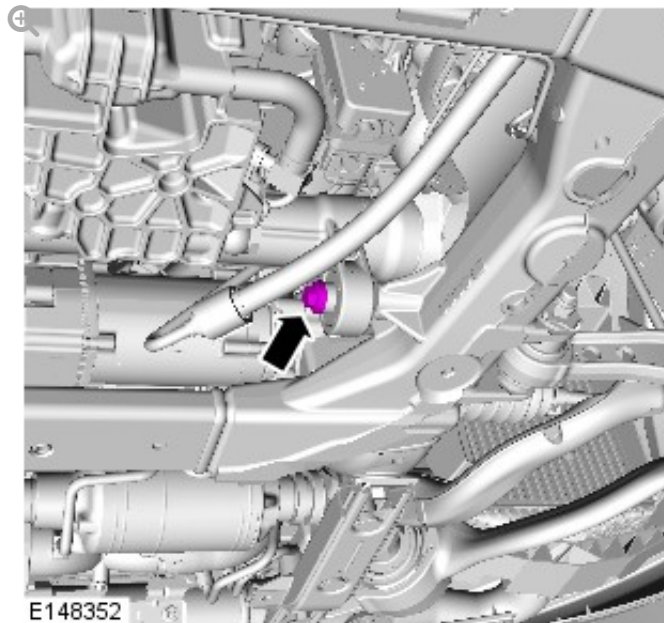


Torque: 60 Nm

16.

NOTE:

If equipped.

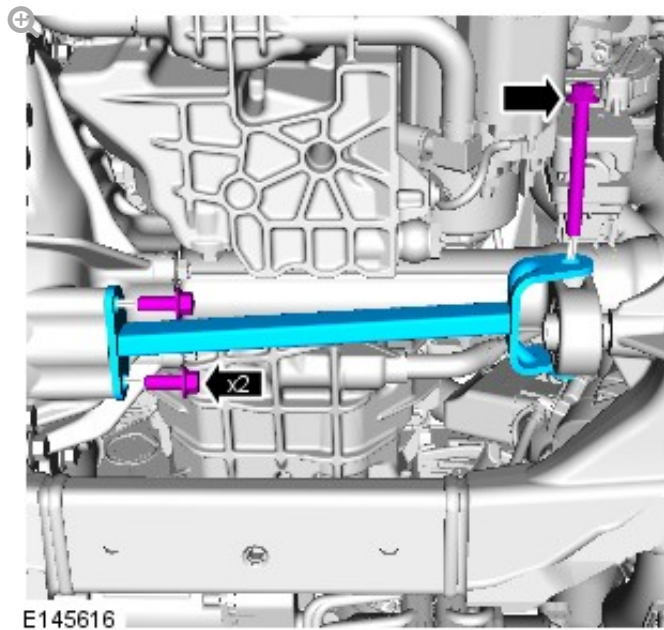


Torque: 50 Nm


17.

NOTE:

If equipped.

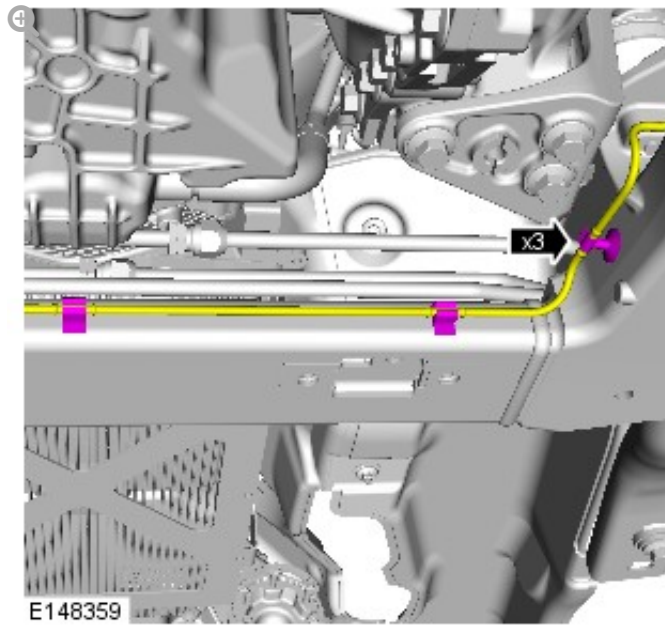

18.

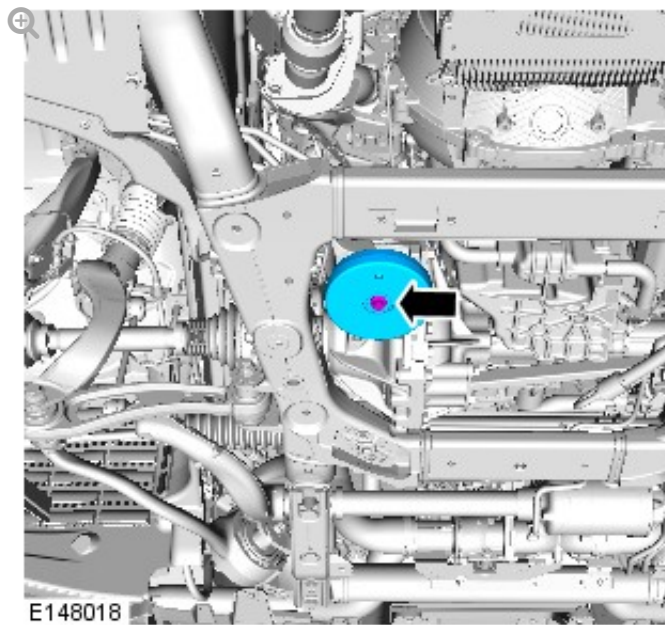

Torque: 45 Nm

19. Refer to: [Front Right Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).

20. Refer to: [Front Left Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).
21. Refer to: [Front Driveshaft - TDV6 3.0L Diesel](#) (205-01 Driveshaft, Removal and Installation).
Refer to: [Front Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).
Refer to: [Front Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (205-01 Driveshaft, Removal and Installation).
22. Refer to: [Exhaust System - Vehicles With: Diesel Particulate Filter \(DPF\)](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Exhaust System - Vehicles Without: Diesel Particulate Filter \(DPF\)](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Exhaust System - Vehicles With: Diesel Particulate Filter \(DPF\)](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).
Refer to: [Diesel Particulate Filter - Vehicles Without: Diesel Exhaust Fluid](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).
Refer to: [Exhaust System](#) (309-00C Exhaust System - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).
23. If a new differential is installed, fill with the recommended lubricant.
Refer to: [Differential Draining and Filling](#) (205-03 Front Drive Axle/Differential, General Procedures).