

2016.0 RANGE ROVER (LG), 205-04

FRONT DRIVE HALFSHAFTS

FRONT LEFT HALFSHAFT

[G1509017]

REMOVAL AND INSTALLATION

47.10.01	SHAFT WITH BOTH JOINTS - RENEW	ALL DERIVATIVES	1.3	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

SPECIAL TOOL(S)



JLR-204-793

Ball joint separator



JLR-204-506/1

Halfshaft
remover/replacer




JLR-204-506/2

Halfshaft
remover/replacer



JLR-204-506/3

Halfshaft
remover/replacer

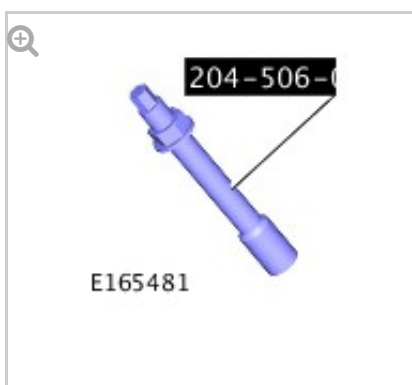

JLR-204-506-02

Halfshaft installer
adapter



JLR-204-506/5

Retainers - halfshaft remover/replacer



JLR-308-005

Axle oil seal remover



JLR-100-012

Impulse extractor



JLR-308-626/2

Installer/Guide halfshaft oil seal



JLR-308-626/1

Installer halfshaft oil seal



JLR-204-803

Splitter, Upper Arm

REMOVAL

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

-
2. For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3. For additional information, refer to: [Differential Draining and Filling](#) (205-03 Front Drive Axle/Differential, General Procedures).


4.

CAUTION:


Do not use air tools to remove the half shaft nut.

NOTES:


- Retain the nut for the installation procedure.
- Apply the brake pedal during the removal and installation of the half shaft retaining nut.

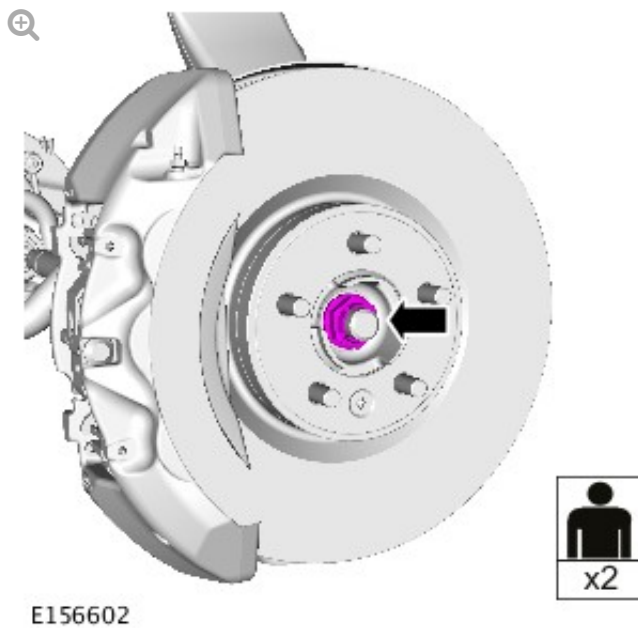


5.

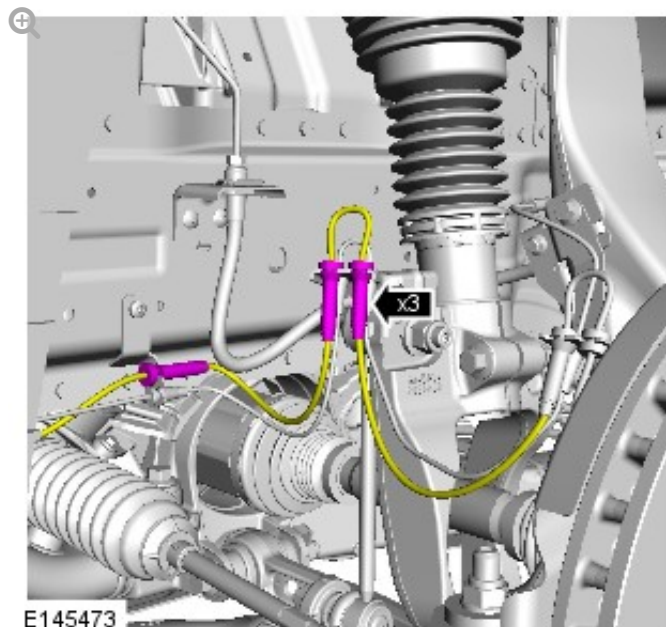

6.

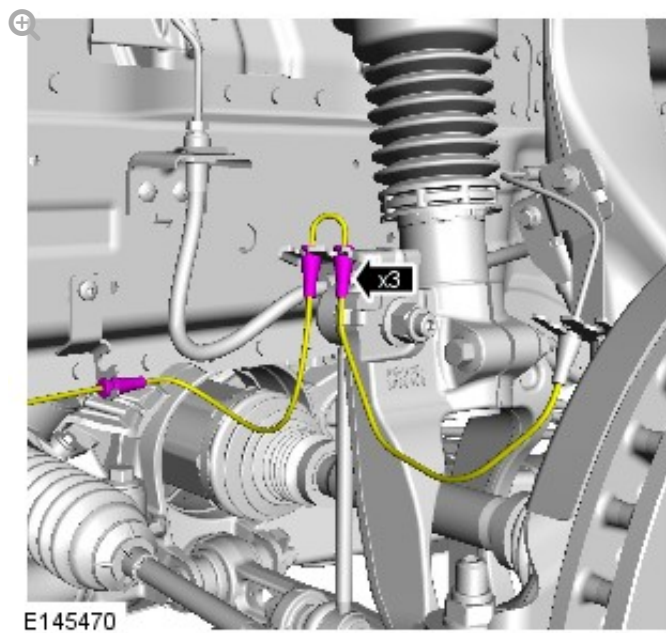


7.

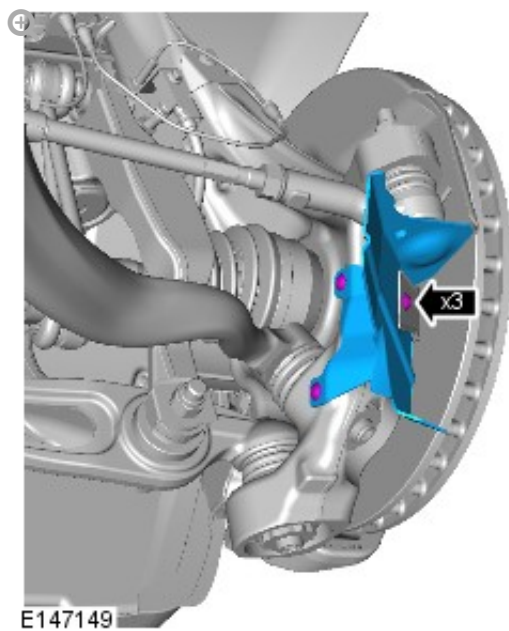


8.

NOTE:

Loosen but do not fully remove.

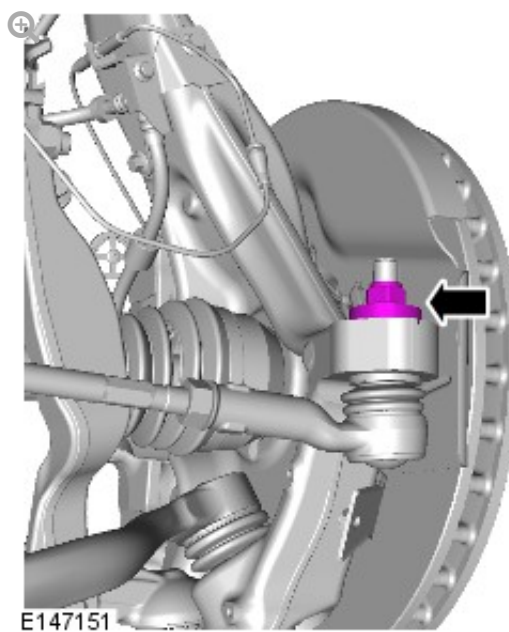

9.

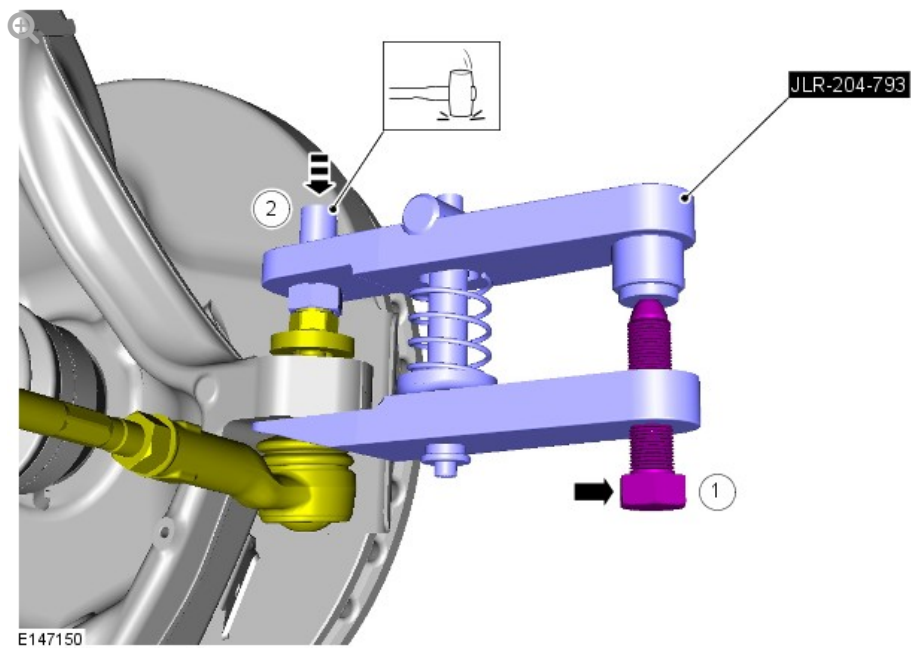

1.

CAUTION:

Do not keep turning the bolt to release the joint.

TORQUE: 60 Nm

2.


CAUTION:

Strike the outside of the contact pin with a suitable hammer to shock the joint.


10.

NOTE:

Remove and discard nut.

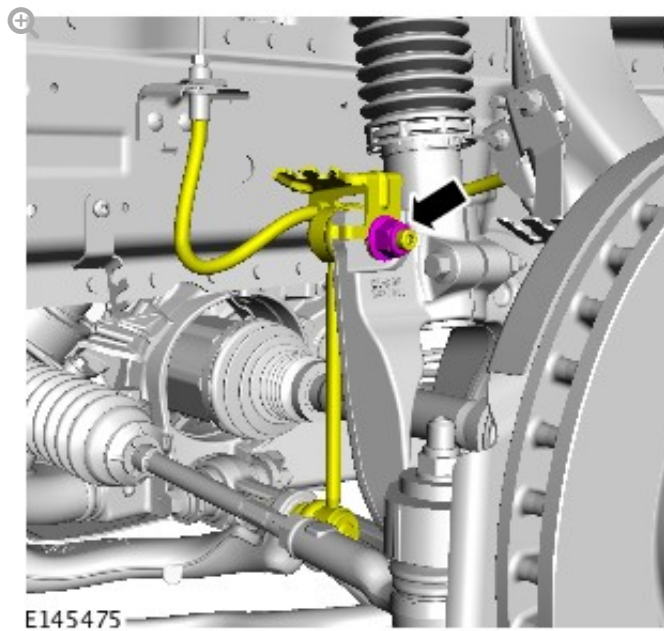


11.

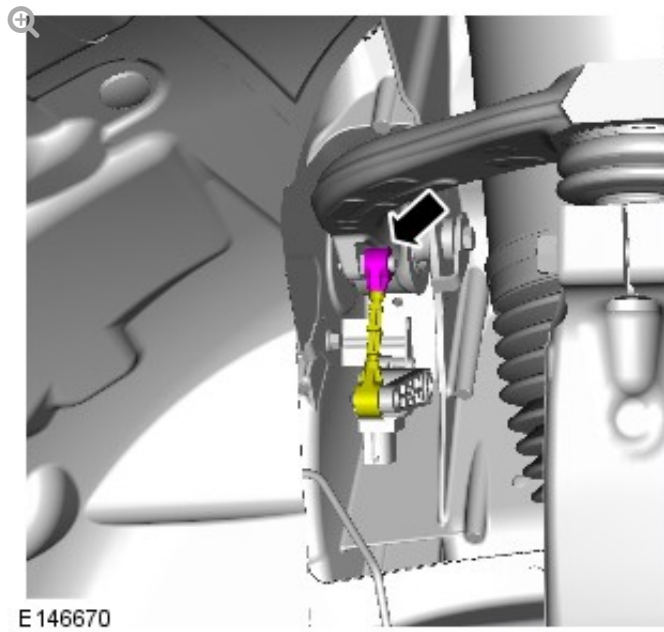

12.


CAUTION:

Discard the nut and bolt.

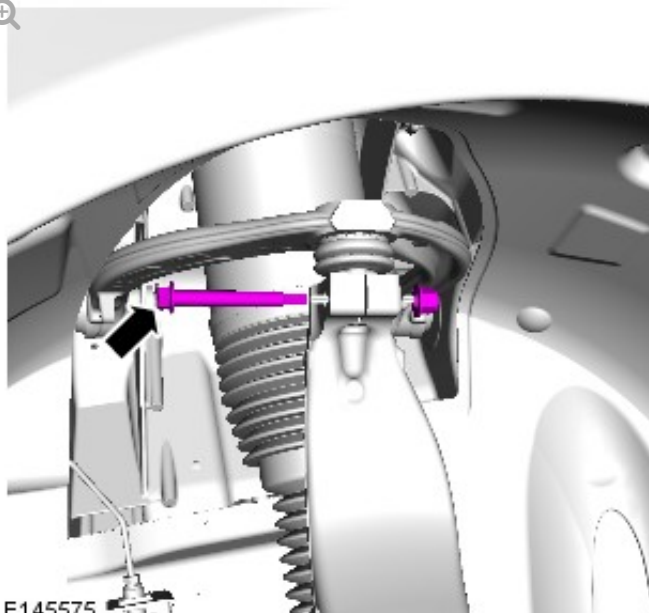

E145575

13.

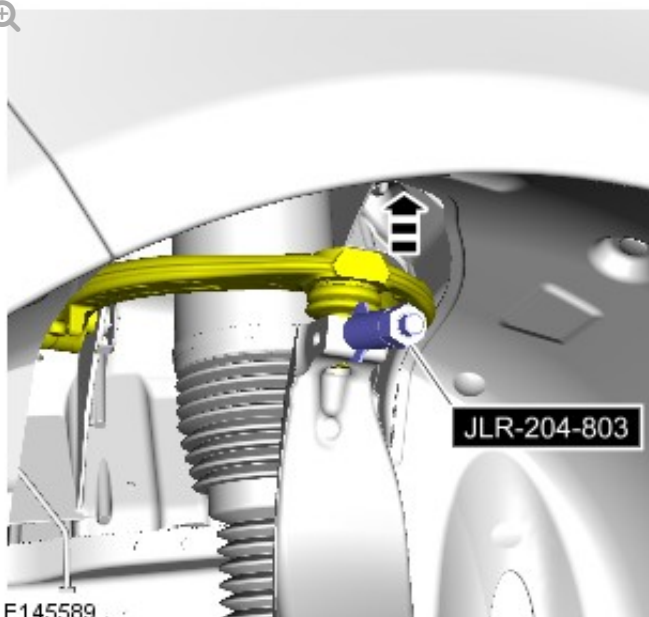


JLR-204-803

E145589

14.

CAUTIONS:


- The lower arm ball joint can be damaged by excessive articulation. The wheel knuckle must be fully supported at all times. Do not allow the wheel knuckle to hang on the lower arm. Failure to follow this instruction will result in damage to vehicle.
- Do not use a hammer to detach the halfshaft from the hub assembly, failure to follow this instruction may result in damage to the halfshaft.
- Make sure halfshaft gaitors are not damaged as shaft is removed from vehicle.

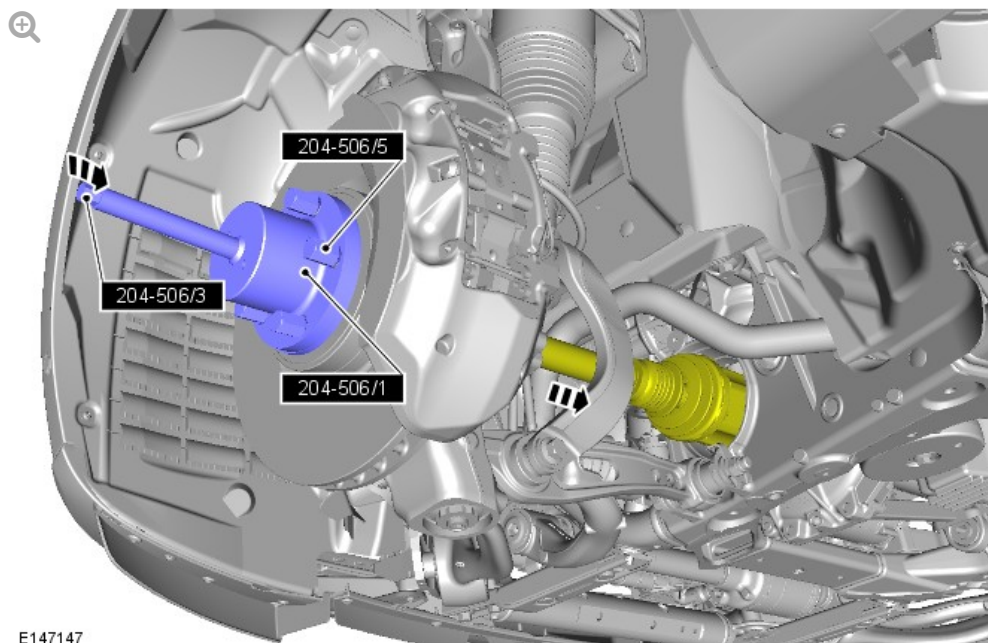


15.

CAUTION:


Make sure halfshaft gaitors are not damaged as shaft is removed from vehicle.

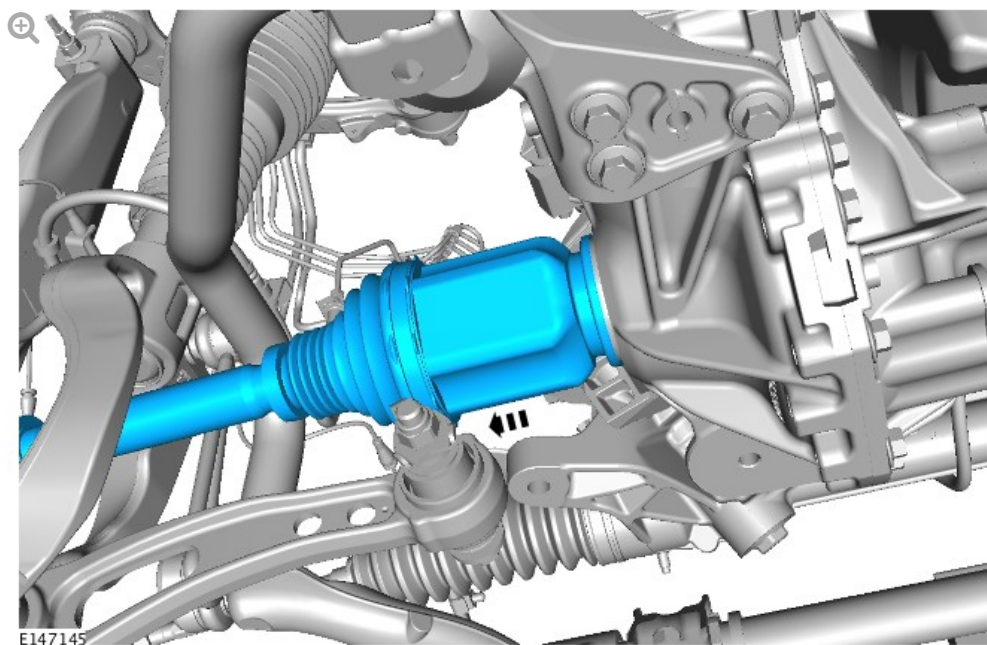

16.

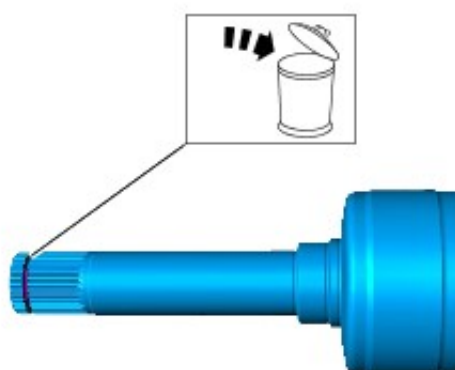

17.

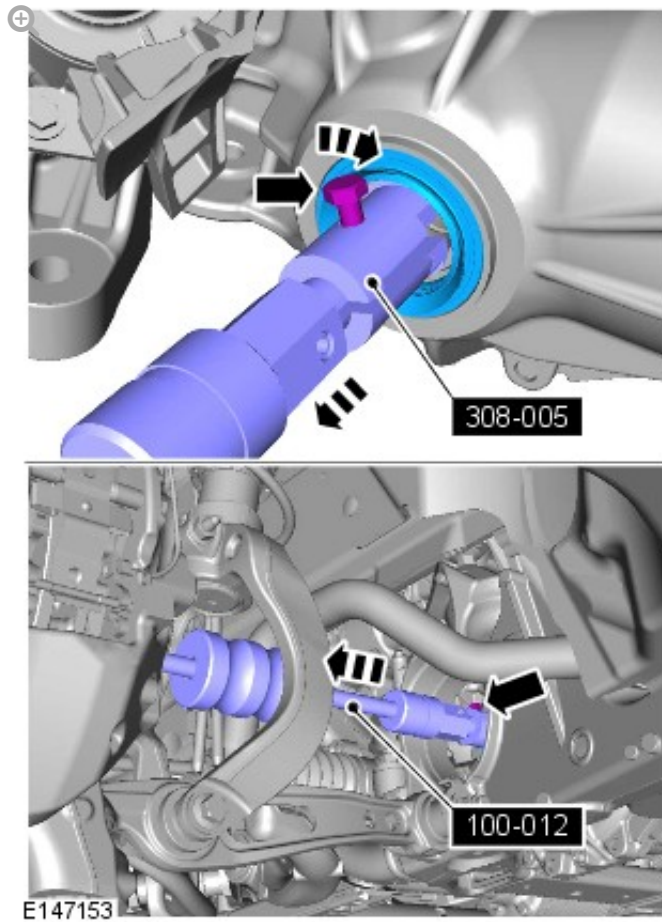


INSTALLATION

1.

CAUTION:

The seal protector must be left in place until the halfshaft has been installed.

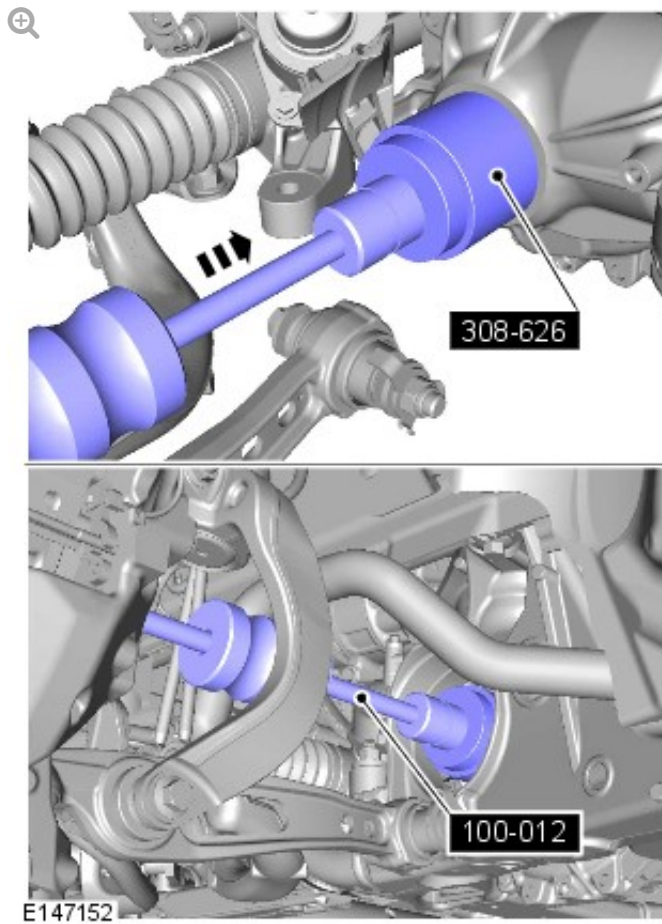


Using the special tools, install a new halfshaft seal.

- Clean the component mating faces.

2.

NOTE:

Make sure that a new circlip is to be installed.

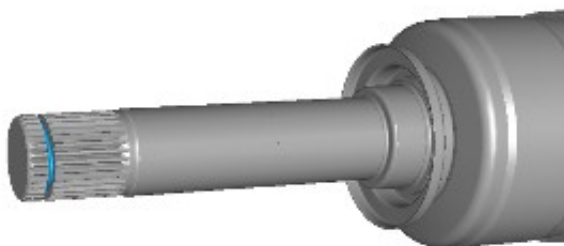


E148814

3.

CAUTION:


Pull on the halfshaft inboard joint to make sure the clip has fully engaged and retains the halfshaft inboard joint within the differential case.

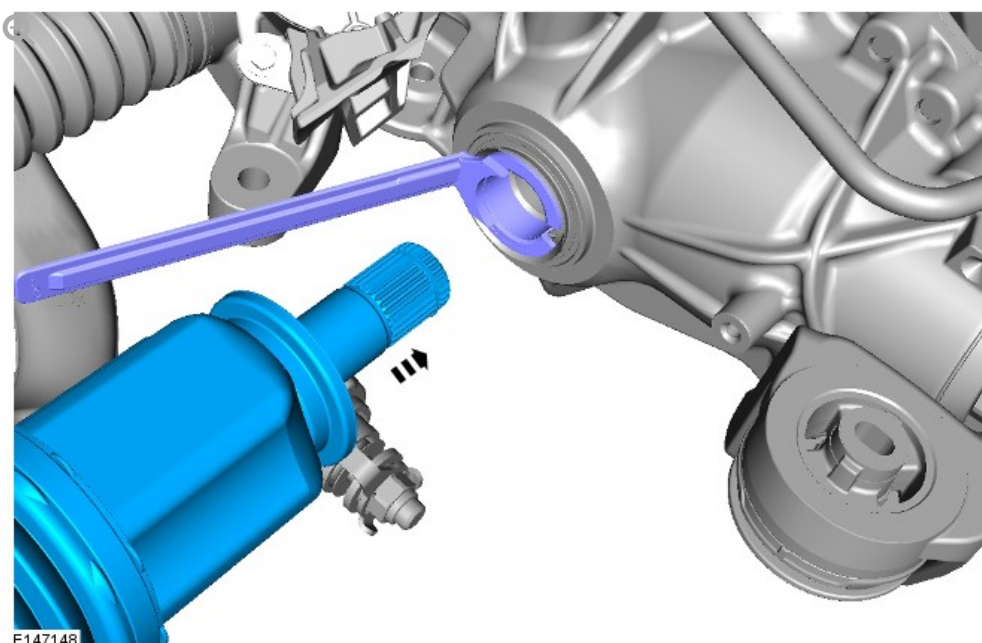

E147148

- Lubricate the oil seal.


4.

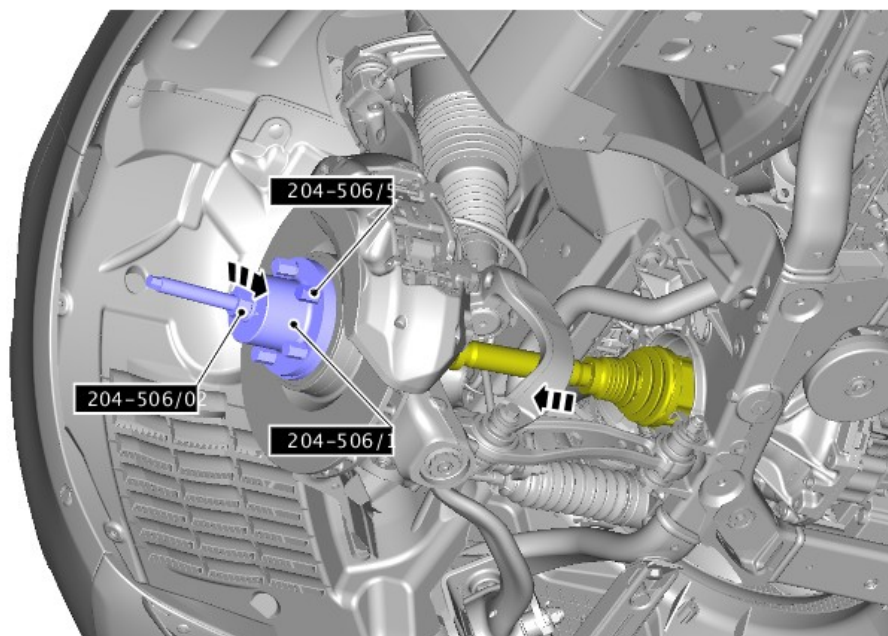

E147144


Using the special tools, pull the halfshaft in to the wheel hub.

5.

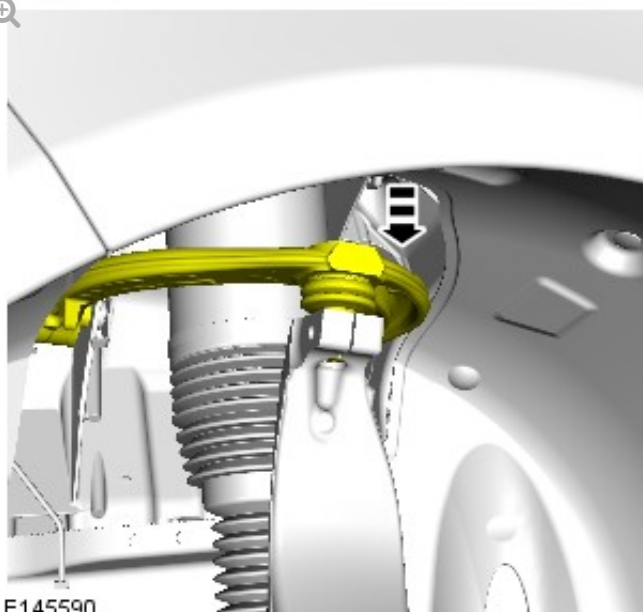


E145590

6.

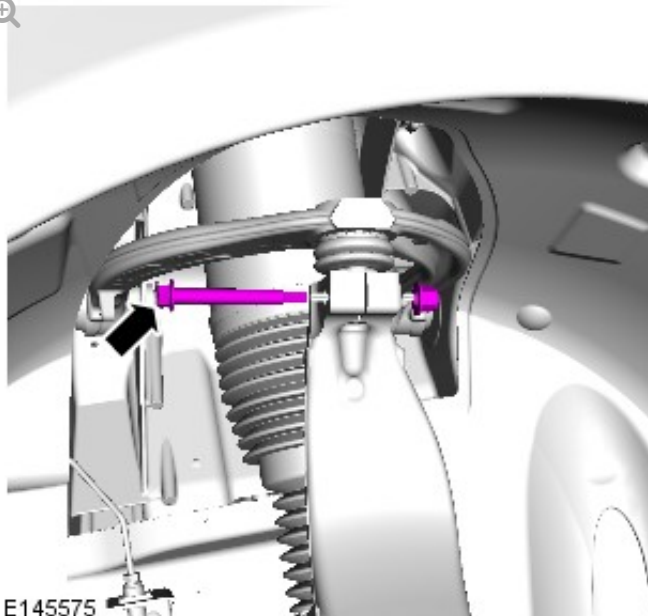

TORQUE: 70 Nm


7.

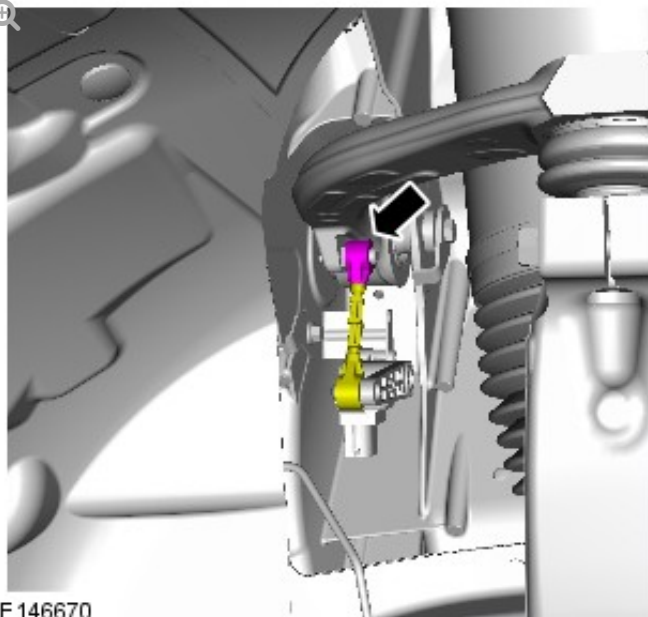

8.

CAUTIONS:

- Nuts must be tightened with vehicle at normal ride height.
- Install a new nut.

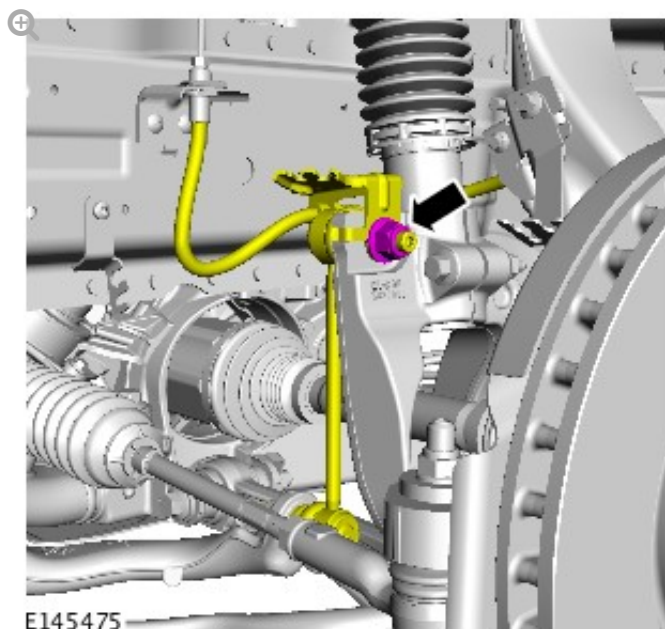


TORQUE: 185 Nm

9.


CAUTION:

Install a new nut.

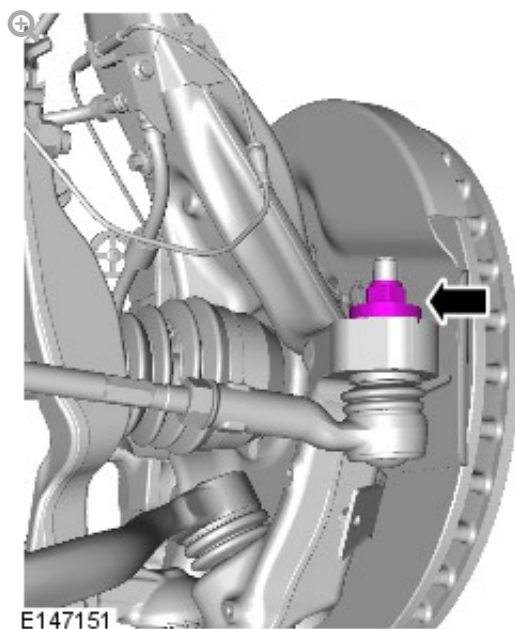


TORQUE: 140 Nm

10.

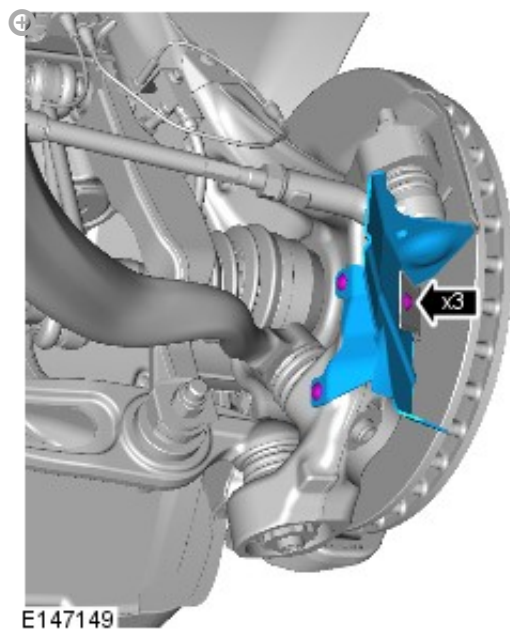


TORQUE: 10 Nm

11.

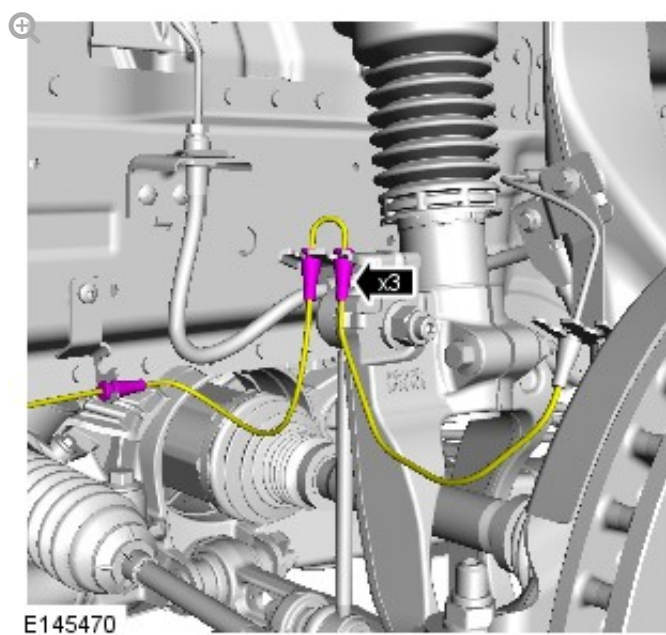


12.

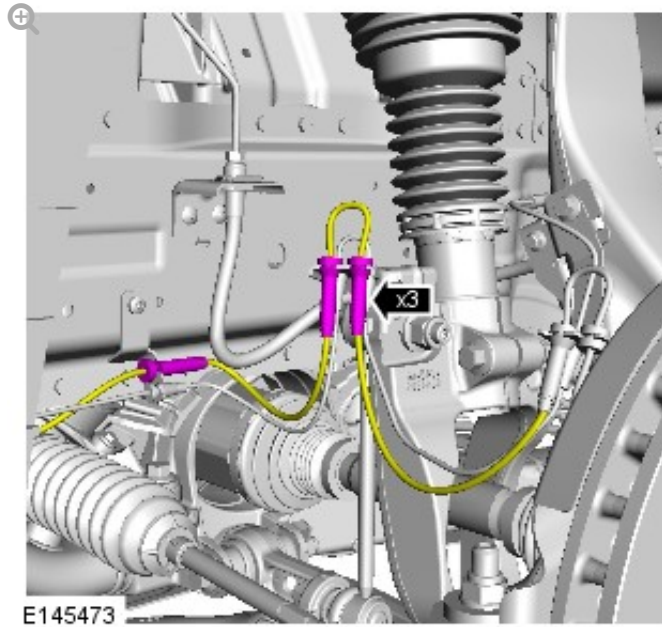

13.

NOTE:

Apply the brake pedal during the removal and installation of the half shaft retaining nut.

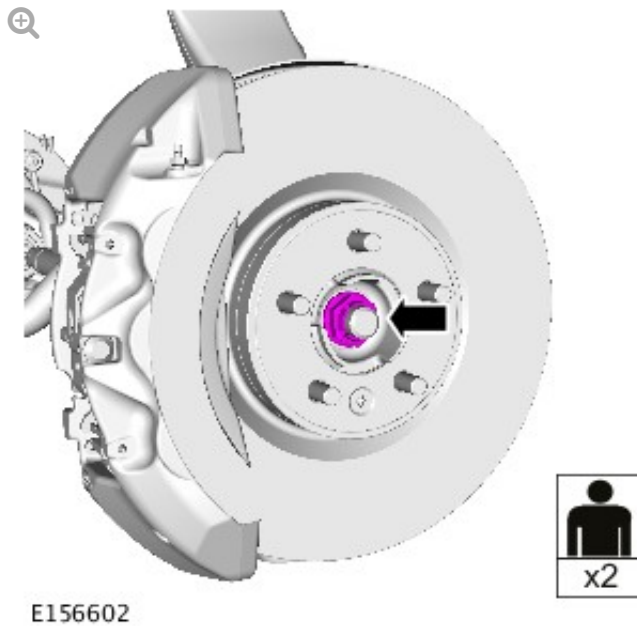

TORQUE: 290 Nm


14.

CAUTION:

Do not use air tools to remove the half shaft nut.

NOTE:


Discard the nut.

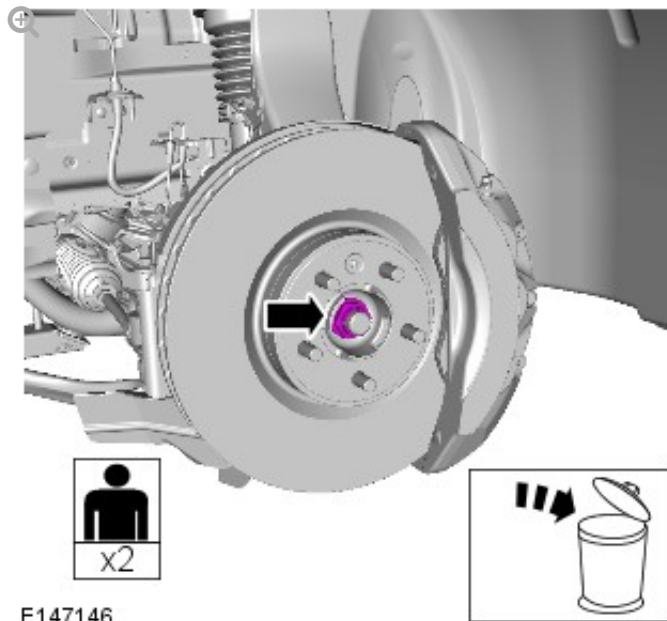

15.

CAUTION:

Install a new nut.

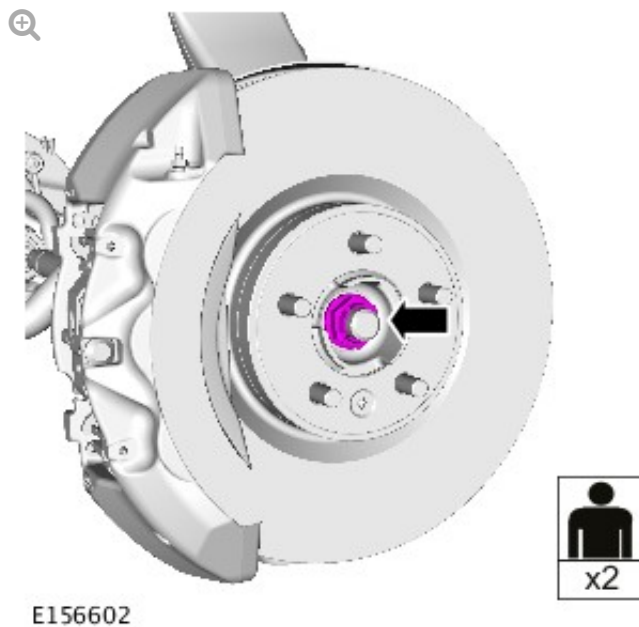

E156602

TORQUE: 120 Nm + 60° degrees

-
16. For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).