

2016.0 RANGE ROVER (LG), 205-04

FRONT DRIVE HALFSHAFTS

FRONT RIGHT HALFSHAFT

[G1509019]

REMOVAL AND INSTALLATION

47.10.02	SHAFT WITH BOTH JOINTS - RH - RENEW	ALL DERIVATIVES	1.8	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

SPECIAL TOOL(S)



JLR-204-793
Ball joint separator



JLR-204-506/1

Halfshaft
remover/replacer




JLR-204-506/2

Halfshaft
remover/replacer



JLR-204-506/3

Halfshaft
remover/replacer

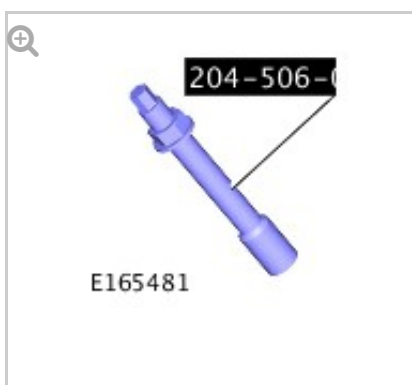

JLR-204-506-02

Halfshaft installer
adapter



JLR-204-506/5

Retainers - halfshaft remover/replacer



JLR-308-005

Axle oil seal remover



JLR-100-012

Impulse extractor



JLR-308-626/2

Installer/Guide halfshaft oil seal



308-626/1



E54136

JLR-308-626/1


Installer halfshaft oil seal



E145966

JLR-204-803

Splitter, Upper Arm

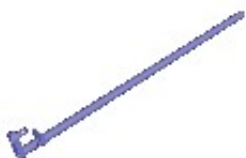

E145965

JLR-204-802

Splitter, Damper

REMOVAL

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


-
2. For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

-
3. For additional information, refer to: [Differential Draining and Filling](#) (205-03 Front Drive Axle/Differential, General Procedures).

-
4. Using the Land Rover approved diagnostic system, depressurize the air suspension.


For additional information, refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

5.

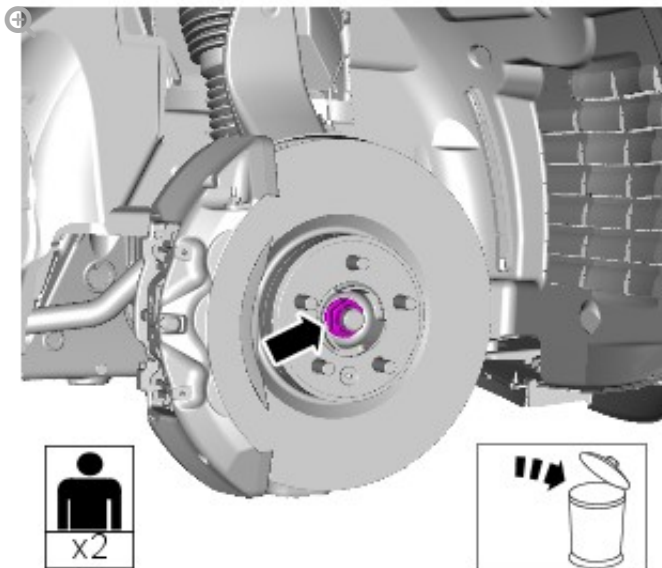


E147202

6.

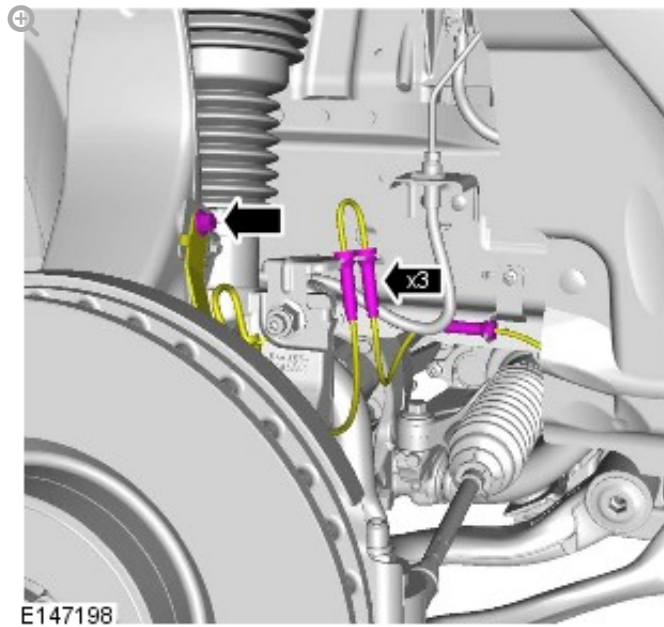


7.

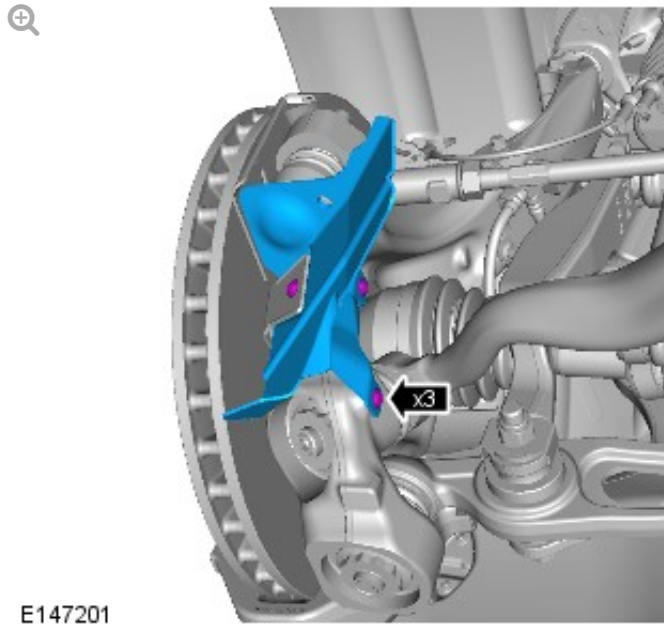

8.

NOTE:

Loosen but do not fully remove .

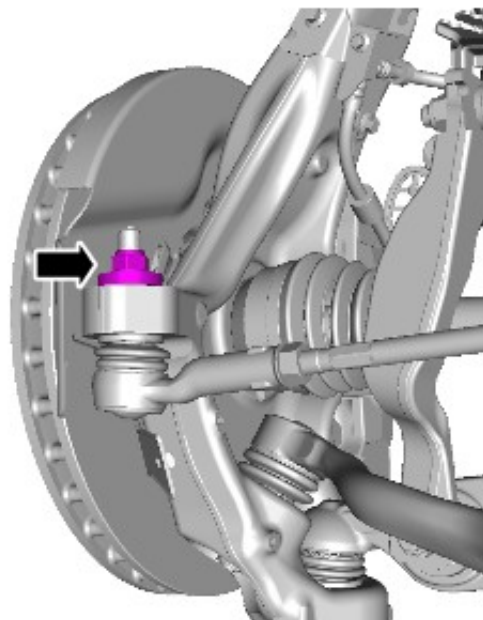


E147207

9.

NOTE:

Left illustration shown, right is similar.

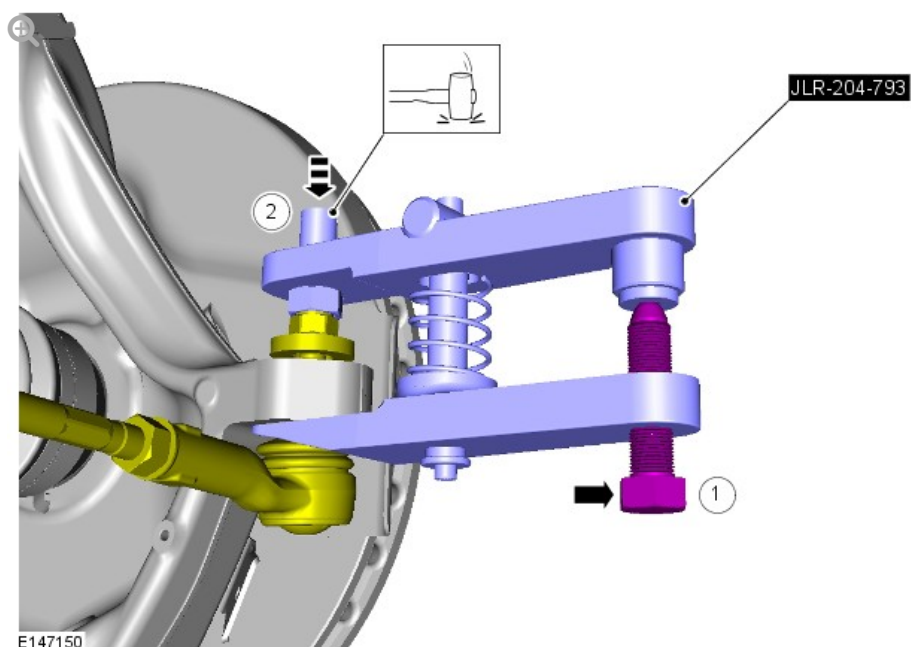

1. **CAUTION:**

Do not keep turning the bolt to release the joint.


TORQUE: 60 Nm

2. **CAUTION:**


Strike the outside of the contact pin with a suitable hammer to shock the joint.

10. **NOTE:**

Discard the nut.

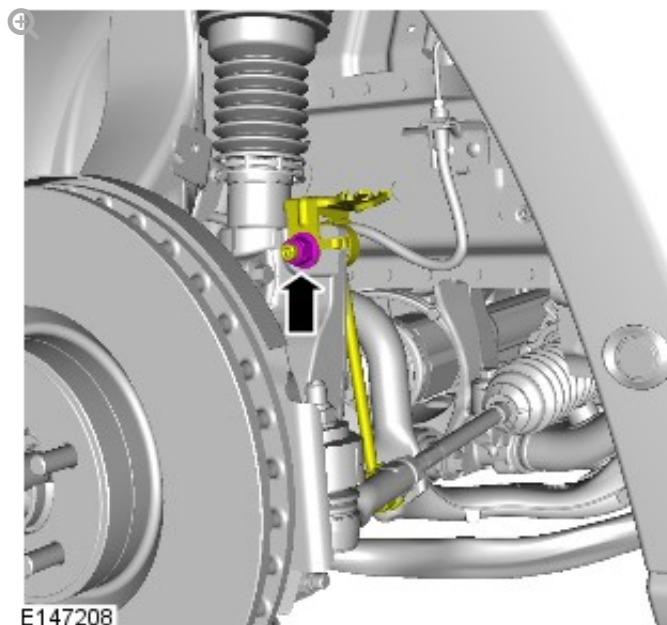


11.

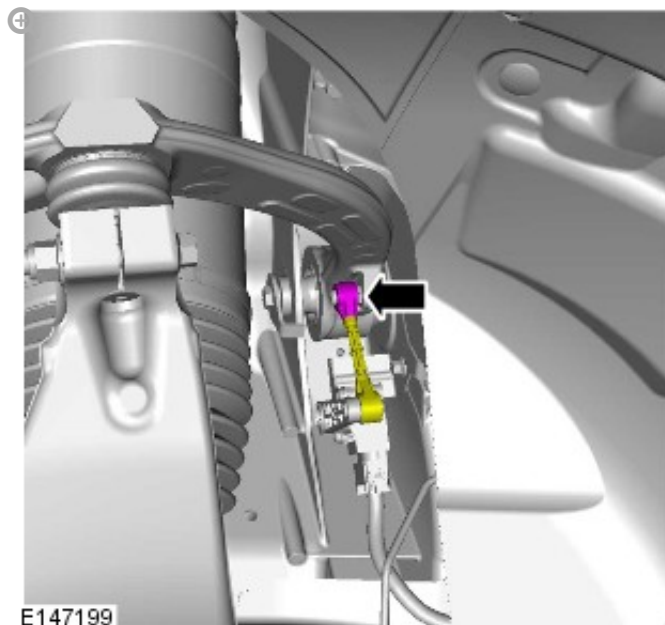


12.

CAUTION:

Discard the nut and bolt.

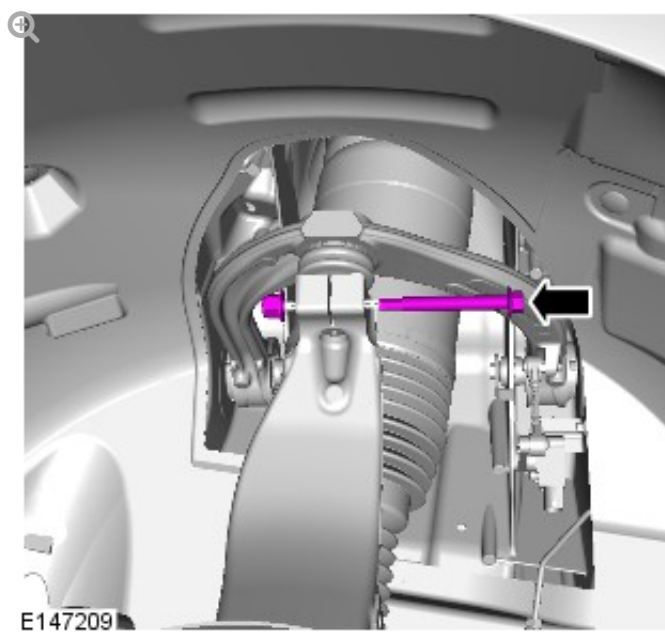


13.

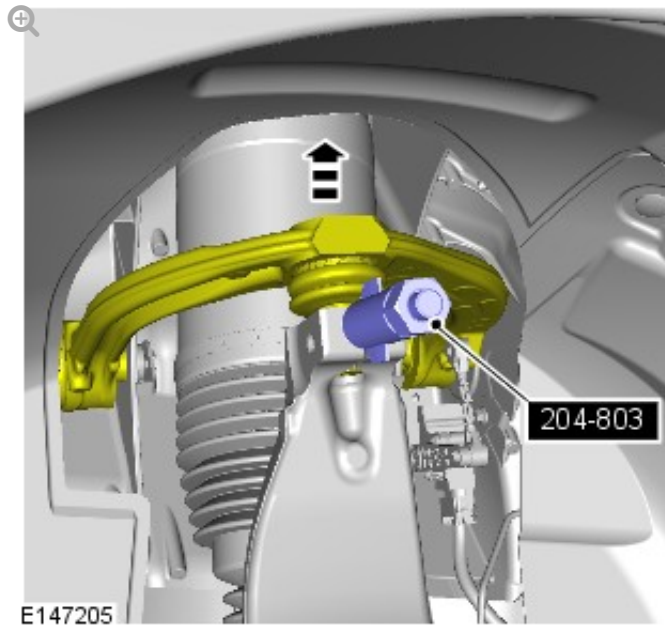

14.

NOTE:

Left illustration shown, right is similar.

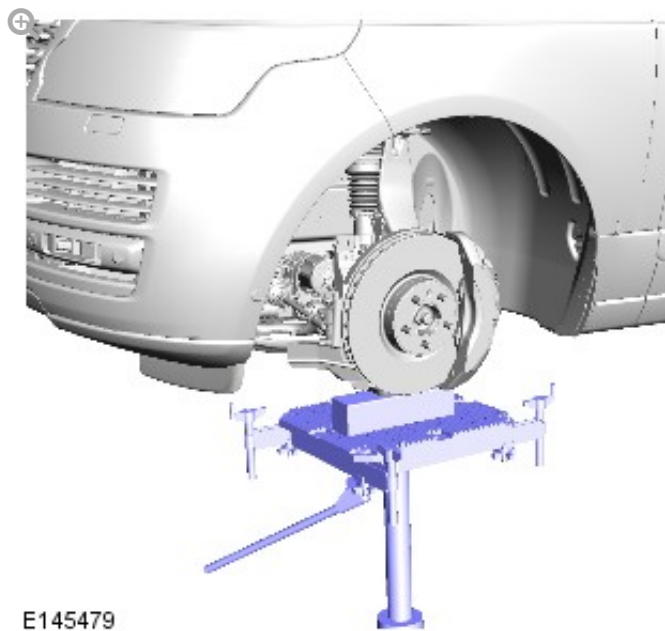

Transmission jack


15.

CAUTION:

Discard the nut and bolt.

NOTE:


Left illustration shown, right is similar.

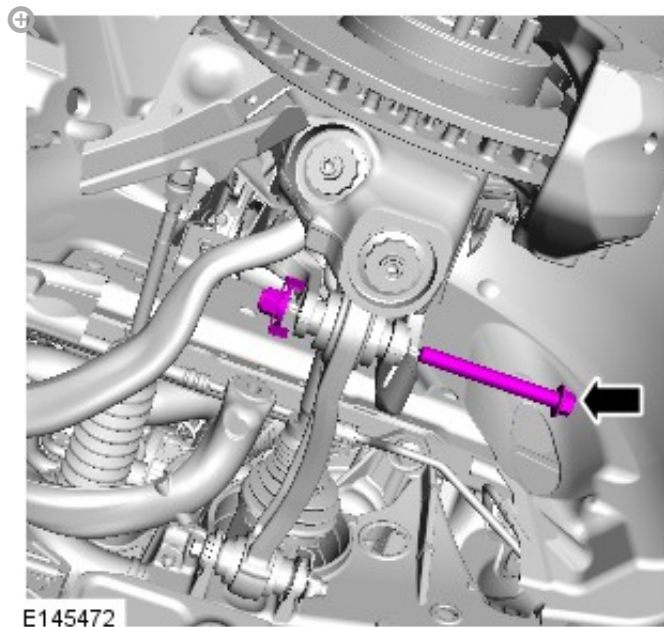

16.

NOTE:


Left illustration shown, right is similar.

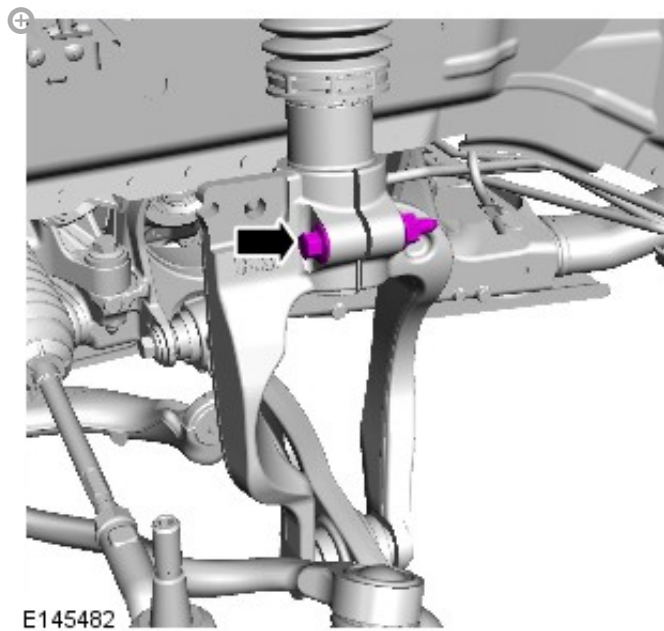

17.

NOTE:


Left illustration shown, right is similar.

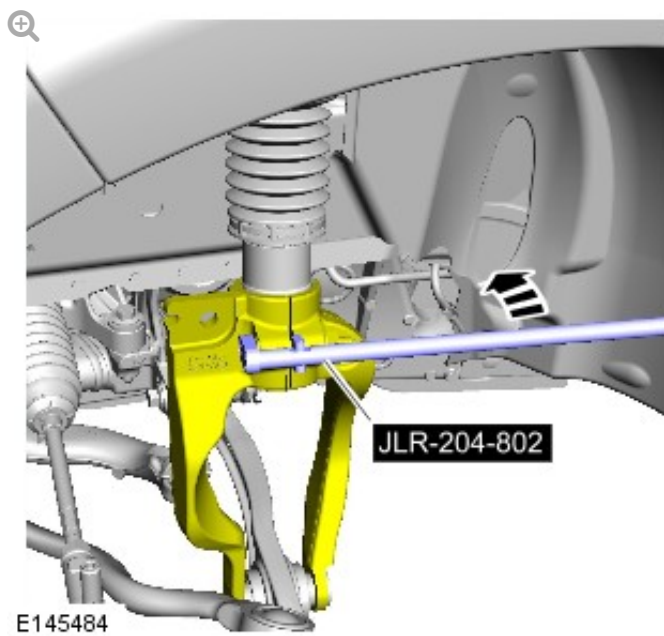

18.

NOTE:

Left illustration shown, right is similar.

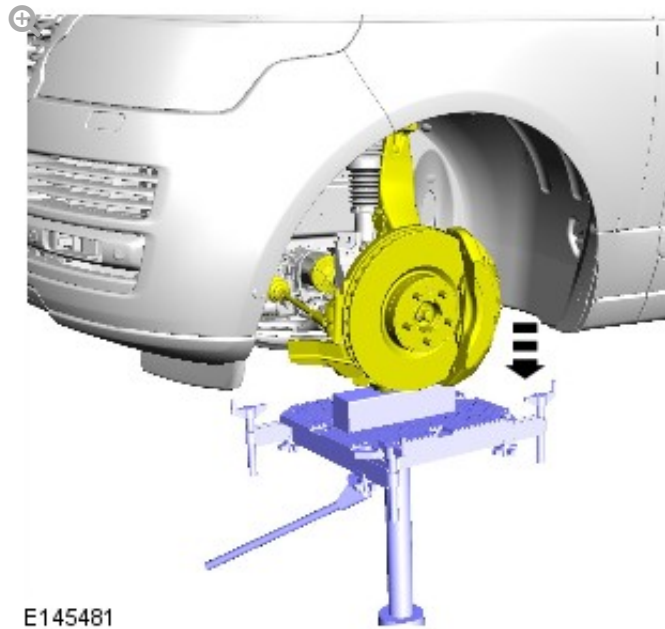


Transmission jack

19.

NOTE:


Left illustration shown, right is similar.

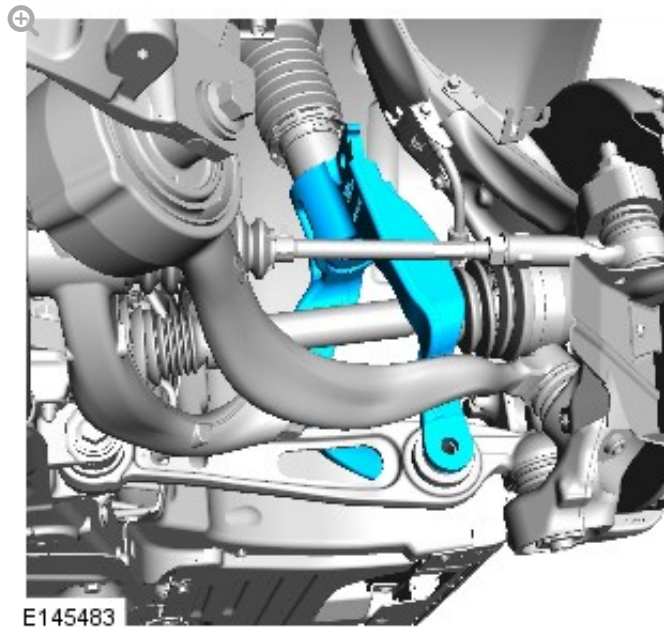

20.

CAUTIONS:


- The lower arm ball joint can be damaged by excessive articulation. The wheel knuckle must be fully supported at all times. Do not allow the wheel knuckle to hang on the lower arm. Failure to follow this instruction will result in damage to vehicle.
- Do not use a hammer to detach the halfshaft from the hub assembly, failure to follow this instruction may result in damage to the halfshaft.
- Make sure halfshaft gaitors are not damaged as shaft is removed from vehicle.

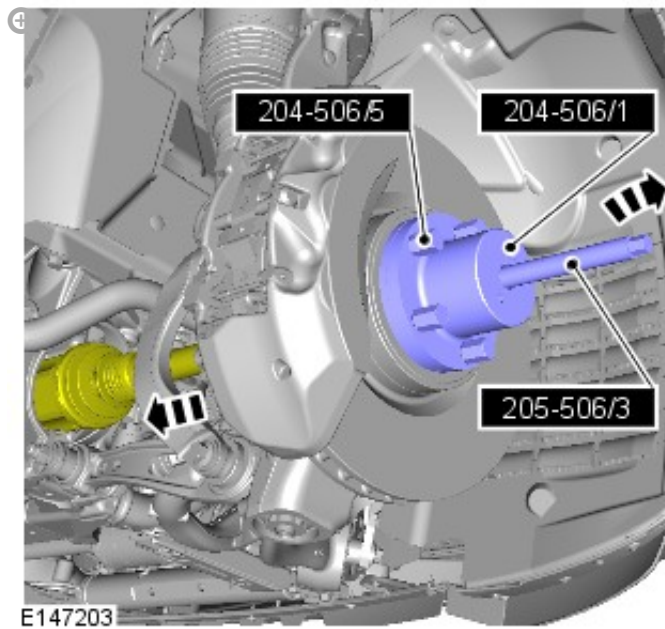


21.

CAUTION:

Make sure halfshaft gaitors are not damaged as shaft is removed from vehicle.

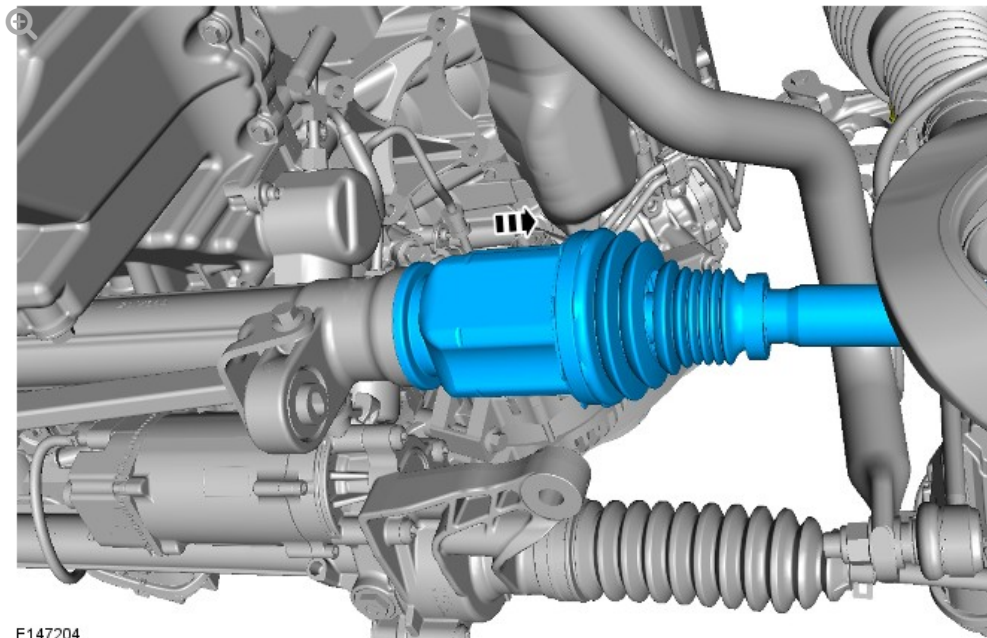


22.

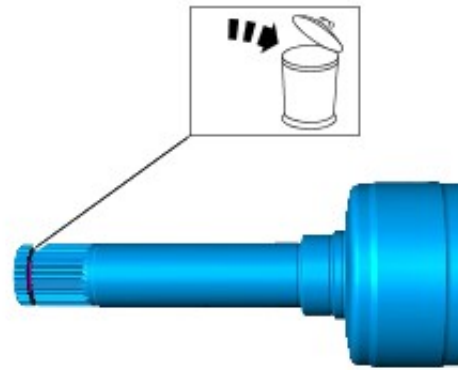

E148768

23.

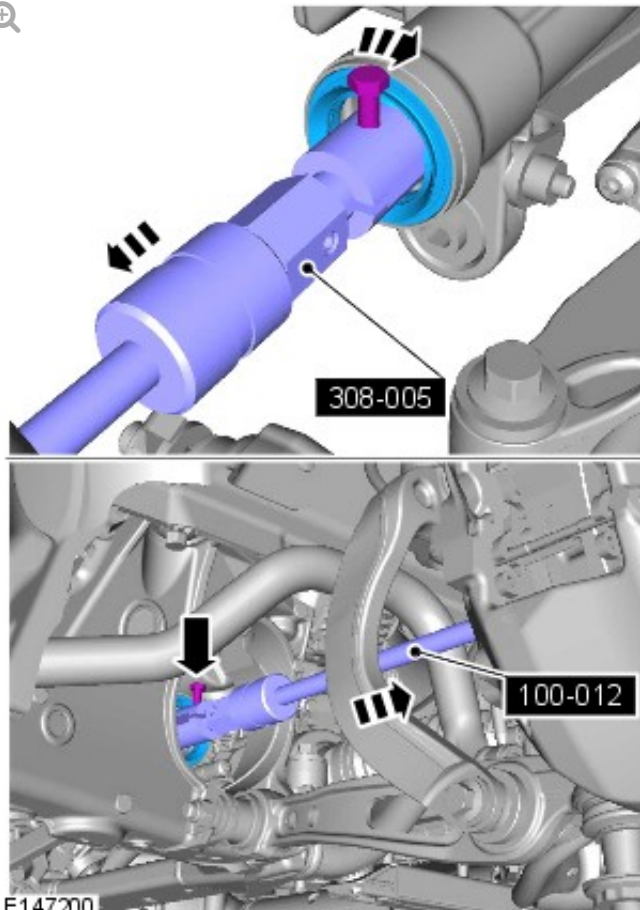


E147200

INSTALLATION

1.

CAUTION:

The seal protector must be left in place until the halfshaft has been installed.

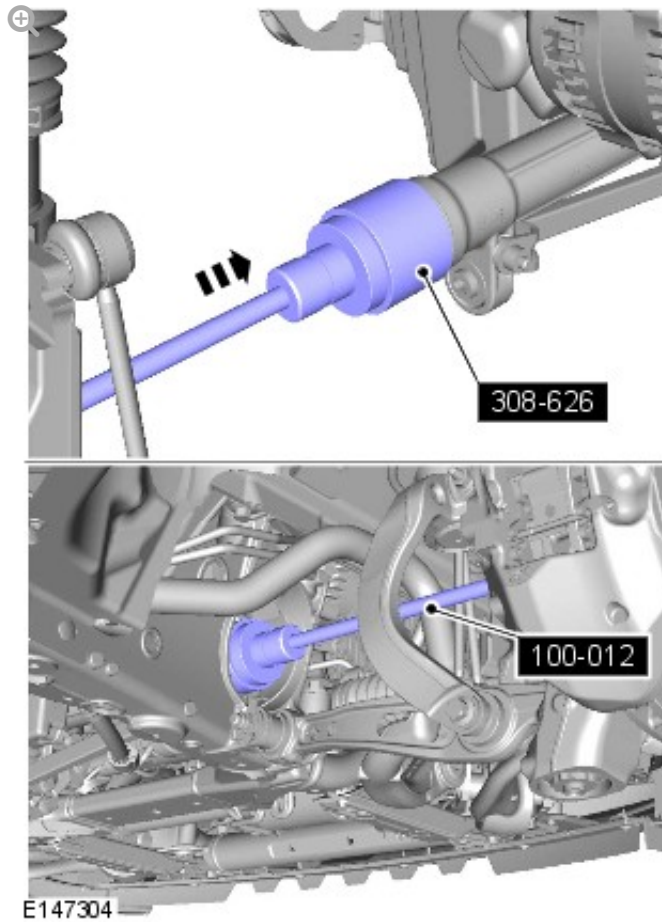


Using the special tools, install a new halfshaft seal.

- Clean the component mating faces.

2.

NOTE:

Make sure that a new circlip is to be installed.

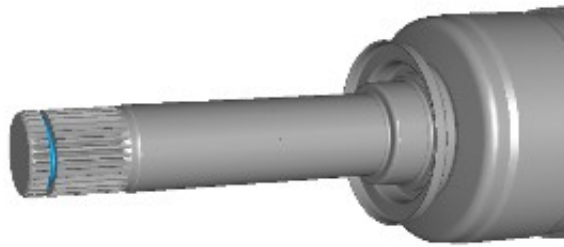


E148814

3.

CAUTION:

Pull on the halfshaft inboard joint to make sure the clip has fully engaged and retains the halfshaft inboard joint within the differential case.

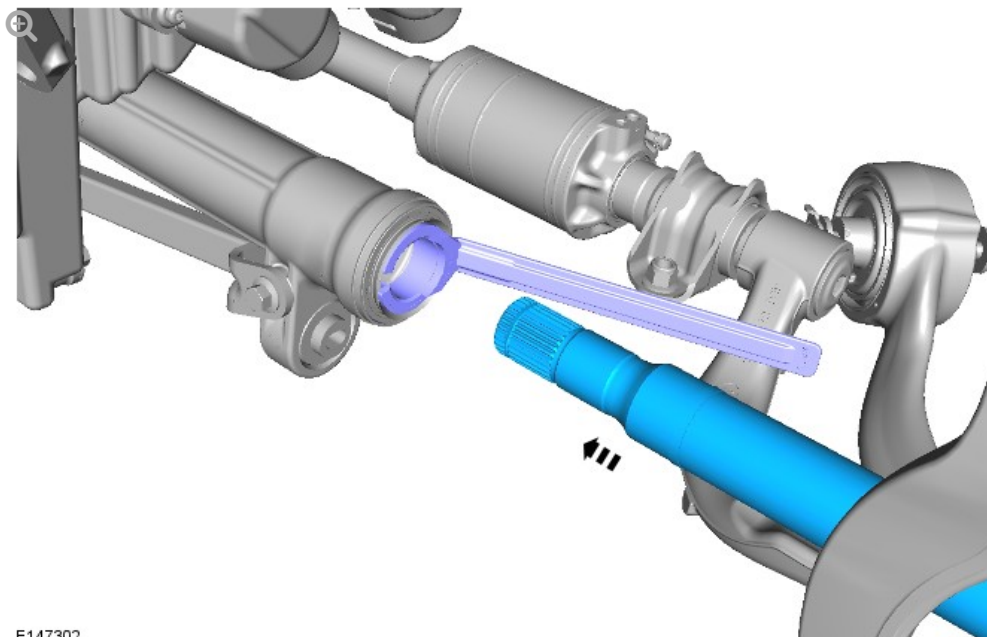


E147302

Install the halfshaft.


- Lubricate the oil seal.

4.

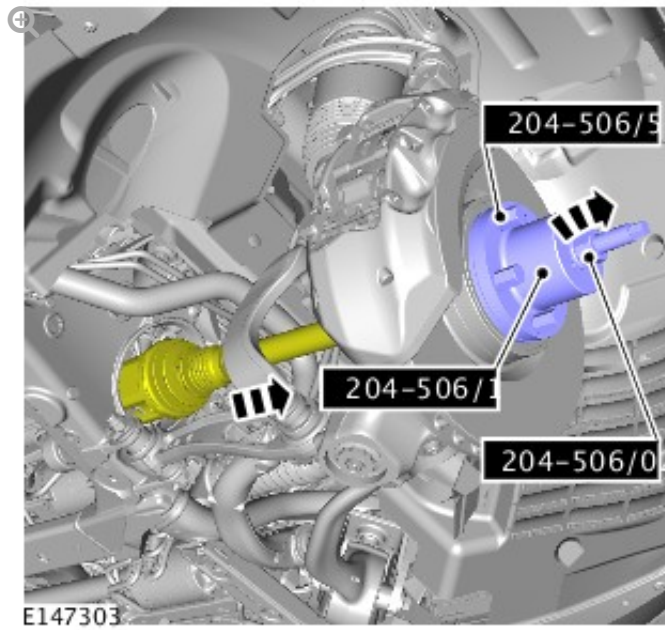


Using the special tools, pull the halfshaft in to the wheel hub.

5.

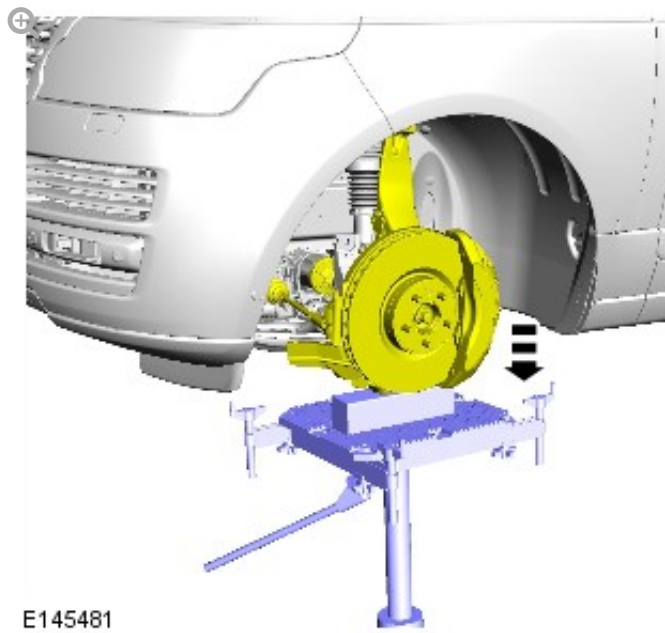


Transmission jack


6.

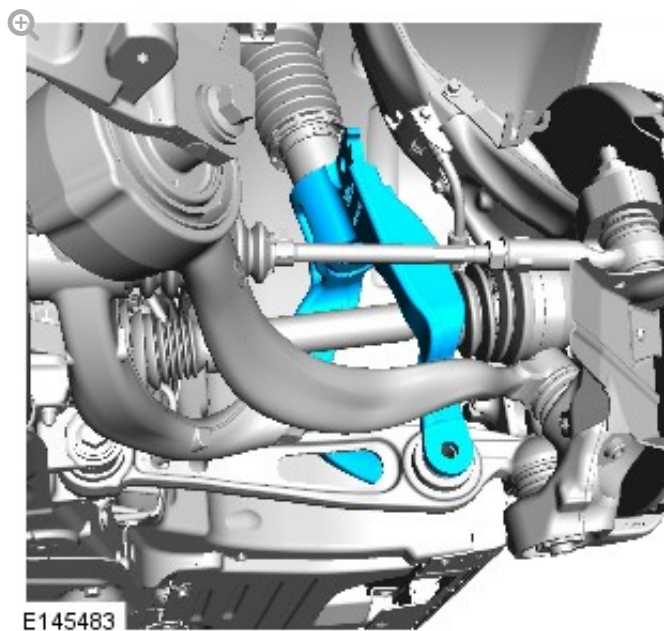

7.

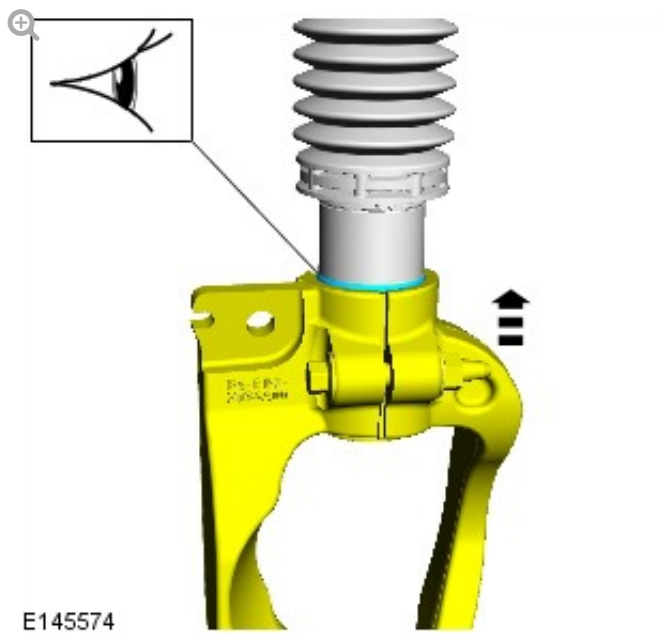


8.

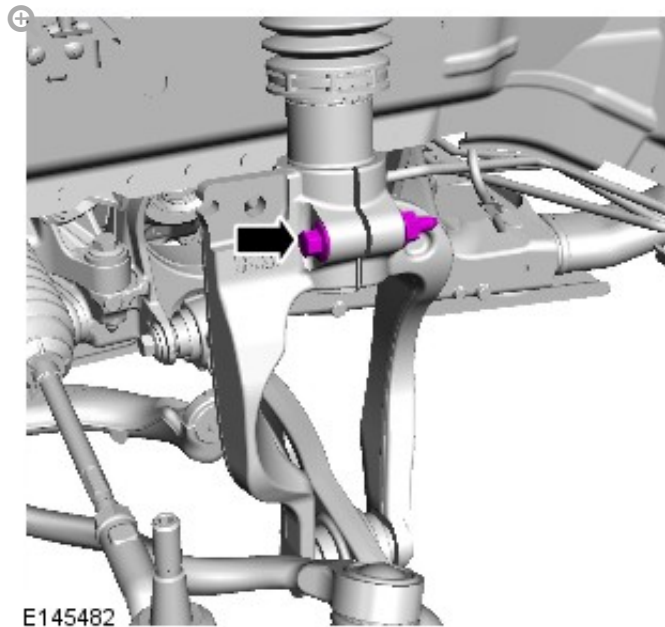

TORQUE: 95 Nm

9.

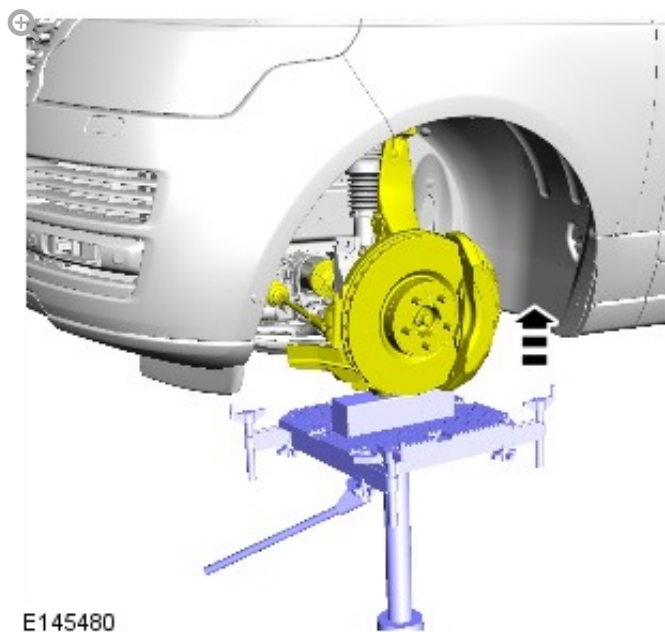


Transmission jack

10.


CAUTIONS:

- Make sure that a new nut and bolt is installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

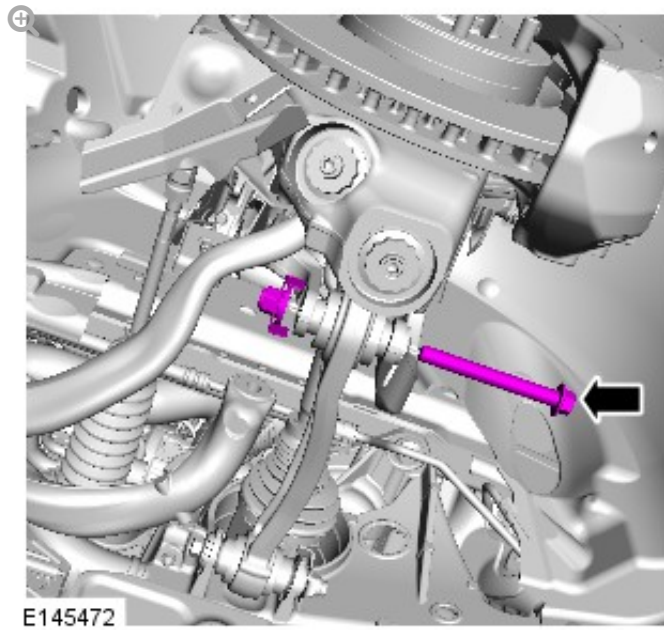

TORQUE: 100 Nm + 240° degrees

11.

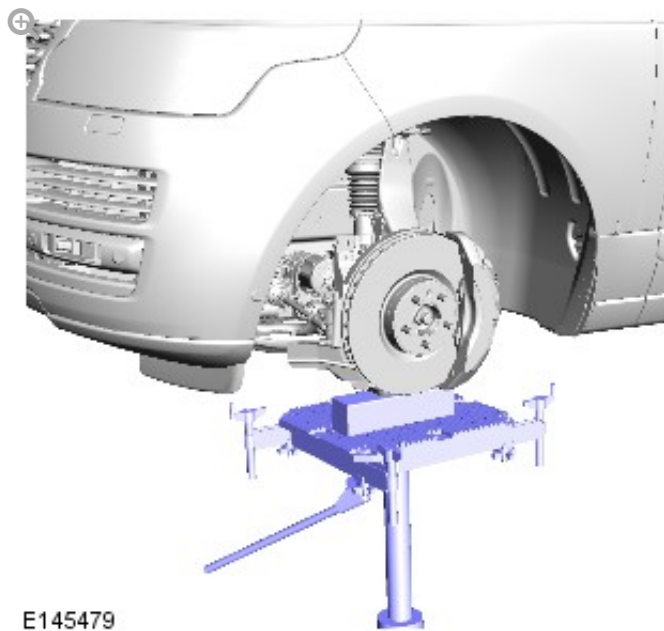


Transmission jack

- Remove the equipment illustrated.


12.

NOTE:

Left illustration shown, right is similar.

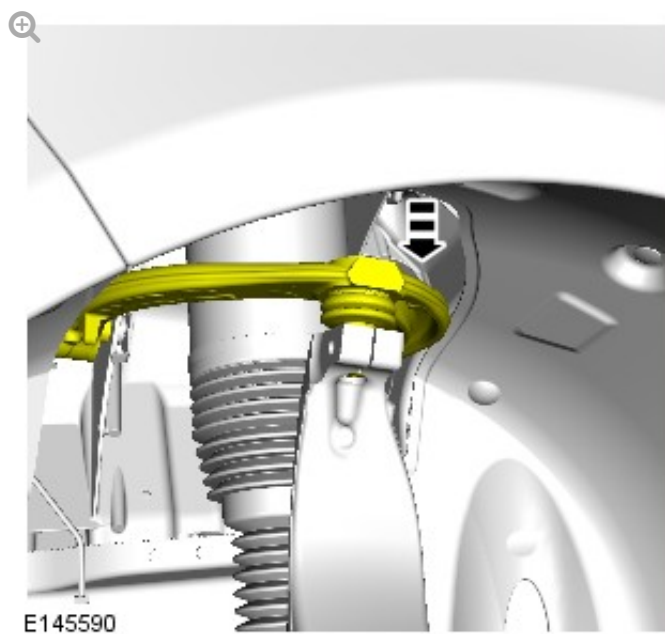


13.

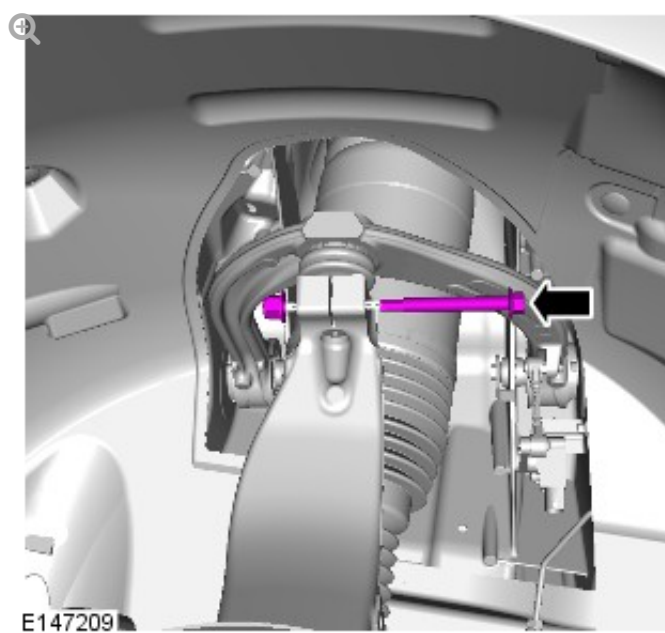

TORQUE: 70 Nm


14.

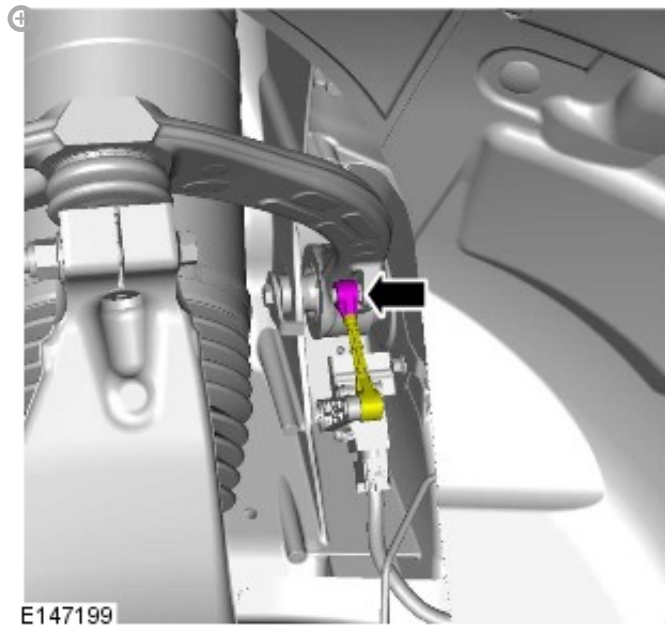

15.

CAUTIONS:

- Nuts must be tightened with vehicle at normal ride height.
- Install a new nut.

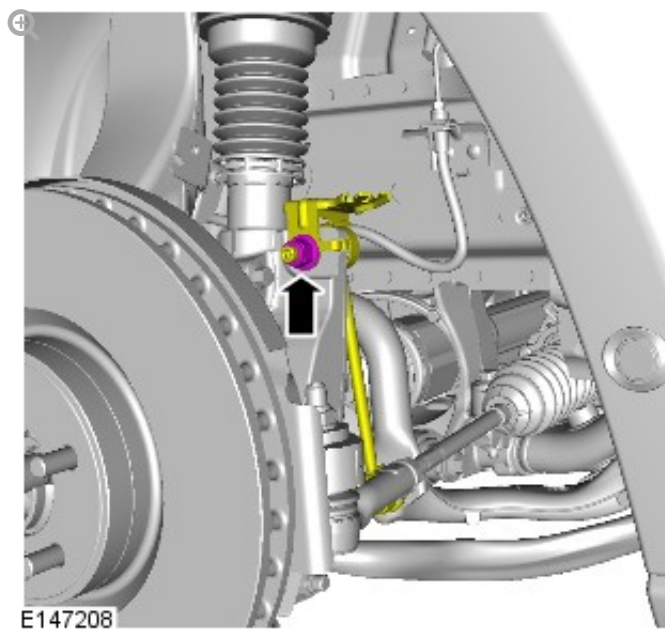


TORQUE: 185 Nm

16.

CAUTION:


Install a new locknut.

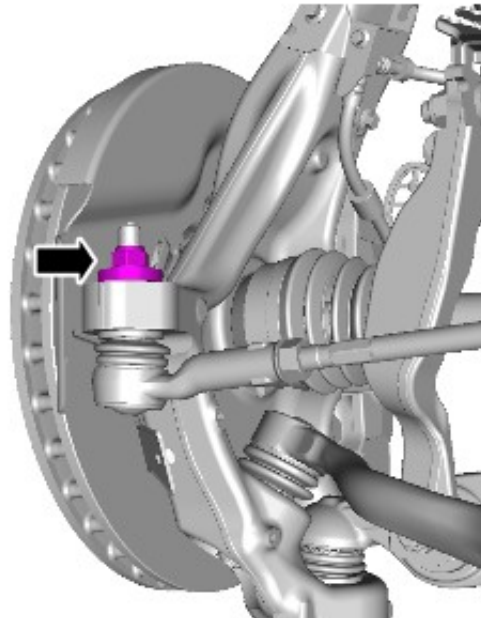

E147207

TORQUE: 140 Nm


17.

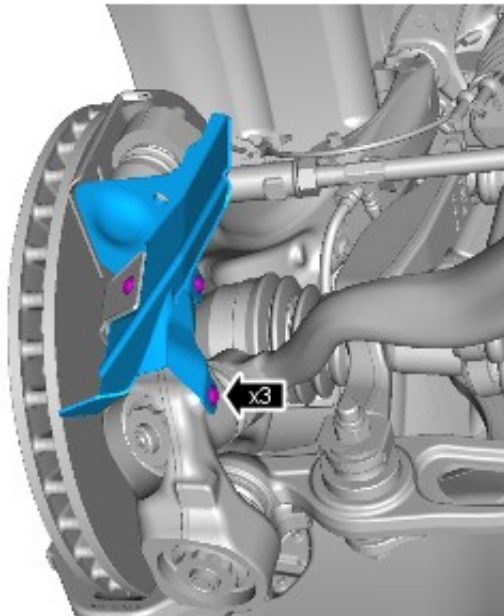

E147201

TORQUE: 10 Nm


18.

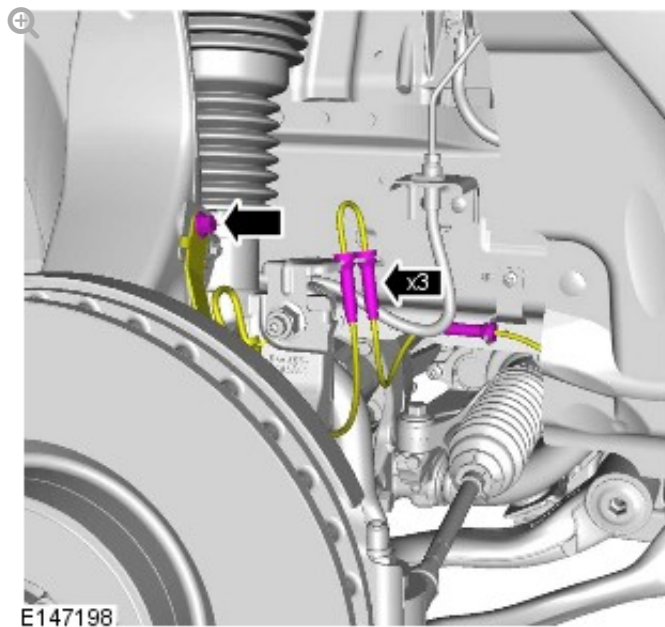

19.

NOTE:

Apply the brake pedal during the removal and installation of the half shaft retaining nut.

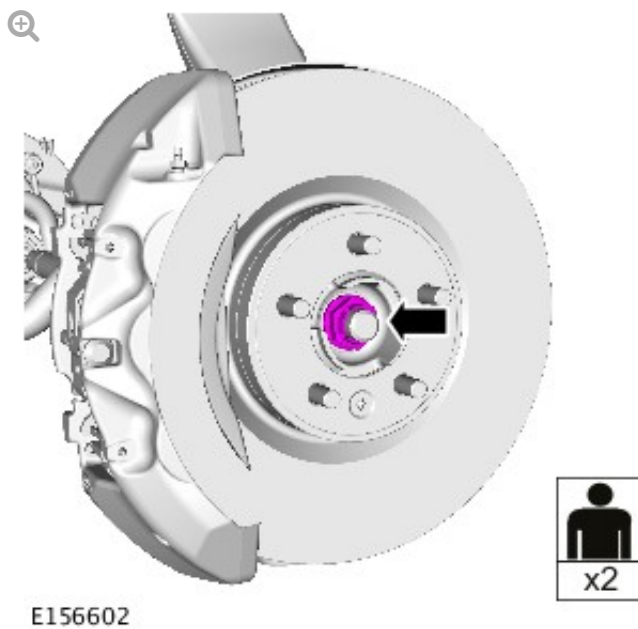

TORQUE: 290 Nm


20.

CAUTION:

Do not use air tools to remove the half shaft nut.

NOTE:


Remove and discard the nut.

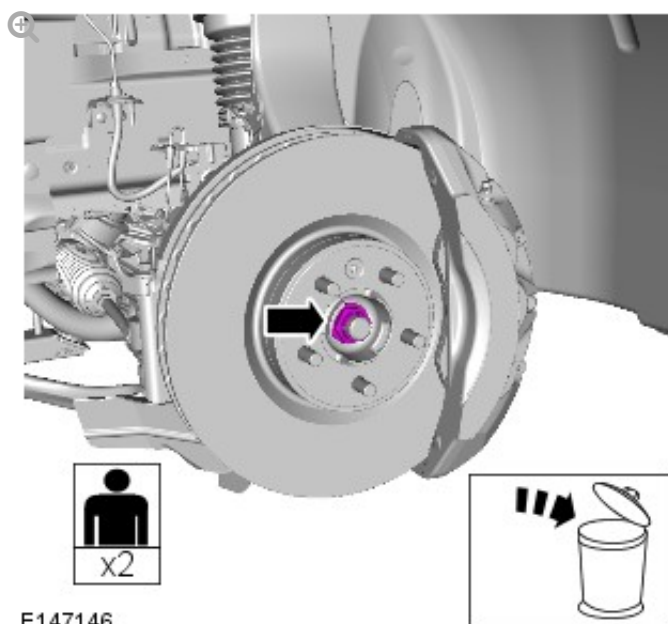

21.

CAUTION:

Install a new locknut.

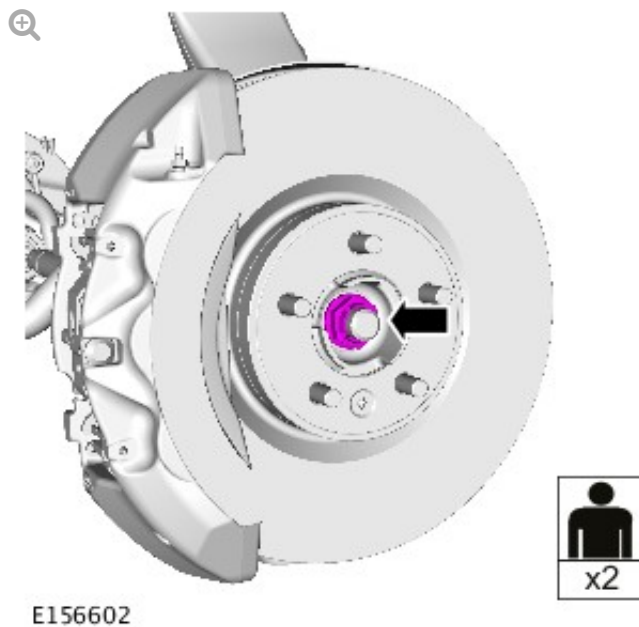

TORQUE: 120 Nm + 60° degrees

-
22. Using the Land Rover approved diagnostic system, pressurize the air suspension.
For additional information, refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).
-
23. For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).