

2016.0 RANGE ROVER (LG), 205-04

FRONT DRIVE HALFSHAFTS

INNER CONSTANT VELOCITY JOINT BOOT (G1566506)

REMOVAL AND INSTALLATION

47.10.16	BOOT - INNER JOINT - RENEW	ALL DERIVATIVES	1.4	USED WITHINS	+
----------	-------------------------------------	--------------------	-----	-----------------	---

SPECIAL TOOL(S)



100-050
BAND-IT
TOOL



303-D121

Puller, General Purpose

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Inner constant velocity joint boot kit

REMOVAL

NOTE:

- Some components shown removed for clarity.
- Some variation in the illustrations may occur, but the essential information is always correct.


1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the front halfshaft.
Refer to: [Front Left Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).

Refer to: [Front Right Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).

3.

NOTE:

Discard the boot clamps.

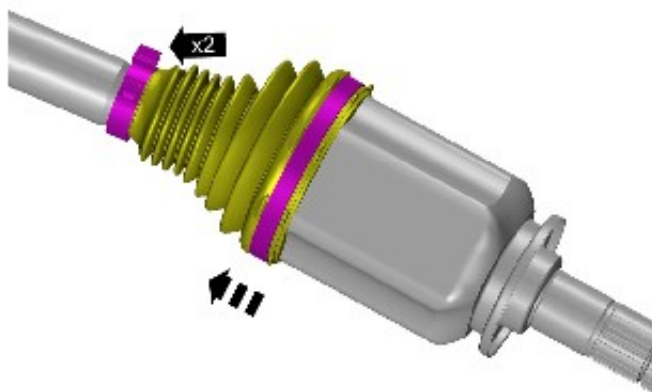


E150113

4.

CAUTION:

- Make sure that the CV joint is positioned as illustrated.
- Use suitable protective covers to protect the halfshaft.

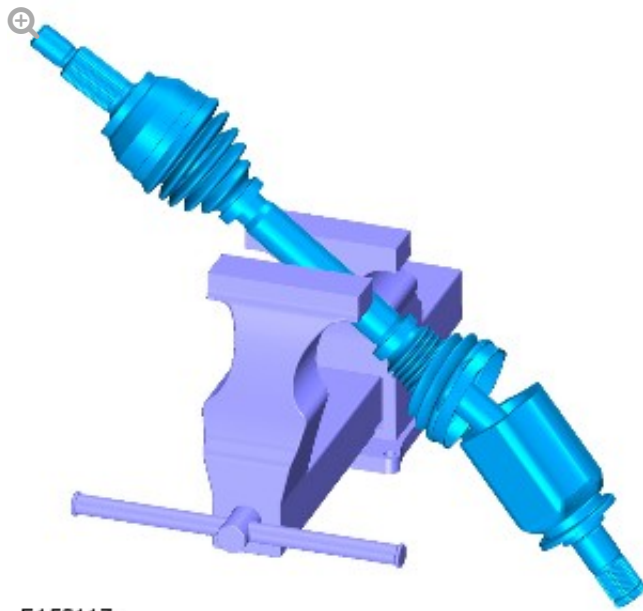


E150117

5.

CAUTION:

Using a suitable soft drift, strike the joint in the area indicated to release it from the shaft.

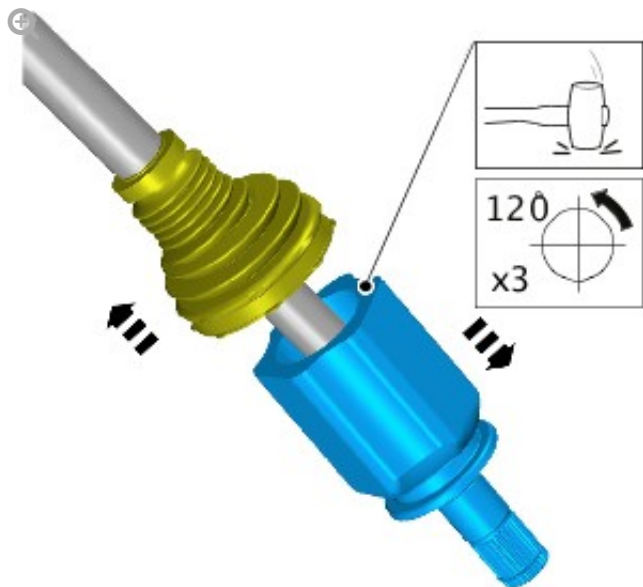


E150116

6.

CAUTION:

Using a suitable soft drift, strike the component in the direction shown to allow easy release of the retaining clip.

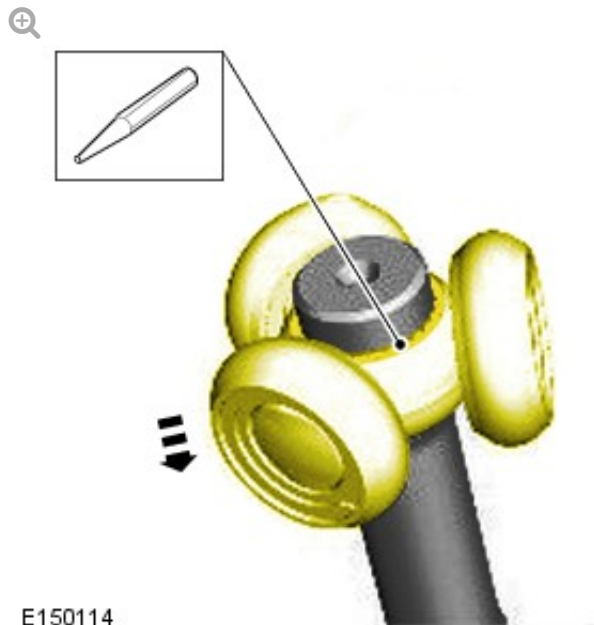

7.


CAUTION:

Discard the snap ring.



E150109

8.

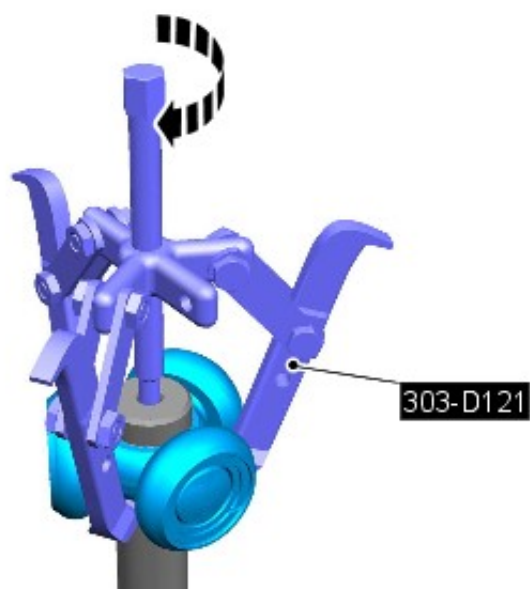


E88429

Special Tool(s): [303-D121](#)

9.

CAUTION:

Discard the component.

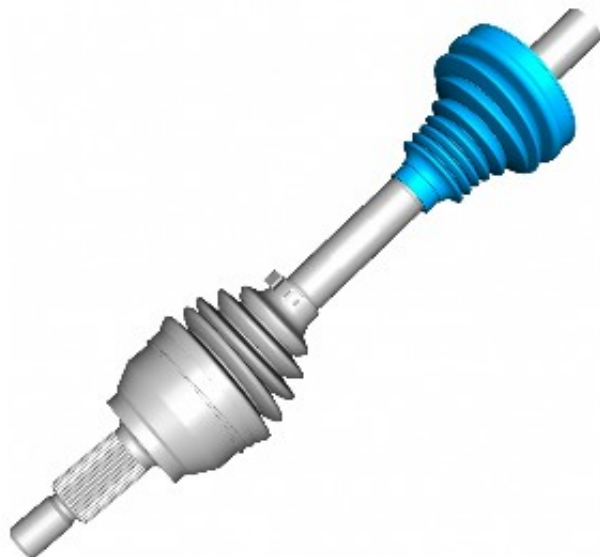

E136488

INSTALLATION


1.

CAUTION:

Make sure that a new component is installed.

NOTE:

Install a new boot clamp.

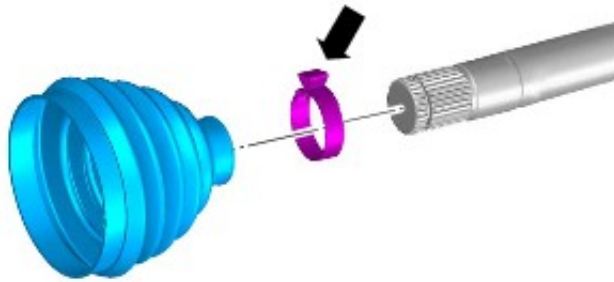

E149787

Renew Part: *Inner constant velocity joint boot kit.*

2.

CAUTION:

Install a new snap ring.


NOTE:

Make sure that this component is installed to the noted removal position.



E136470

3.

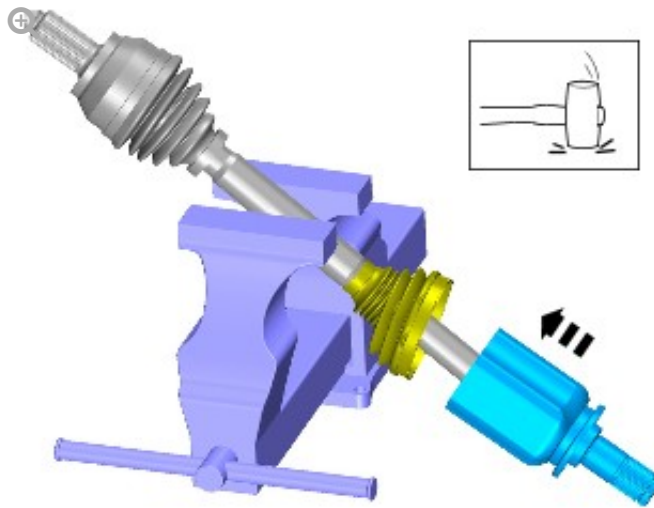


E150110

4.

NOTE:

Apply the required quantity of grease meeting the correct specification.

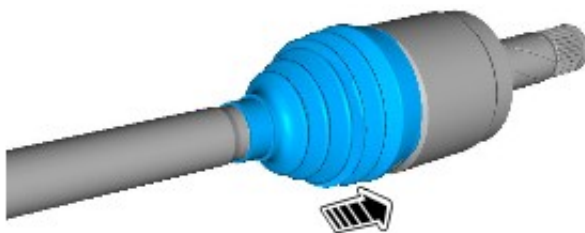

E202644

Pack the outer CV joint with the grease supplied and Install the new CV joint boot.


5.

CAUTION:

Make sure that a new retaining clips are to be installed.

NOTES:

- Make sure that the outer CV joint boot is correctly installed.
- Make sure that the retaining clips are correctly installed.

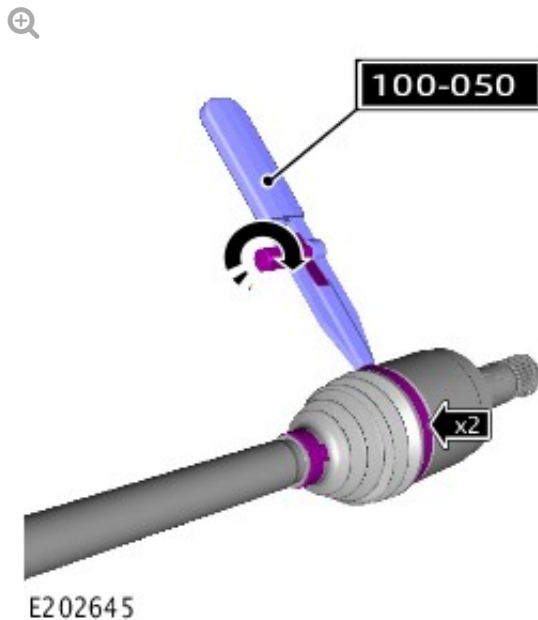

Using the special tool secure the CV joint boot clips.

Special Tool(s): [100-050](#)

6. Install the front halfshaft.

Refer to: [Front Left Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).

Refer to: [Front Right Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).

