

2016.0 RANGE ROVER (LG), 205-04

FRONT DRIVE HALFSHAFTS

LEFT HALFSHAFT SEAL (G1509022)

REMOVAL AND INSTALLATION

|          |                                                                |                    |     |                 |   |
|----------|----------------------------------------------------------------|--------------------|-----|-----------------|---|
|          | OIL SEAL -<br>DIFFERENTIAL<br>HOUSING -<br>ONE SIDE -<br>RENEW | ALL<br>DERIVATIVES | 1.2 | USED<br>WITHINS | + |
| 54.10.18 |                                                                |                    |     |                 |   |

SPECIAL TOOL(S)



308-  
005(LRT-  
37-004/2)  
Axle oil seal remover



**100-  
012(LRT-  
99-004)**

Impulse extractor



**308-626/2**

Installer/Guide  
halfshaft oil seal



**308-626/1**

Installer halfshaft oil  
seal

---

## REMOVAL

## CAUTIONS:

- Do not store or install halfshafts with joints at maximum articulation or damage may occur to the joint.
- Angularly Adjusted Roller (AAR) joints, used at the inboard end of some halfshafts have no internal retaining mechanism and can separate.

## NOTE:

Removal steps in this procedure may contain installation details.

---

1.


### WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

- 
2. For additional information, refer to: [Front Left Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).
-

3.

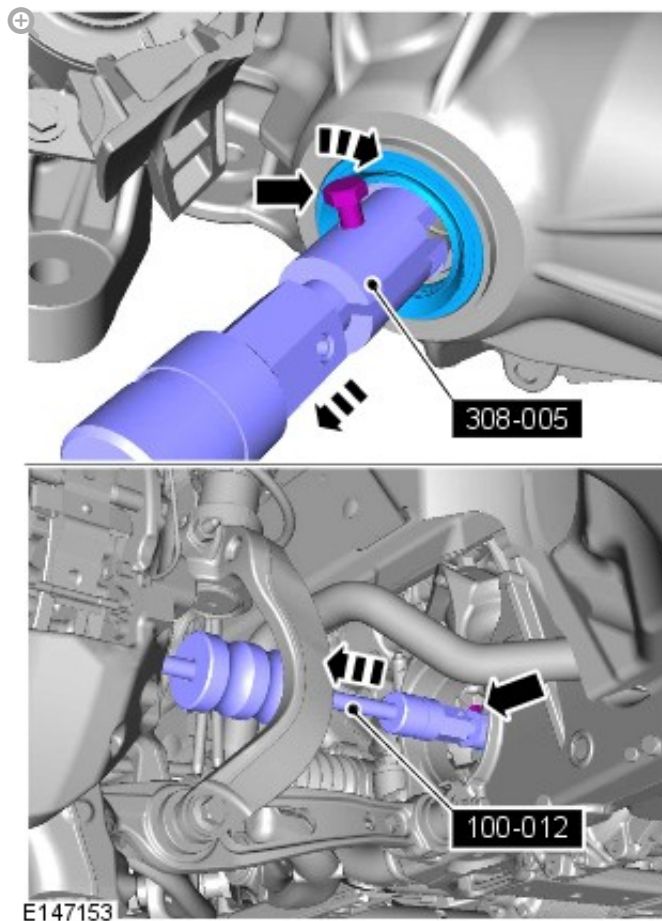


## INSTALLATION

1.

### CAUTION:

The seal protector must be left in place until the halfshaft has been installed.

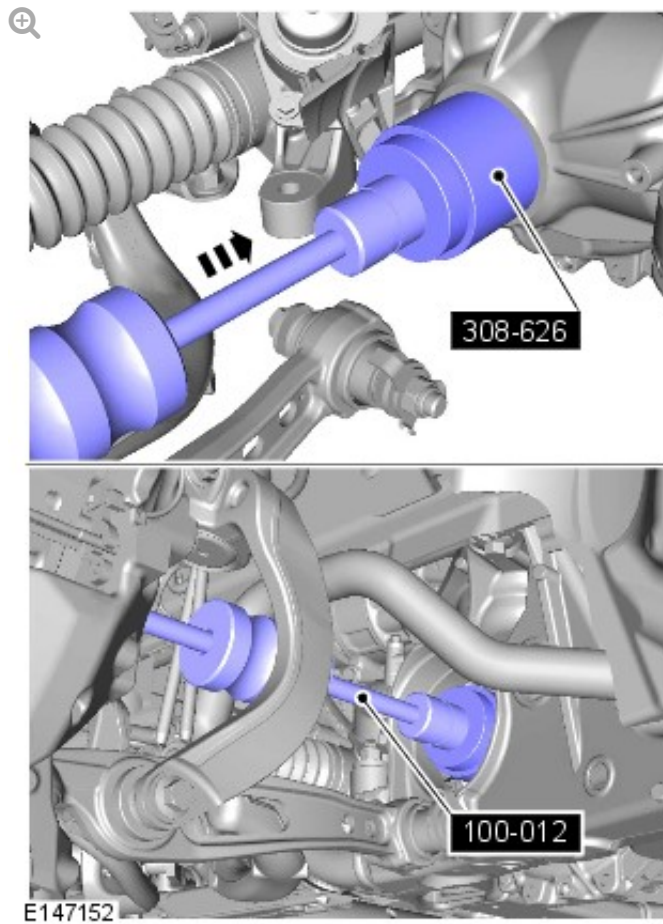

Using the special tools, install a new halfshaft oil seal.

- Clean the component mating faces.

- 
2. To install, reverse the removal procedure.