

2016.0 RANGE ROVER (LG), 205-04

FRONT DRIVE HALFSHAFTS

OUTER CONSTANT VELOCITY JOINT BOOT (G1566507)

REMOVAL AND INSTALLATION

47.10.03	BOOT - CONSTANT VELOCITY (CV) JOINT AND HOUSING - OUTER - RENEW	ALL DERIVATIVES	1.4	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

SPECIAL TOOL(S)



100-050

BAND-IT
TOOL

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Outer constant velocity joint boot kit
Installation Step 3	Renew Part	Retaining clip

REMOVAL

CAUTION:


The outer constant velocity (CV) joint cannot be removed from the shaft. Removal and installation of the outer CV joint boot must be performed from the inner CV joint end.

1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the front halfshaft
Refer to: [Inner Constant Velocity Joint Boot](#) (205-04 Front Drive Halfshafts, Removal and Installation).

3.


NOTE:

- Discard the CV joint boot and boot clamps.
- Make sure to clean out all of the grease from inside of the joint.

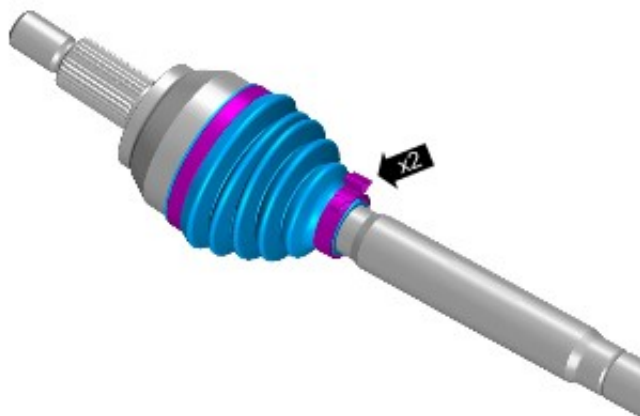

E150115

4.

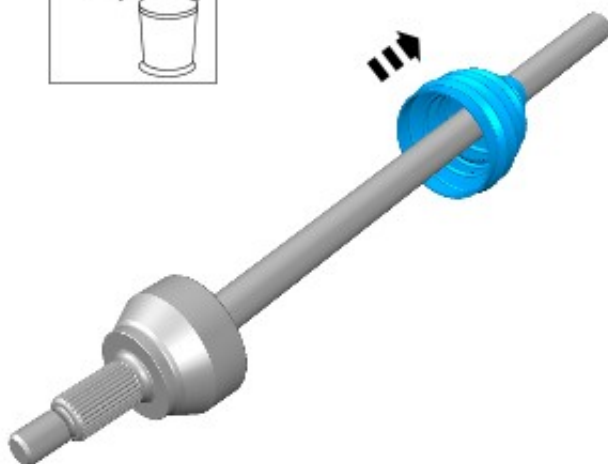


E159149

INSTALLATION

1.

NOTE:

Apply the required quantity of grease meeting the correct specification.

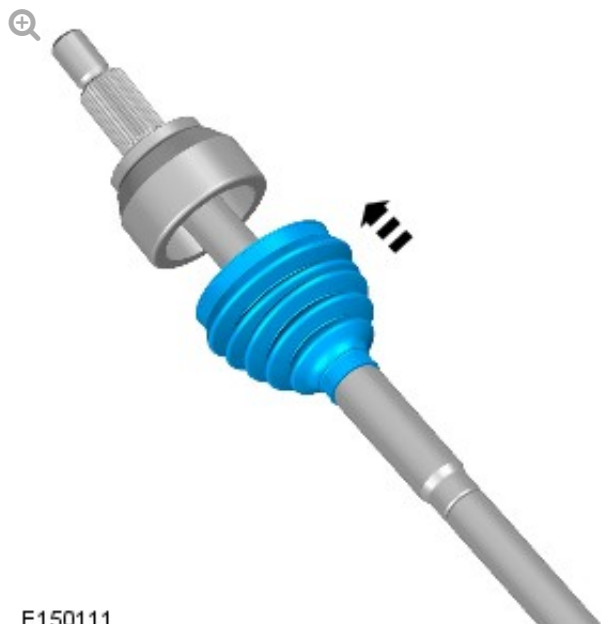

E150111

Pack the outer CV joint with the grease supplied and install the new CV joint boot.

Renew Part: [Outer constant velocity joint boot kit.](#)


2.

CAUTION:

Make sure that a new retaining clips are to be installed.

NOTES:

- Make sure that the outer CV joint boot is correctly installed.
- Make sure that the retaining clips are correctly installed.

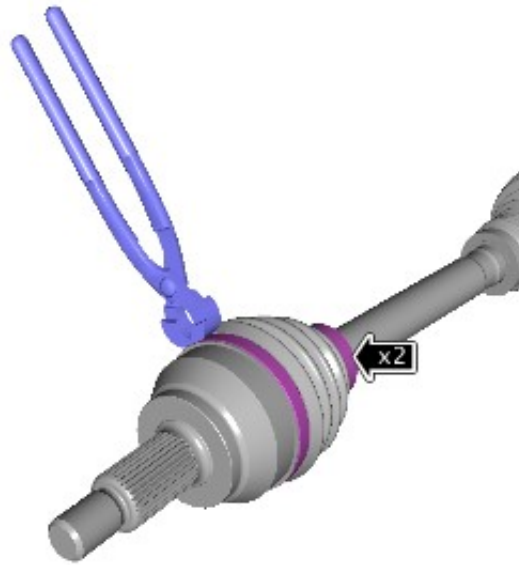

E202581


Using the special tool secure the CV joint boot clips.

Special Tool(s): [100-050](#)

3.

NOTE:

Make sure a new retaining ring is to be installed.

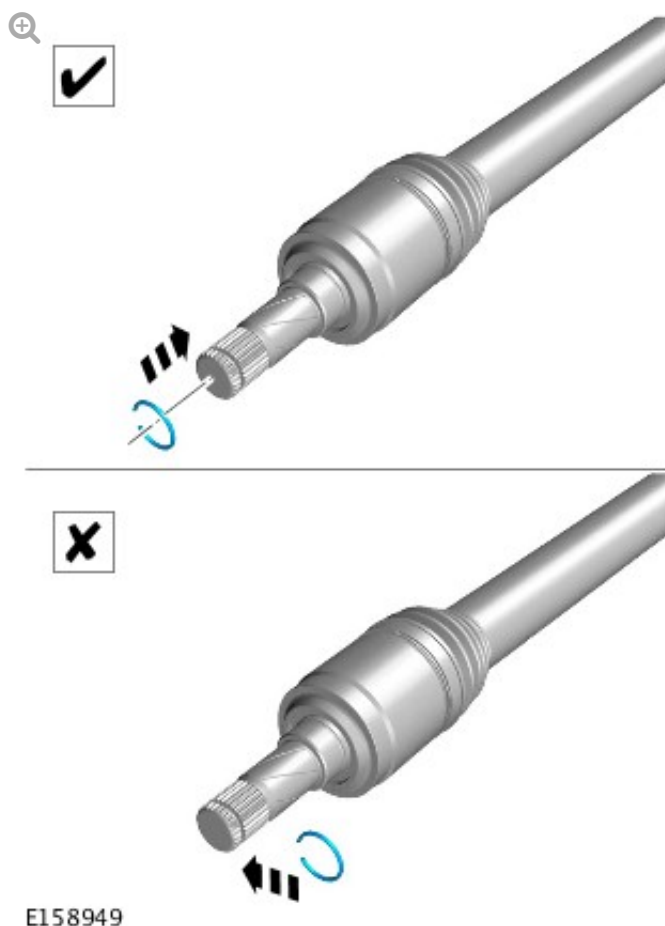

Renew Part: [Retaining clip](#).

4. Install the inner CV joint boot.
Refer to: [Inner Constant Velocity Joint Boot](#) (205-04 Front Drive Halfshafts, Removal and Installation).