

2016.0 RANGE ROVER (LG), 205-04

FRONT DRIVE HALFSHAFTS

RIGHT HALFSHAFT SEAL

[G1509024]

REMOVAL AND INSTALLATION

54.10.21	OIL SEAL - DIFFERENTIAL HOUSING - RH - RENEW	ALL DERIVATIVES	1.7	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

SPECIAL TOOL(S)



**308-
005(LRT-
37-004/2)**

Axle oil seal remover



**100-
012(LRT-
99-004)**

Impulse extractor



308-626/2

Installer/Guide
halfshaft oil seal



308-626/1

Installer halfshaft oil
seal

REMOVAL

CAUTIONS:

- Do not store or install halfshafts with joints at maximum articulation or damage may occur to the joint.
- Angularly Adjusted Roller (AAR) joints, used at the inboard end of some halfshafts have no internal retaining mechanism and can separate.

NOTE:

Removal steps in this procedure may contain installation details.

1.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

-
2. For additional information, refer to: [Front Right Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).
-

3.

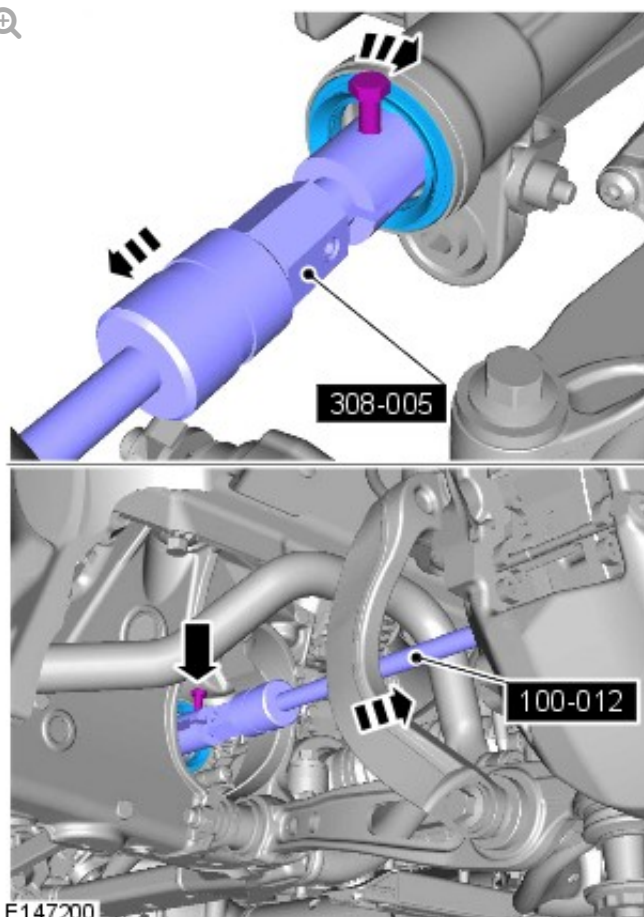


INSTALLATION

1.

CAUTION:

The seal protector must be left in place until the halfshaft has been installed.

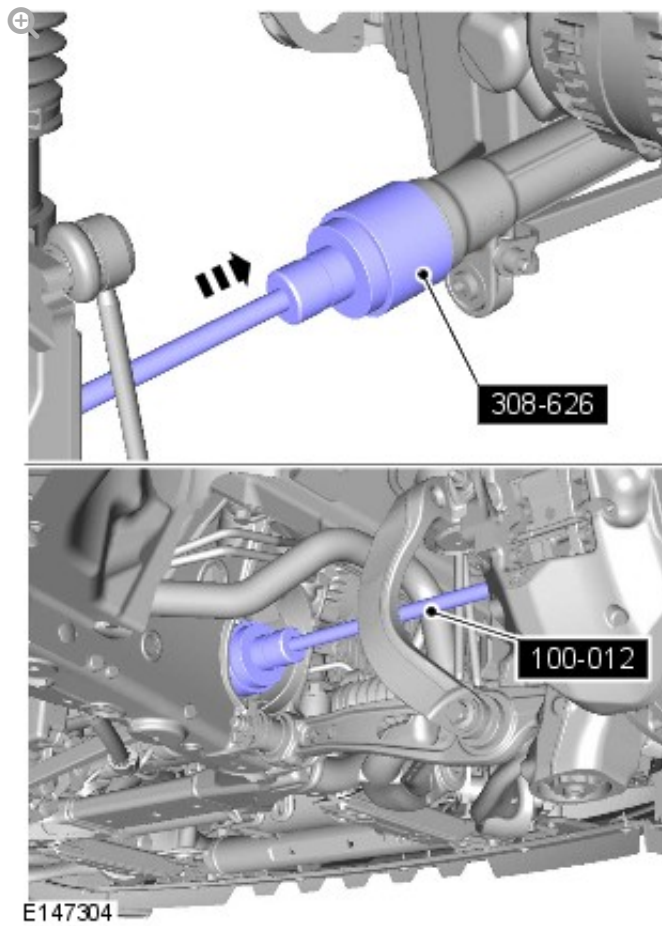

Using the special tools, install a new halfshaft oil seal.

- Clean the component mating faces.

-
2. To install, reverse the removal procedure.