

2016.0 RANGE ROVER (LG), 205-02

REAR DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL FLUID TEMPERATURE SENSOR (G1548667)

REMOVAL AND INSTALLATION

51.15.06	SENSOR - TEMPERATURE - RENEW	ALL DERIVATIVES	0.2	USED WITHINS	+
----------	------------------------------------	--------------------	-----	-----------------	---

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1.

WARNING:


Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.


2. Drain the differential lubricant.

Refer to: [Differential Draining and Filling](#) (205-02 Rear Drive

3.

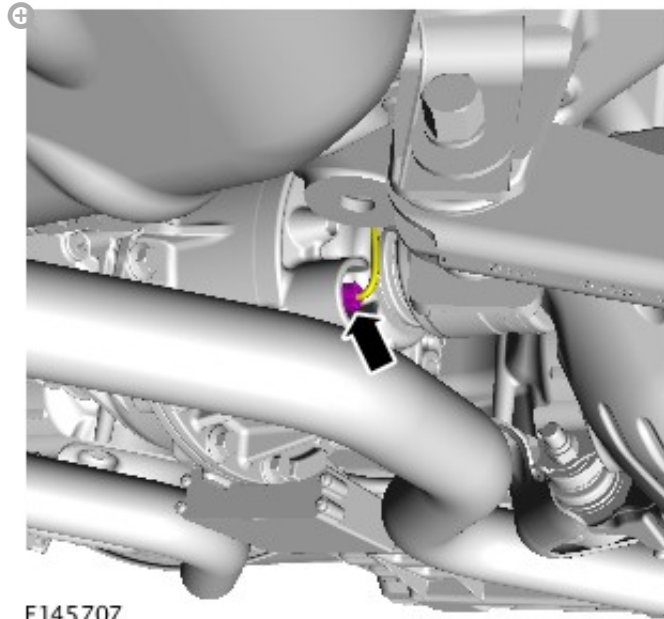


4.

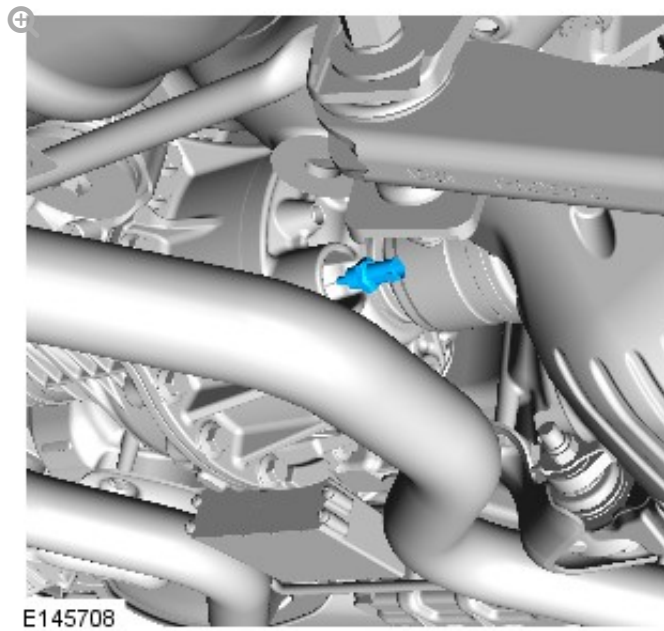

INSTALLATION


1. Clean the component mating faces.

2.

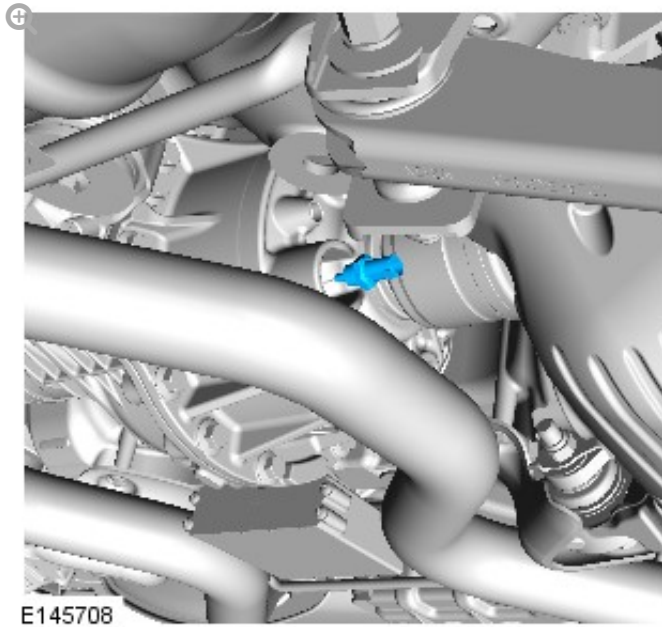

Torque: 22 Nm

3.

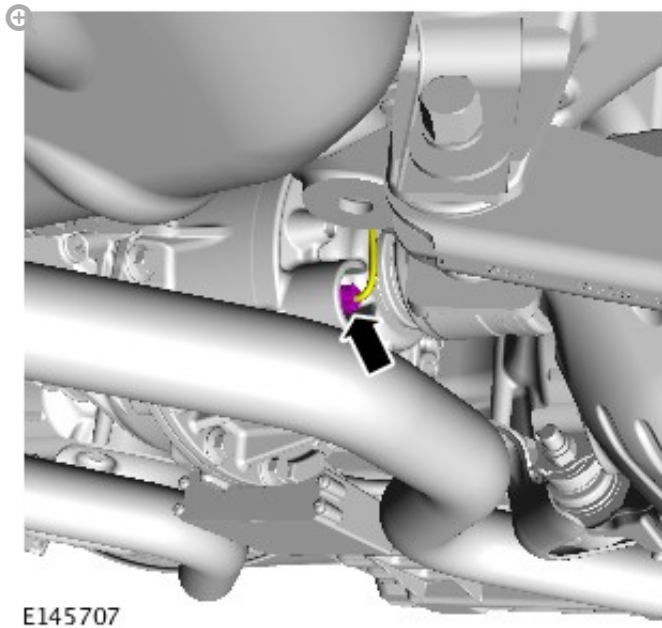

4. Fill the differential with the correct amount of lubricant.
Refer to: [Differential Draining and Filling](#) (205-02 Rear Drive Axle/Differential, General Procedures).