

2016.0 RANGE ROVER (LG), 205-02

REAR DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL LOCKING MODULE (G1549296)

REMOVAL AND INSTALLATION

51.30.01	CONTROL UNIT (ECU) - REAR LOCKING DIFFERENTIAL - RENEW	ALL DERIVATIVES	0.2	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---


REMOVAL

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

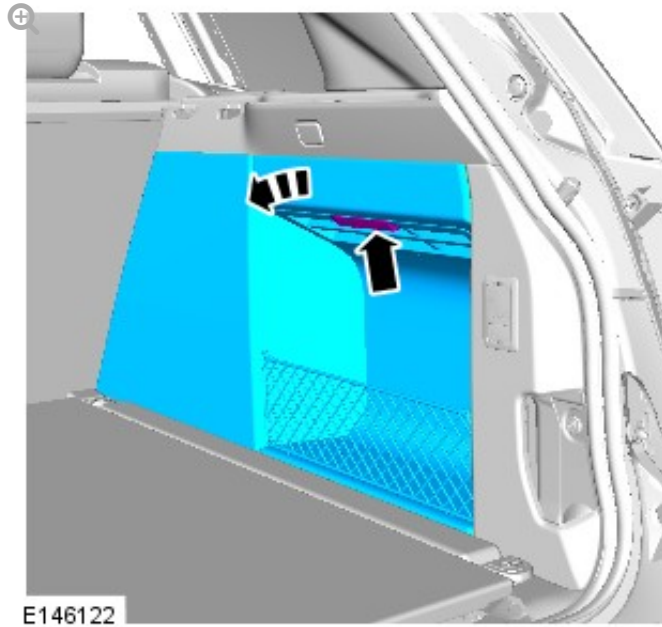

3.

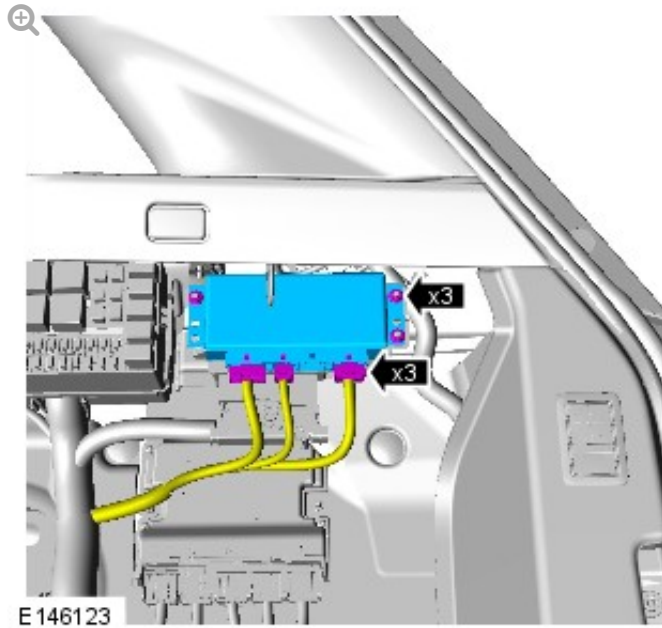

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

3. Using the approved diagnostic tool, calibrate the module.