

2016.0 RANGE ROVER (LG), 205-02

REAR DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL LOCKING MOTOR

[G1508998]

REMOVAL AND INSTALLATION

51.15.03	MOTOR - DIFFERENTIAL LOCKING - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	3.9	USED WITHINS	+
----------	---	--	-----	-----------------	---

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1.

WARNING:


Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Remove the rear differential.


Refer to: Differential Case - TDV6 3.0L Diesel/TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (205-02, Removal and Installation).

3. 

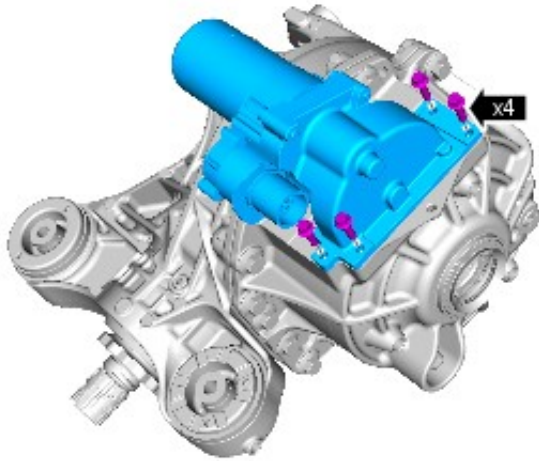


E146058

4. 

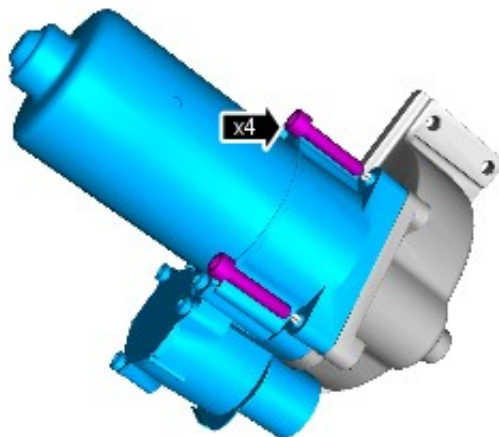


E146057

5.

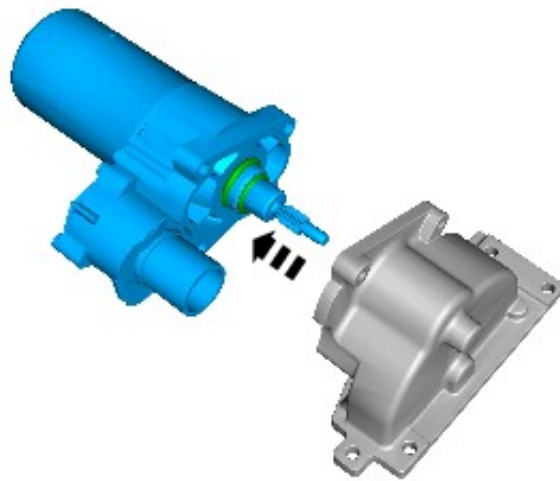

E146059


6.

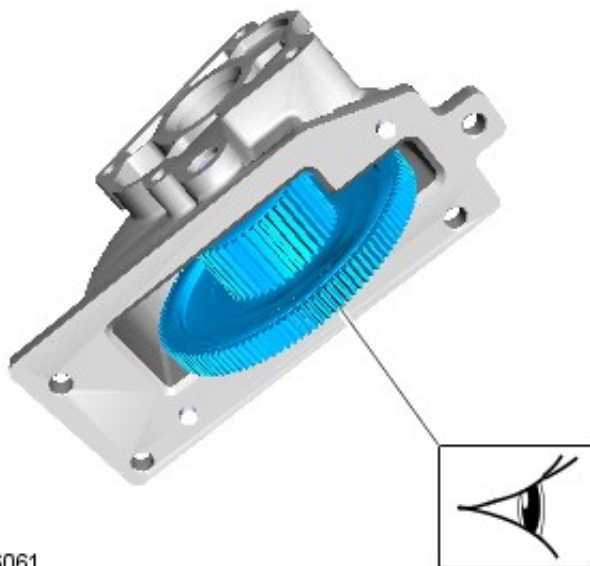

E146061

INSTALLATION


1.

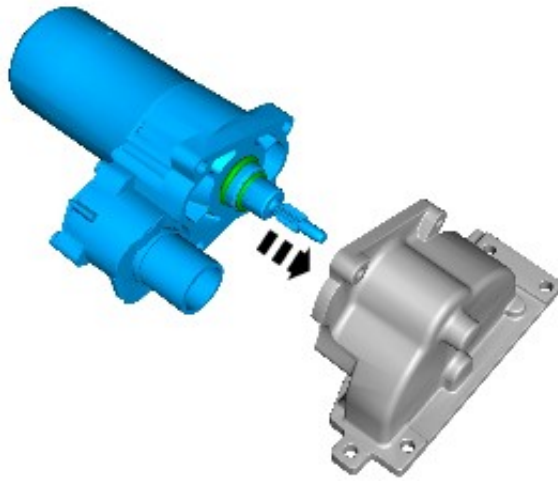

E146060

Clean the component mating faces.


2.

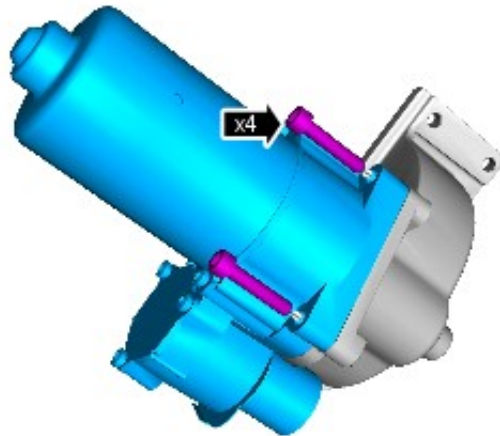

E146057


Torque: 12 Nm

3.

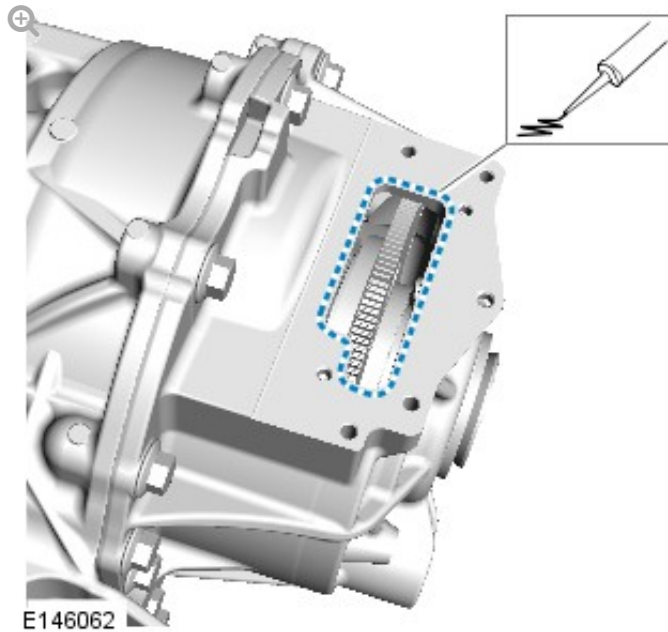

Clean the component mating faces and apply a continuous 3mm bead of sealant to the motor mating face on the differential.

4.

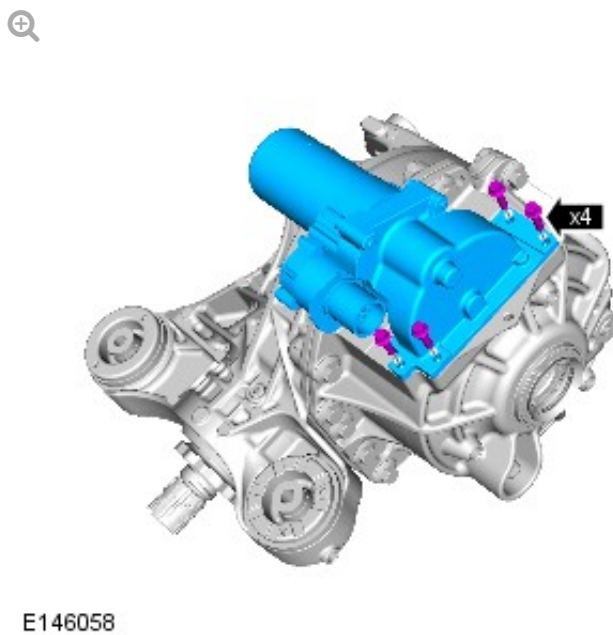

Torque: 10 Nm

5. Install the rear differential.

Refer to: Differential Case - TDV6 3.0L Diesel/TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (205-02, Removal and Installation).

6. Using the Land Rover approved diagnostic system, calibrate the new differential locking motor.