

2016.0 RANGE ROVER (LG), 205-05

REAR DRIVE HALFSHAFTS

INNER CONSTANT VELOCITY JOINT BOOT

(G1509029)



REMOVAL AND INSTALLATION

47.10.16	BOOT - INNER JOINT - RENEW	ALL DERIVATIVES	1.4	USED WITHINS	+
47.11.16	BOOT - INNER JOINT - RENEW	ALL DERIVATIVES	1.3	USED WITHINS	+

REMOVAL

NOTE:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.



1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.


Remove the rear halfshaft.

For additional information, refer to: [Rear Halfshaft](#) (205-05 Rear Drive Halfshafts, Removal and Installation).

3.

NOTE:

Discard the boot clamps.

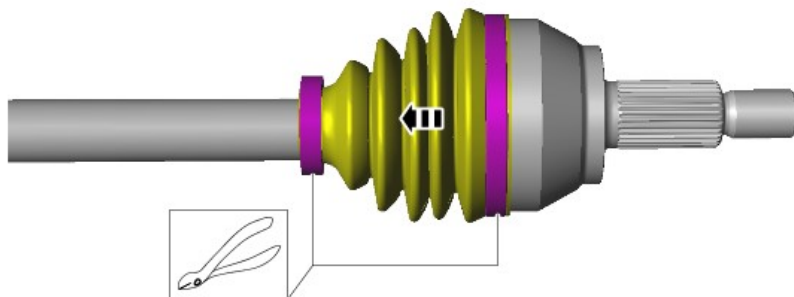

E147426

4.

NOTE:


Make sure to clean out all grease from the outboard joint.



E147425

Mark the halfshaft as shown.

5.

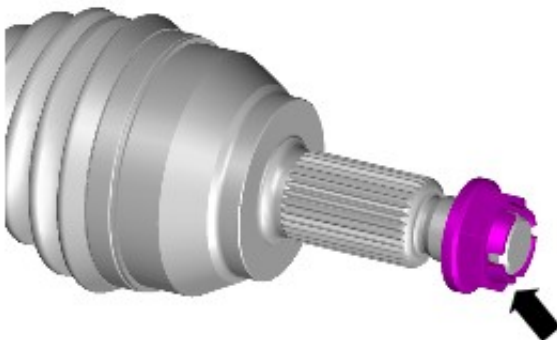

E149790

Install the halfshaft nut onto the CV joint as illustrated to protect the thread.

6.


CAUTION:

Make sure that the CV joint is positioned as illustrated.



E149748


7.

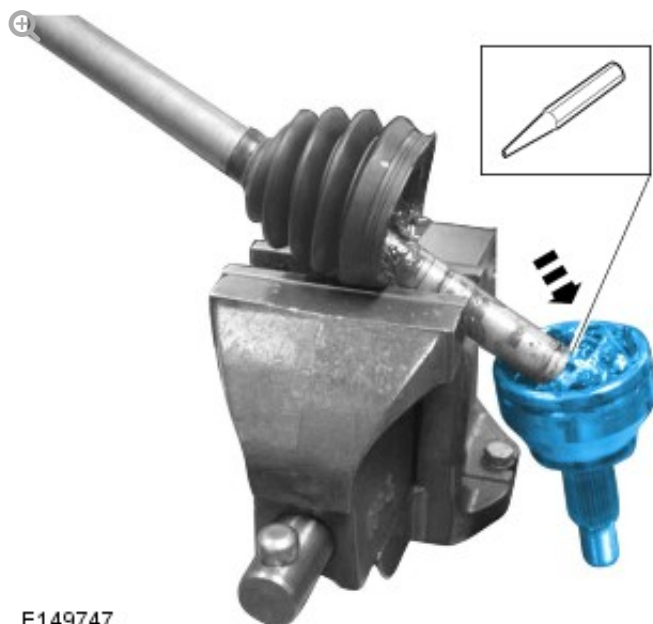

E149747

Using a suitable drift against the inner part of the CV joint, remove the CV joint from the halfshaft.


8.

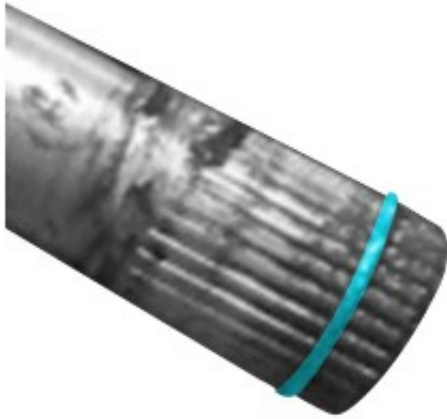

E149746

Remove and discard the retaining clip.

9.

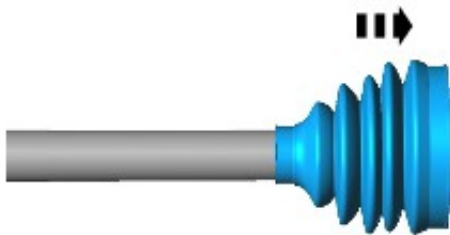


E147424

Discard the outboard joint boot.

10.

NOTE:

Clean out all grease from the inboard joint.

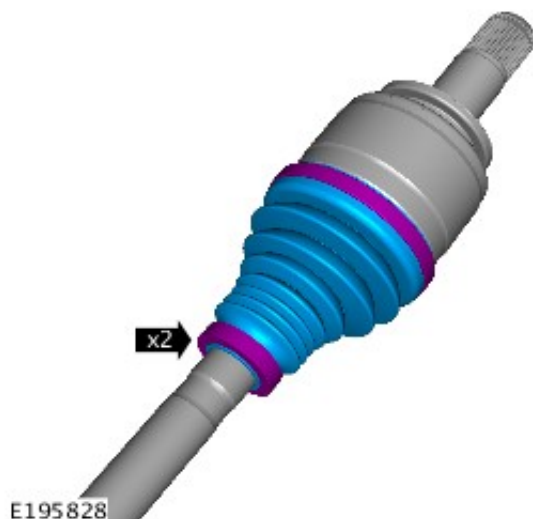

Remove and discard the inner CV joint boot retaining clip.

INSTALLATION


1.

CAUTION:

Make sure that a new component is installed.

NOTE:

Apply the required quantity of grease meeting the correct specification.

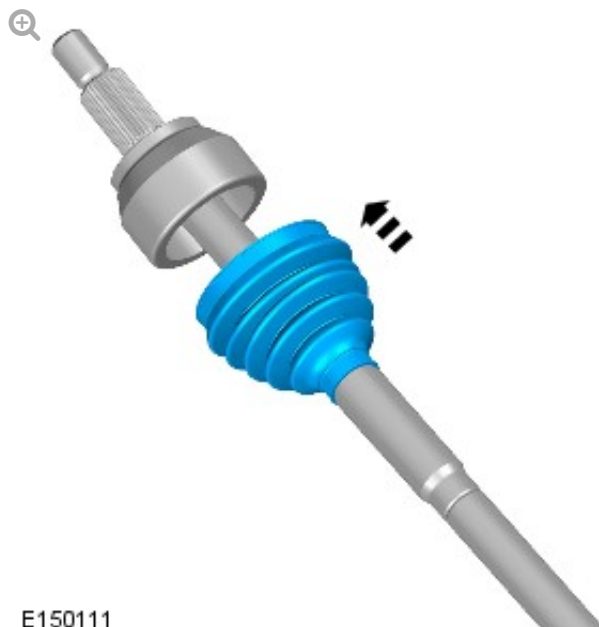


E150111

Pack the inboard joint with (150 grams) of grease. Slide the inboard boot into the correct position.

2.

NOTE:

Make sure that the boot clamps are correctly installed.

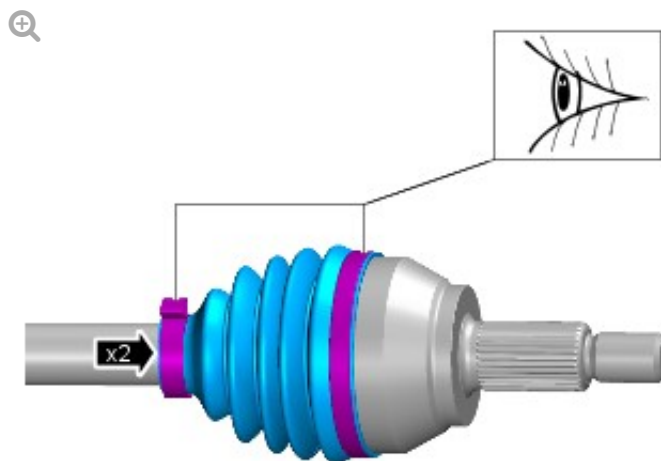


E149791

3.

NOTE:

Make sure that a new boot clamp and joint boot are installed.

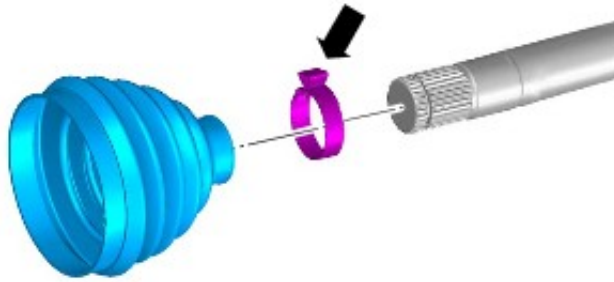


E149787

Slide the outboard joint boot onto the shaft.

4.

NOTE:

Make sure a new retaining ring is to be installed.

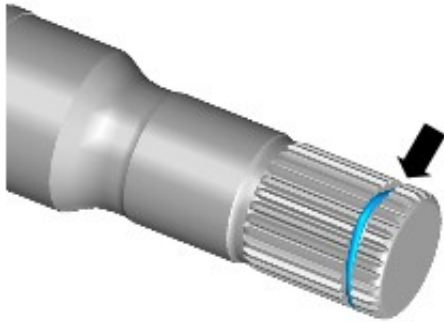

E149789

Clean and inspect the components for deterioration.

5.

NOTE:

Make sure that the component is installed to the noted removal position.



E195829


Install the inner CV joint. Using a suitable soft faced hammer, strike the CV joint in the direction shown.

- Once correctly installed on the shaft, pack the outboard joint with (68 grams) of grease for compact type boot or (213 grams) of grease for convolute type boot.

6.

NOTE:

Remove and discard the nut.

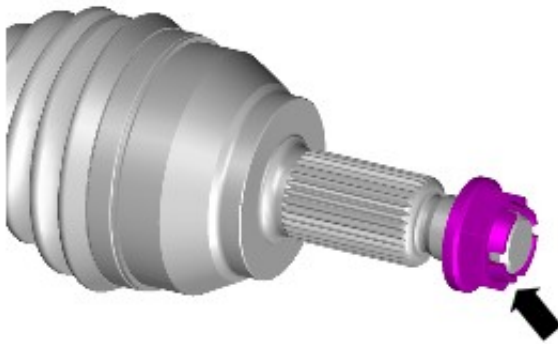


E149790

7.

NOTE:

- Make sure that the outer CV joint boot is correctly installed.
- Make sure that the boot clamps are correctly installed.

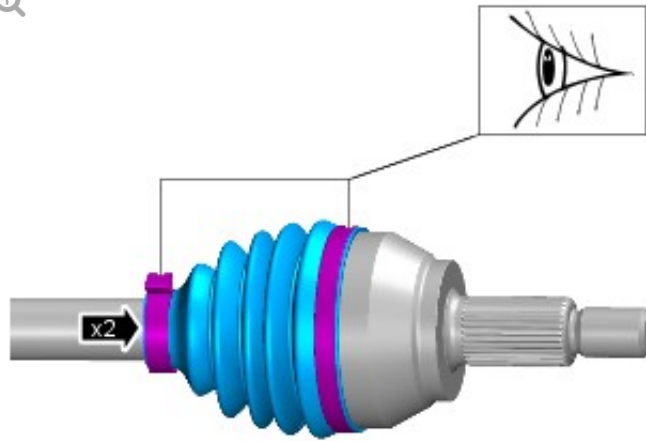

E149791

Slide the outer CV joint boot into position and secure.

-
8. Install the rear halfshaft.

For additional information, refer to: [Rear Halfshaft](#) (205-05 Rear Drive Halfshafts, Removal and Installation).