

2016.0 RANGE ROVER (LG), 205-05

REAR DRIVE HALFSHAFTS

REAR HALFSHAFT (G1509027)

REMOVAL AND INSTALLATION

47.11.01	SHAFT WITH BOTH JOINTS - RENEW	ALL DERIVATIVES	1	USED WITHINS	+
----------	--	--------------------	---	-----------------	---

SPECIAL TOOL(S)



204-506/1(LRT-60-030/1)

Halfshaft
remover/replacer



204- 506/2(LRT- 60-030/2)

Halfshaft
remover/replacer



204- 506/3(LRT- 60-030/3)

Halfshaft
remover/replacer



204- 506/5(LRT- 60-030/5)

Retainers - halfshaft
remover/replacer



308- 005(LRT- 37-004/2)

Axle oil seal remover



308-626/2

Installer/Guide
halfshaft oil seal



308-626/1

Installer halfshaft oil
seal



JLR-204- 506-02

Halfshaft installer
adapter



100- 012(LRT- 99-004)

Impulse extractor

REMOVAL

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. For additional information, refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

3. For additional information, refer to: [Brake Disc](#) (206-04 Rear Disc Brake, Removal and Installation).

4. For additional information, refer to: [Differential Draining and Filling](#) (205-02 Rear Drive Axle/Differential, General Procedures).


5.

CAUTION:

Do not use air tool to remove the hafshaft nut.

NOTE:

Retain the nut for the installation procedure.

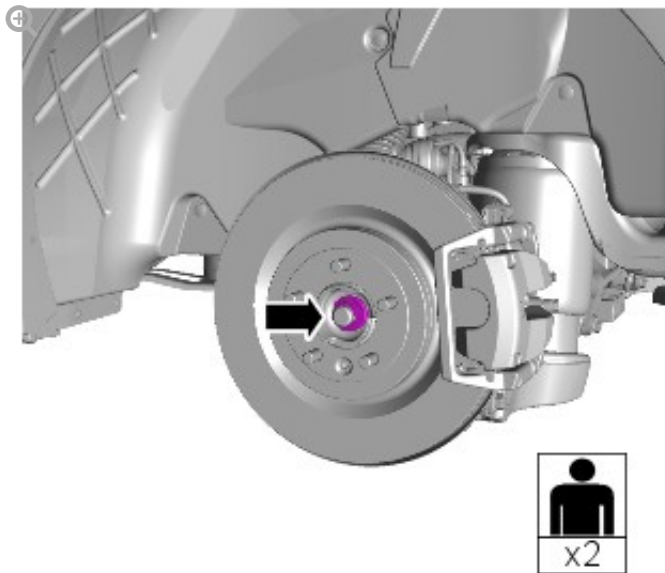


E147102

6.

CAUTION:


Do not use a hammer to detach the halfshaft from the hub assembly, failure to follow this instruction may result in damage to the halfshaft.

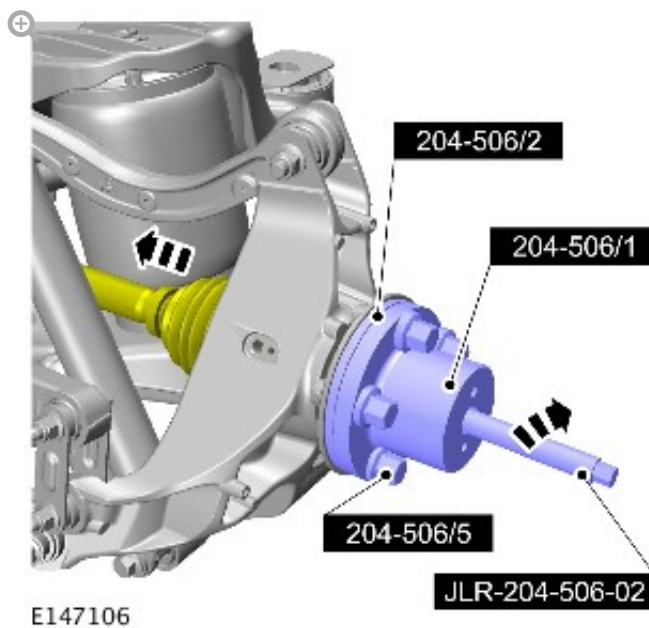

E147106


Using the special tools, release the halfshaft from the wheel hub.

7.

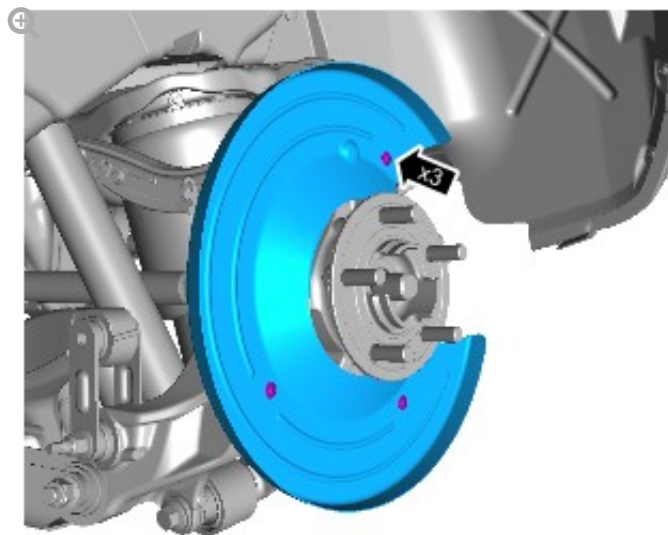


E148378

8.

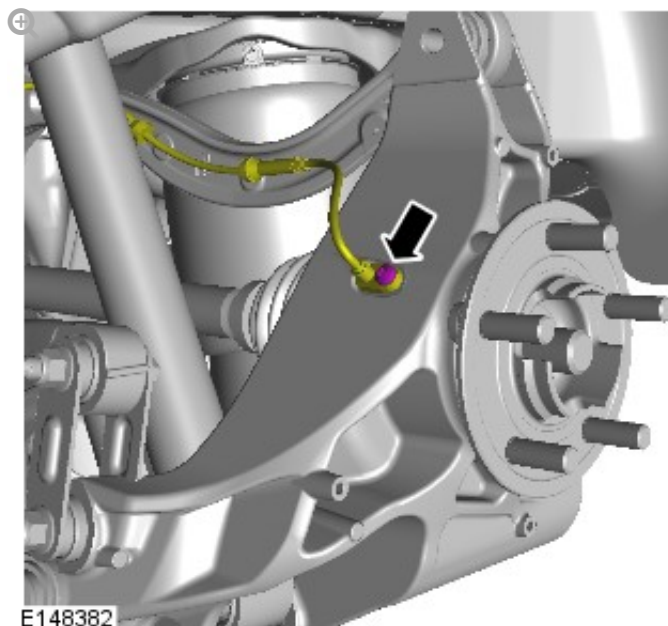

E148382

9.

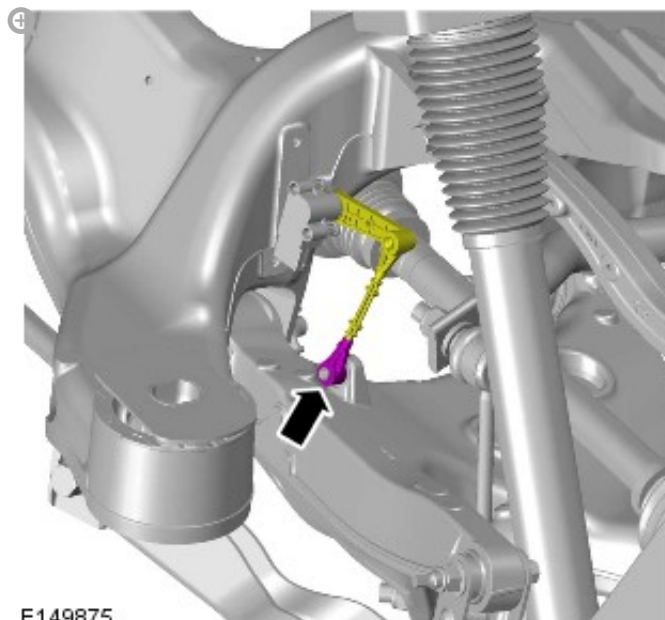


E149875

10.

NOTE:

Discard the nut and bolt.

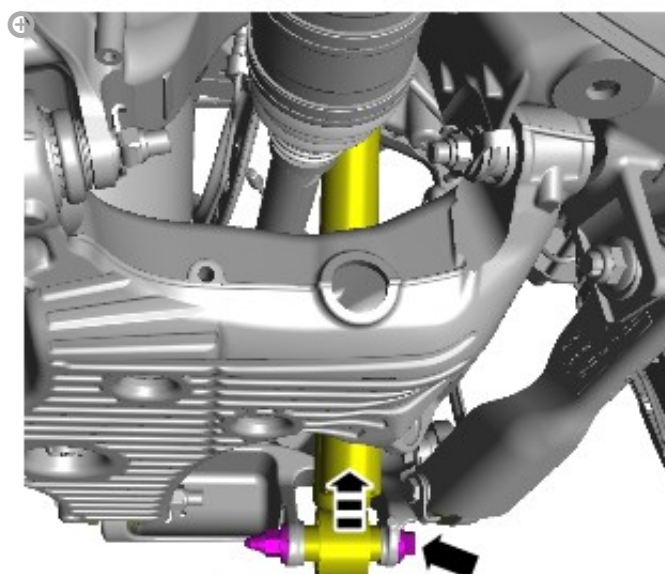


E148381

11.

NOTE:

Discard the nut and bolt.

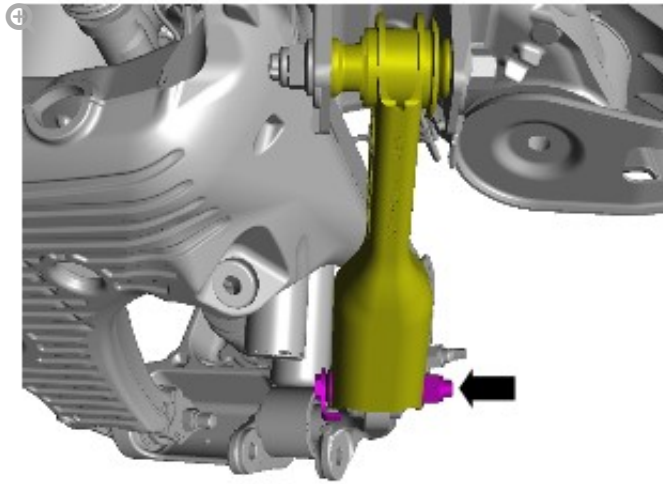


E148380

12.

NOTE:

Discard the nut and bolt.

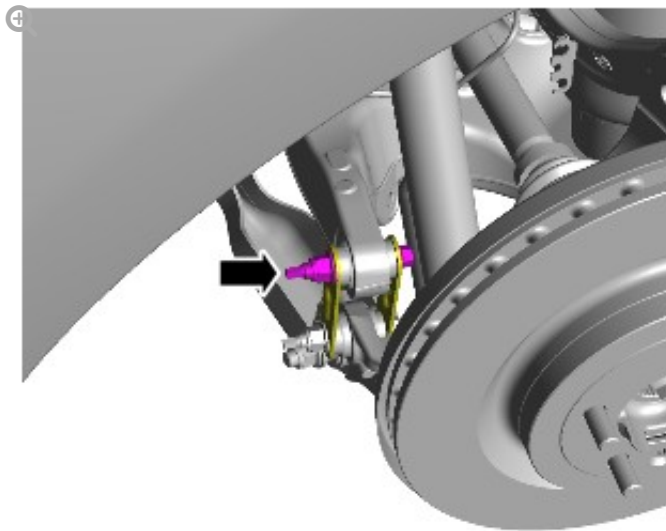

E147104


13.

WARNING:

Use a jack to support the hub and lower arm.

CAUTION:

To prevent the wheel knuckle falling outwards and disconnection of the halfshaft inner joint, support the wheel knuckle.

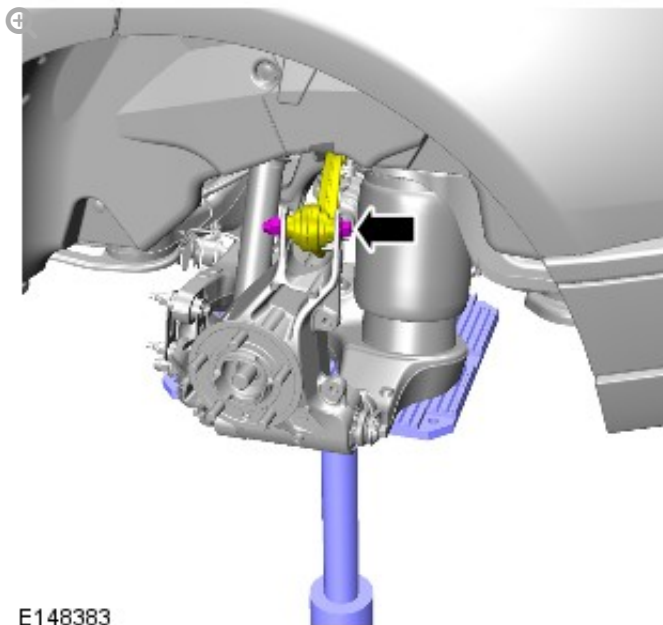

E148383


14.

CAUTION:

Make sure no damage occurs to the halfshaft CV joint and boot.

NOTE:

Discard the bolt.

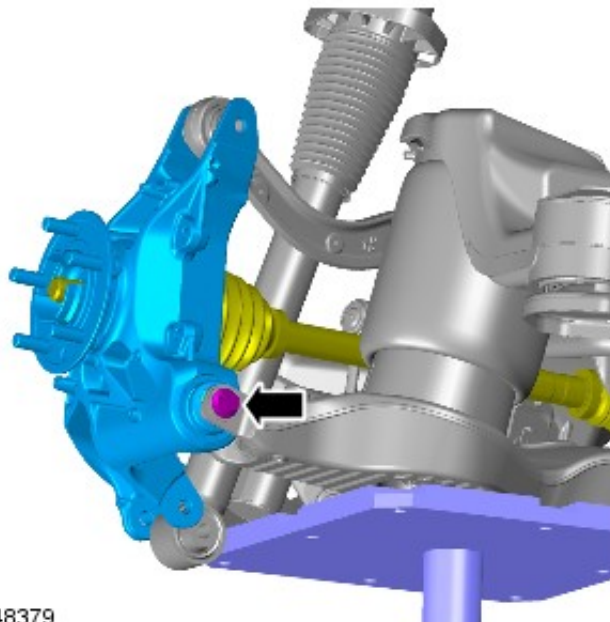

E148379


15.

CAUTION:


Make sure no damage occurs to the axle or the halfshafts.

NOTE:

Ensure halfshaft gaitors are not damaged during the halfshaft removal.

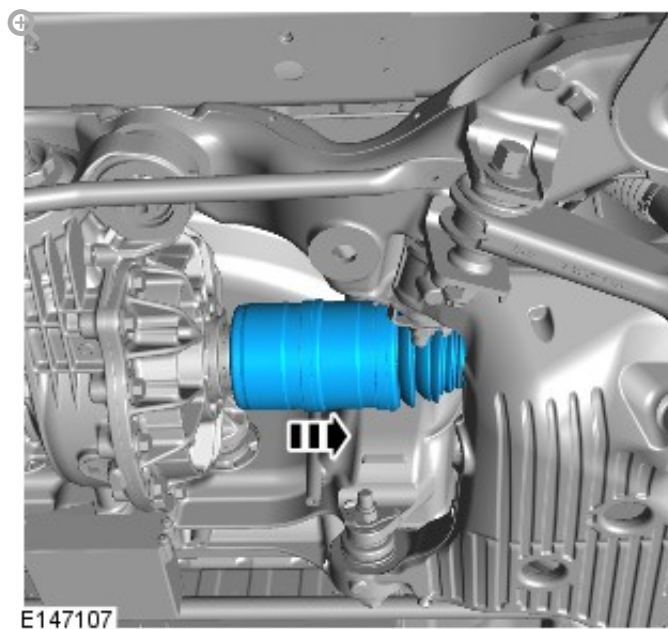

16.

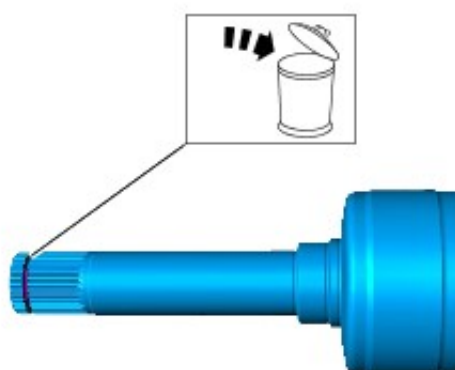


E148768

17.


NOTE:

Discard the o-ring seal.

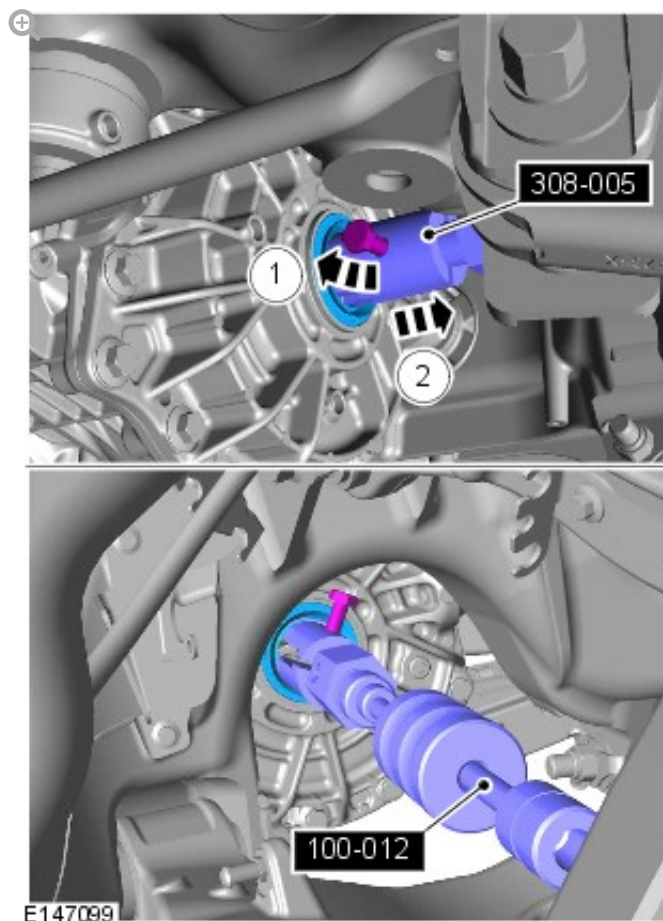

INSTALLATION

1.

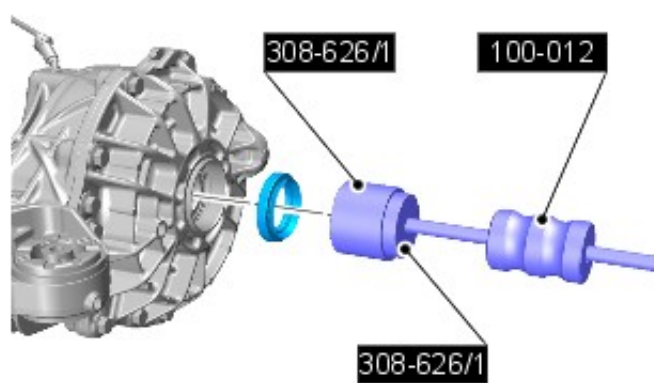


Using the special tools, install a new halfshaft seal.

- Clean the component mating faces.

2.

NOTE:

Make sure that new circlip is to be installed.

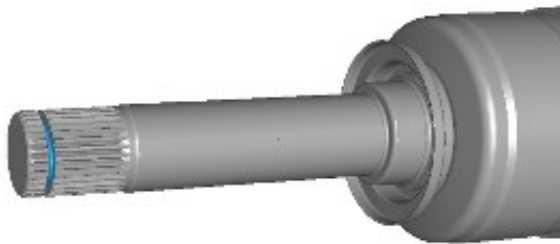

E148814


3.

CAUTION:

The seal protector must be left in place until the halfshaft has been installed.

NOTE:


Ensure halfshaft gaitors are not damaged during installation.

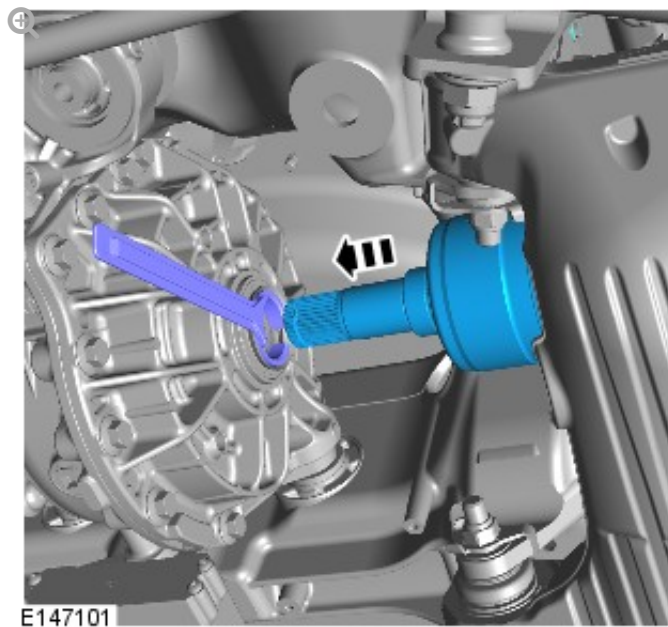

4.

CAUTION:


Pull on the halfshaft inboard joint to make sure the clip has fully engaged and retains the halfshaft inboard joint within the differential case.

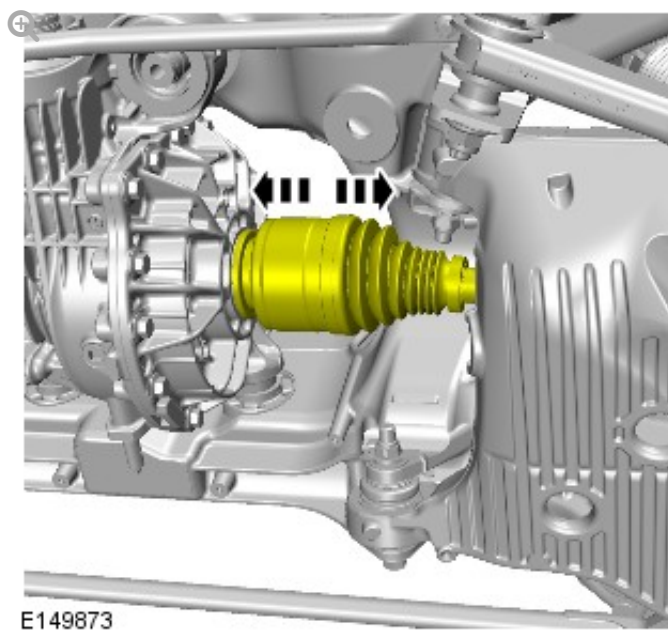

5.

CAUTIONS:

- To prevent the wheel knuckle falling outwards and disconnection of the halfshaft inner joint, support the wheel knuckle.
- Nuts and bolts must be tightened with vehicle at normal ride height.

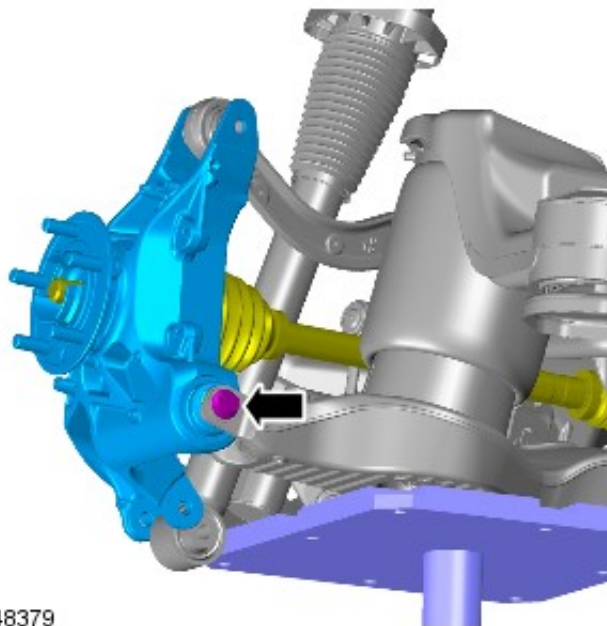


E148379

Torque: 70 Nm + 240°

6.


CAUTION:

Nuts and bolts must be tightened with vehicle at normal ride height.

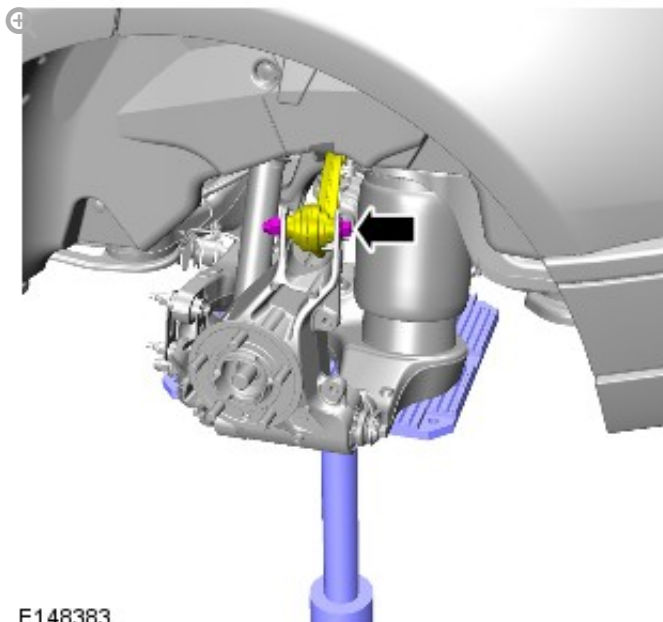

Torque: 50 Nm + 60°


7.

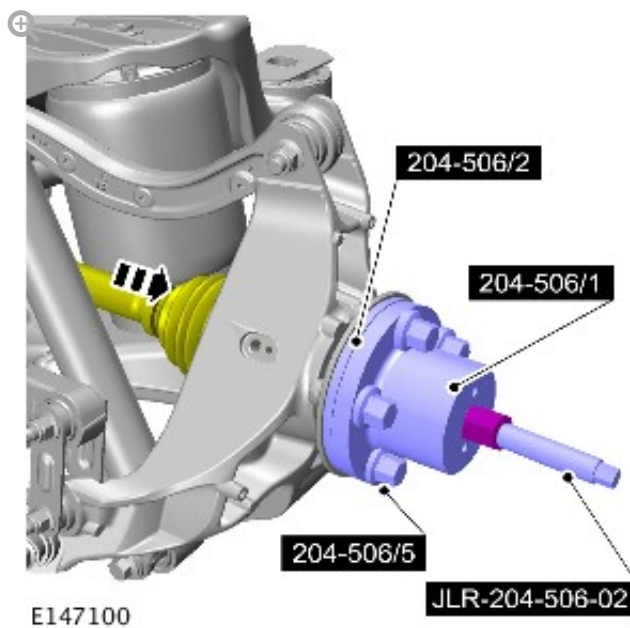

8.

CAUTIONS:

- Make sure that new nut and bolt are installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

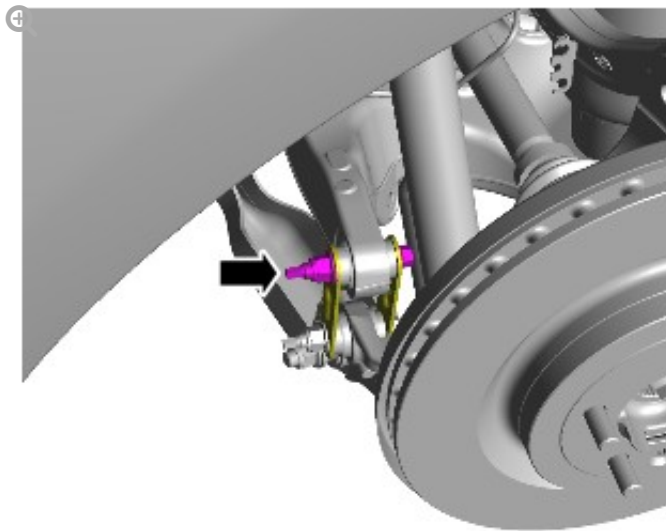


E147104

TORQUE: 50 Nm + 180°

9.

CAUTIONS:

- Make sure that new nut and bolt are installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

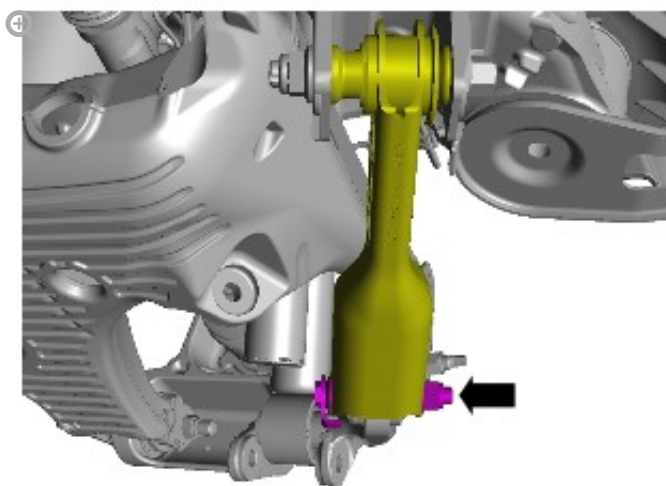


E148380

Torque: 70 Nm + 240°

10.

CAUTIONS:


- Make sure that new nut and bolt are installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

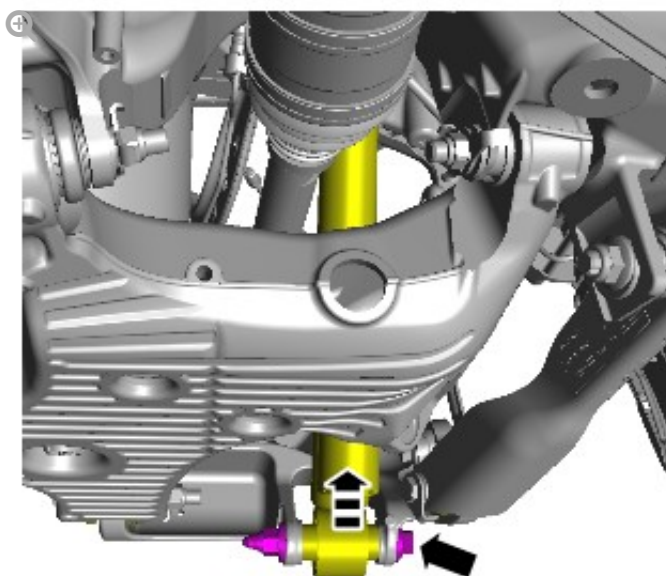

E148381


Torque: 100 Nm + 240°

11.

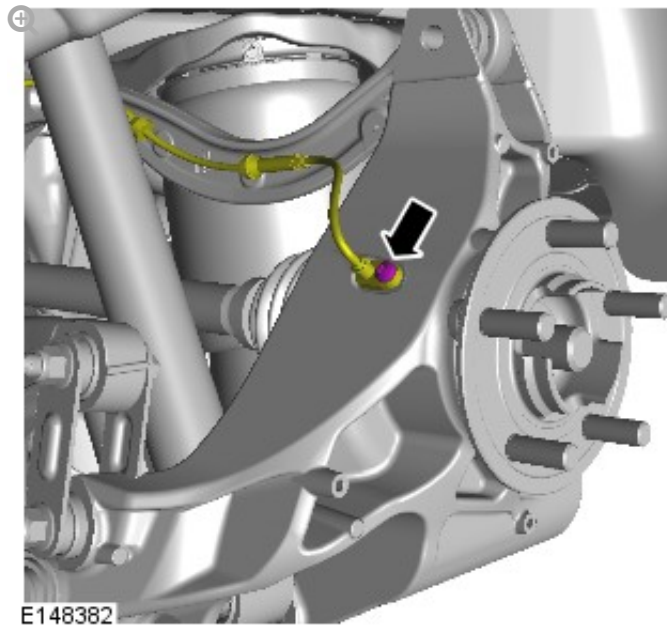

Torque: 9 Nm


12.

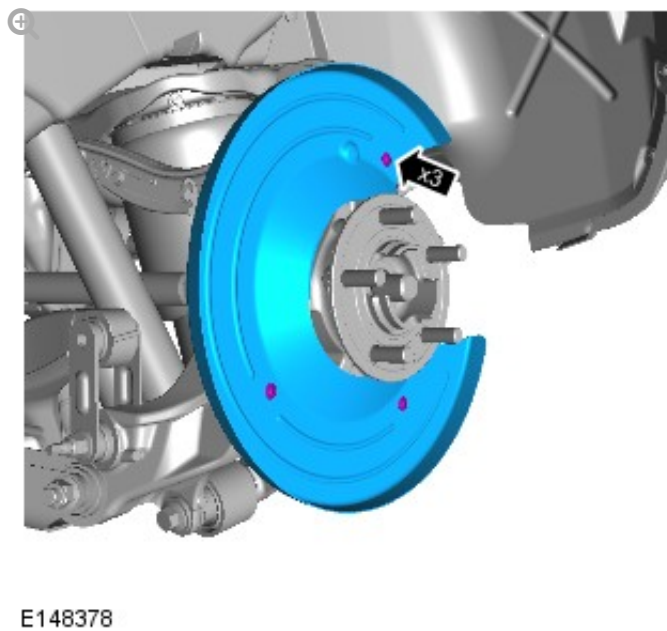

Torque: 9 Nm

13. For additional information, refer to: [Brake Disc](#) (206-04 Rear Disc Brake, Removal and Installation).

14.

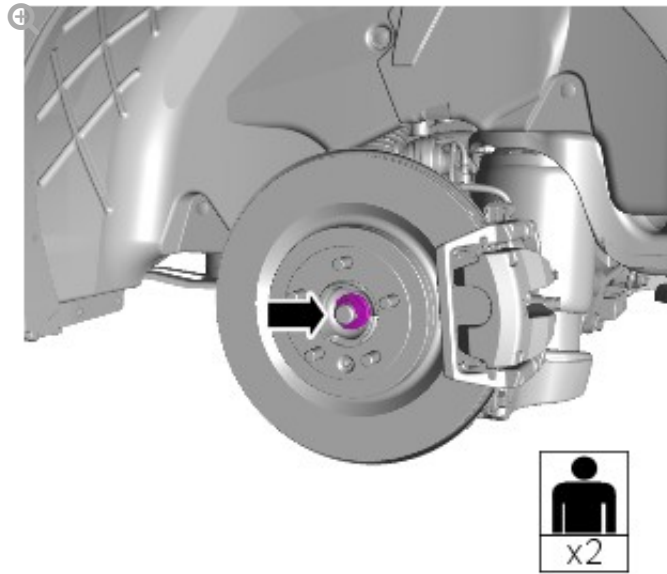

E147102


Apply the footbrake to aid the halfshaft nut installation.

1. Torque: 290 Nm

15.

CAUTION:

Do not use air tools to remove the hafshaft nut.

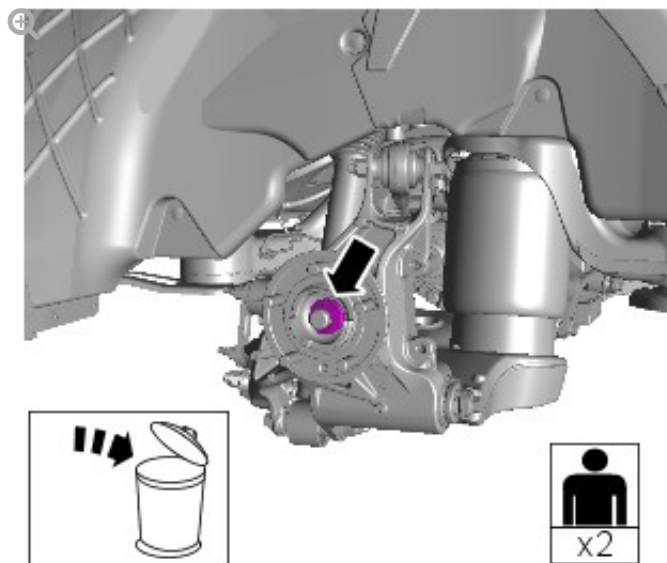


E147105

16.

NOTE:

Install new nut.

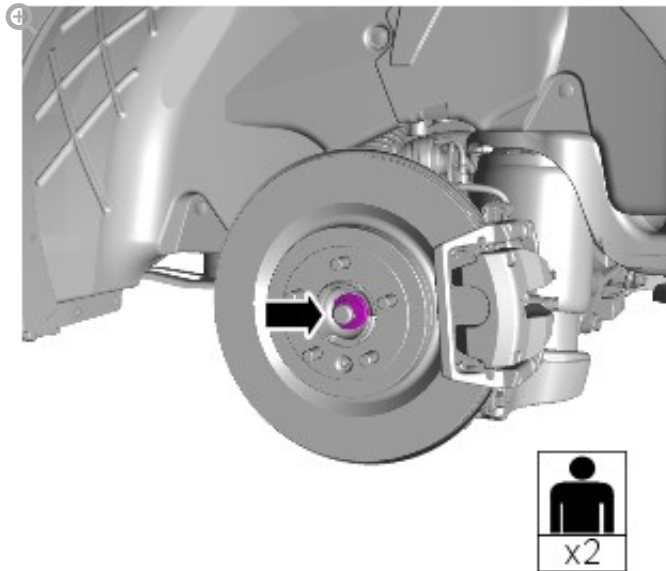

E147102

Apply the footbrake to aid the halfshaft nut installation.


1. Torque: 120 Nm + 60°

-
17. The Air Suspension Manual Control Procedure must be carried out. For additional information, refer to: [Air Suspension - Manual Control Procedure](#) (204-05 Vehicle Dynamic Suspension, General Procedures).
-

18.

CAUTION:

Apply a small amount of grease to the hub spigot and associated wheel spigot bore before installation. Make sure the grease does not come into contact with the vehicles braking components, or wheel studs threads. Failure to follow these may result in personal injury.

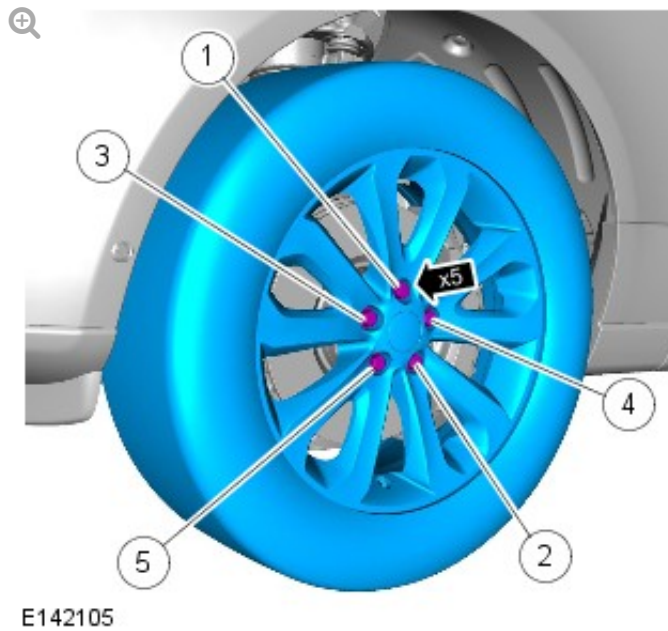

1. Stage 1 : 4 Nm
2. Stage 2 : 70 Nm
3. Stage 3 : 140 Nm

-
19. For additional information, refer to: [Differential Draining and Filling](#) (205-02 Rear Drive Axle/Differential, General Procedures).
-
20. For additional information, refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).