

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

DYNAMIC RESPONSE HYDRAULIC PUMP PRESSURE HOSE

[G1561064]

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



**204-591-
01**

Dynamic Response
Bleed Bottle



JLR-204-591-03

Adaptor, Dynamic Response Bleed Bottle

REMOVAL

WARNING:

Be prepared to collect escaping fluid.

CAUTIONS:

- Dynamic Response system components are manufactured to very precise tolerances. It is therefore essential that absolute cleanliness is observed when working with these components. Always install blanking plugs to any open orifices or lines. Failure to follow this instruction may result in foreign matter ingress to the dynamic response system.
- Make sure that all openings are sealed. Use new blanking caps.

NOTES:

- Some illustrations may show the engine removed for clarity.
- RHD shown, LHD is similar.



All vehicles

1.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
3. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

4.

NOTE:

Using a suitable tool, disconnect the high-pressure line.

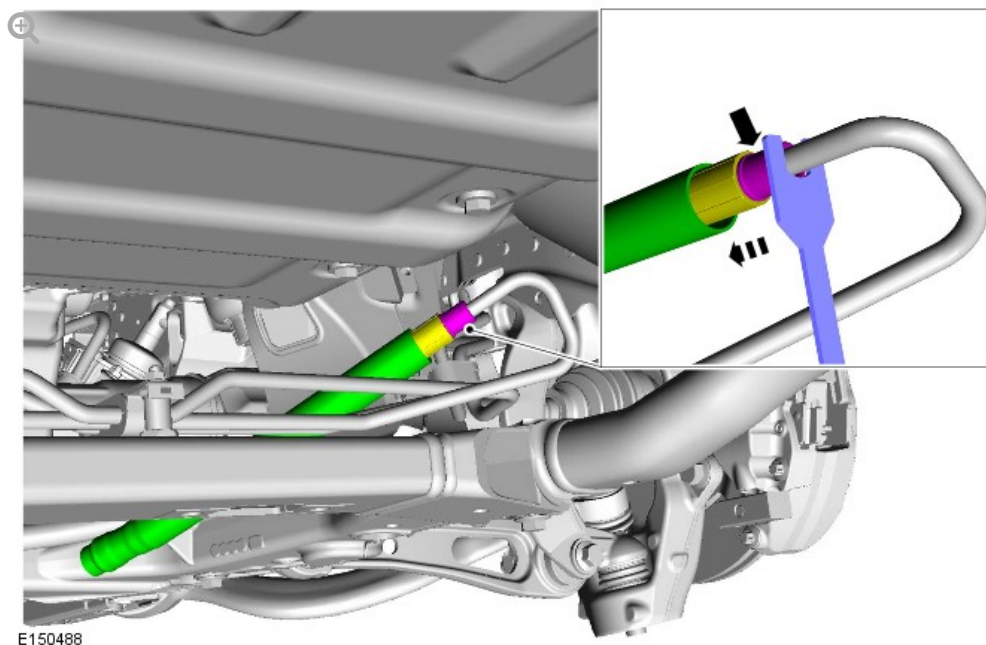


Vehicles with 5.0L engine

5.

NOTE:

Using a suitable tool, disconnect the high-pressure line.

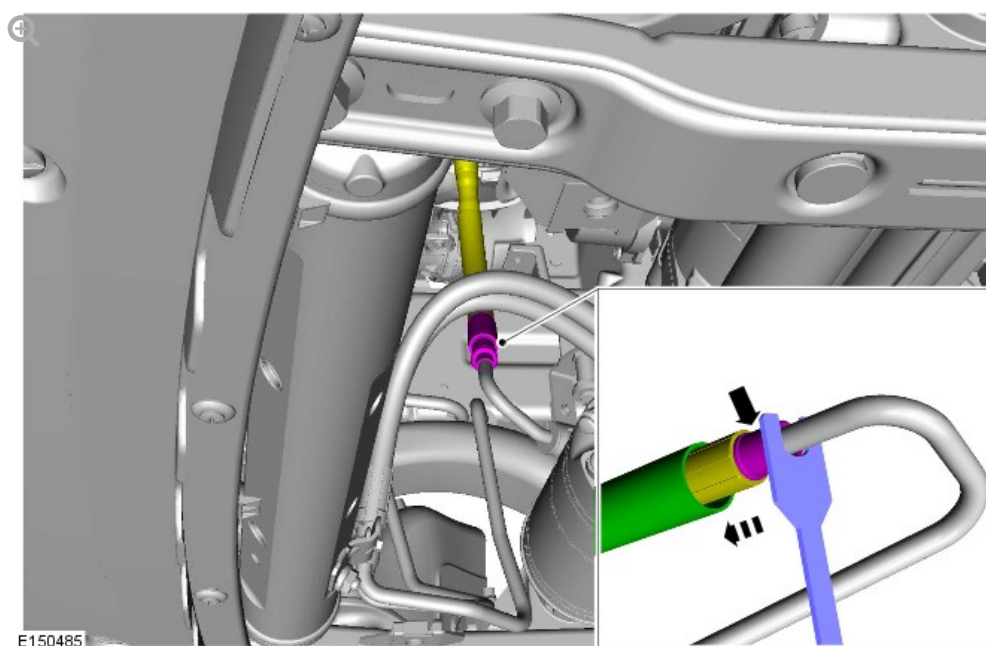




Vehicles with 4.4L diesel engine

6.


NOTE:

Using a suitable tool, disconnect the high-pressure line.

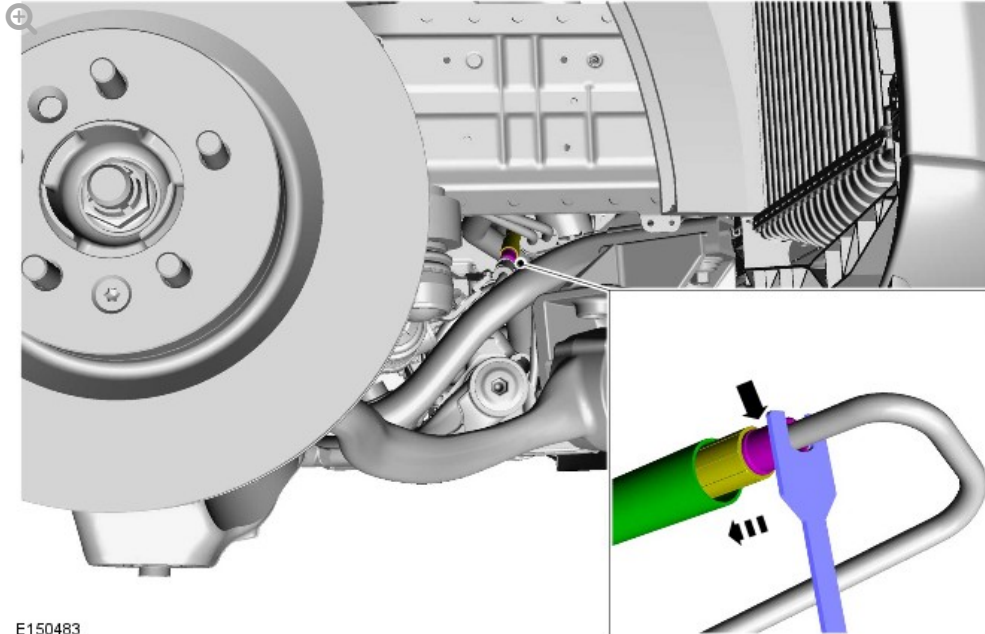

E150483

7.

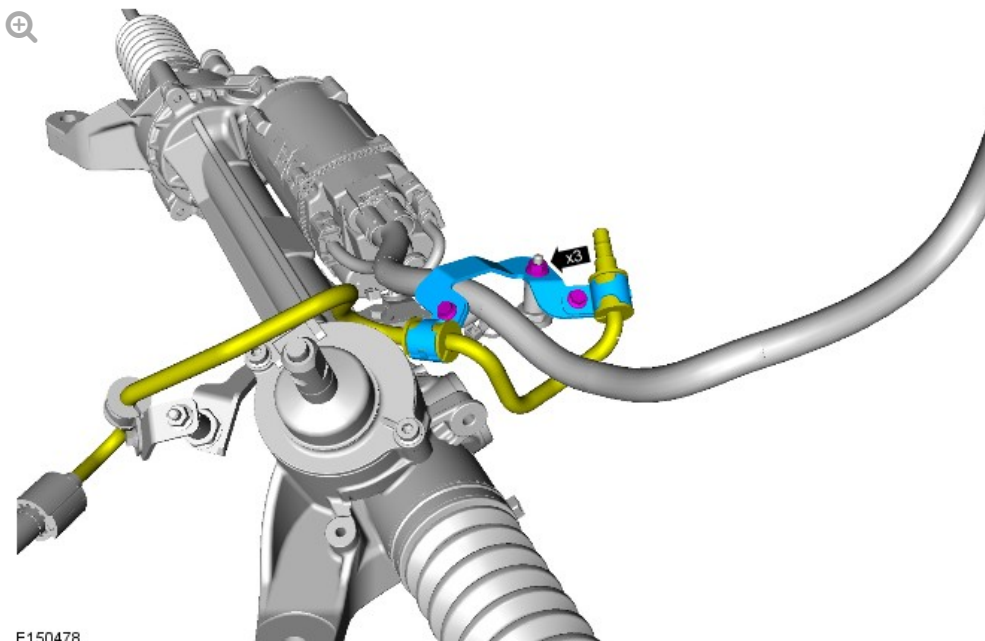


E150478



All vehicles

8.

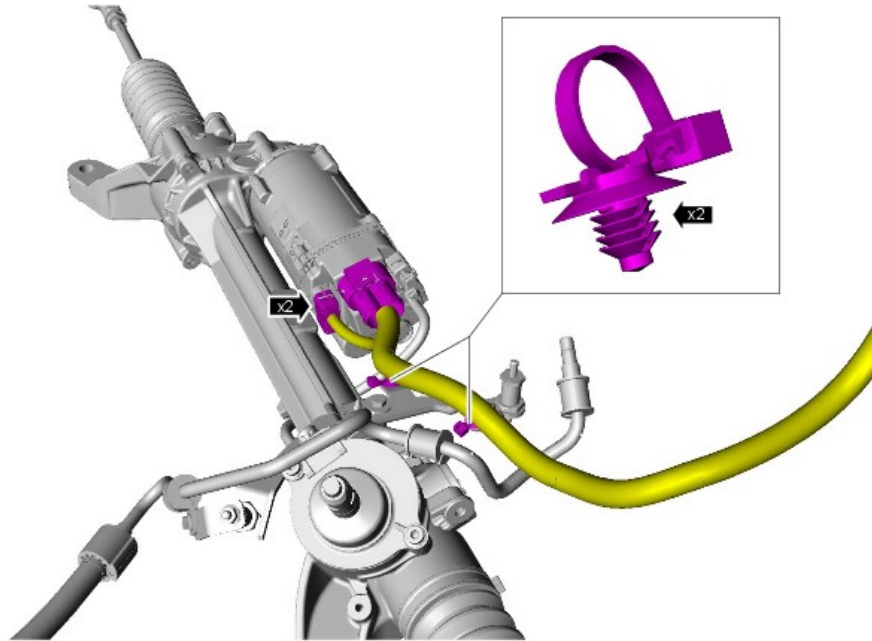


E150484

9.

CAUTION:

Make the components are aligned as shown.

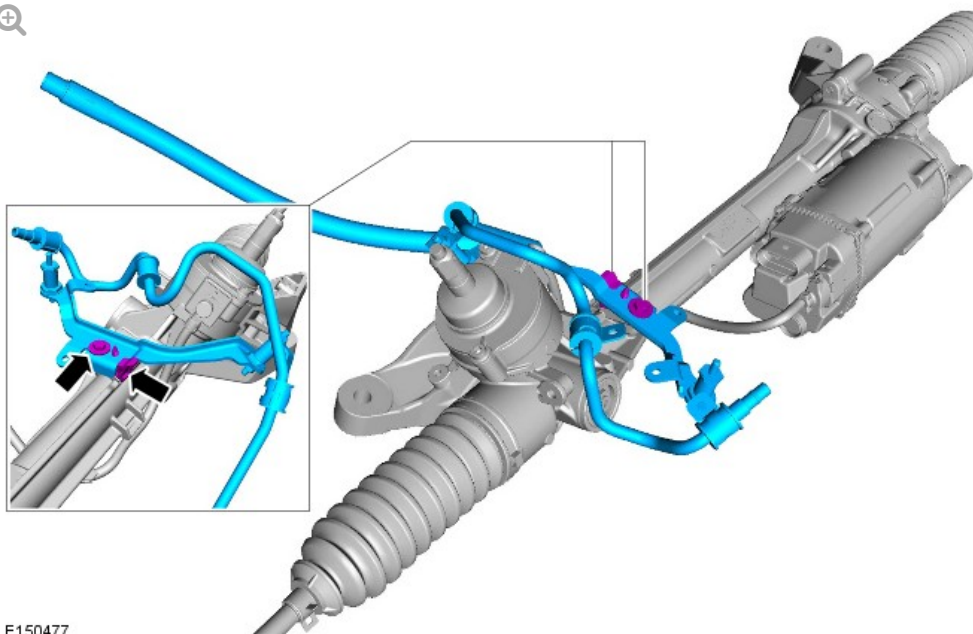


E150477



Vehicles with 5.0L engine


10. Refer to: [Air Cleaner Outlet Pipe T-Connector](#) (303-12D Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

11.

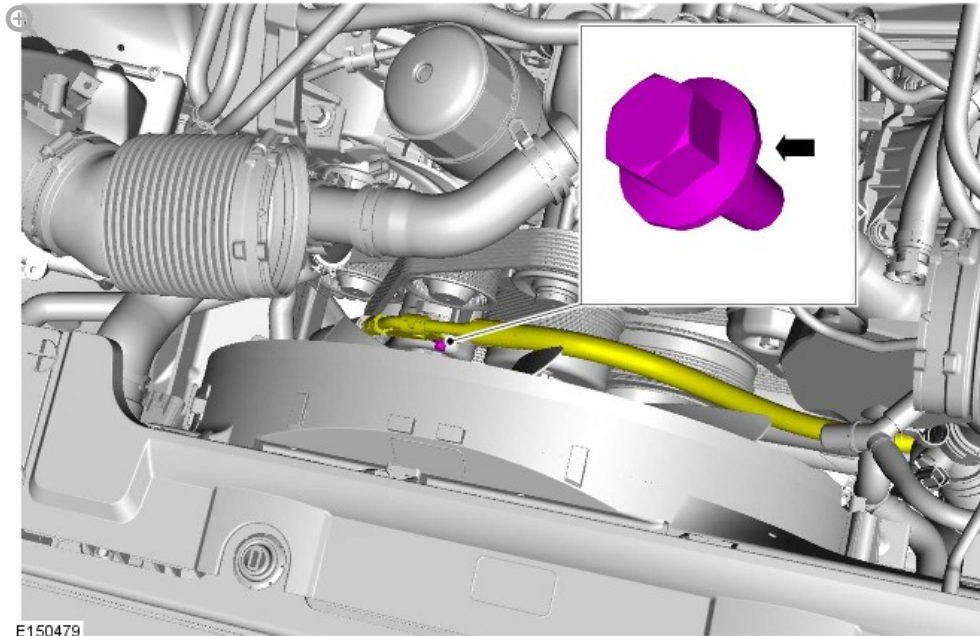


E150479

12.

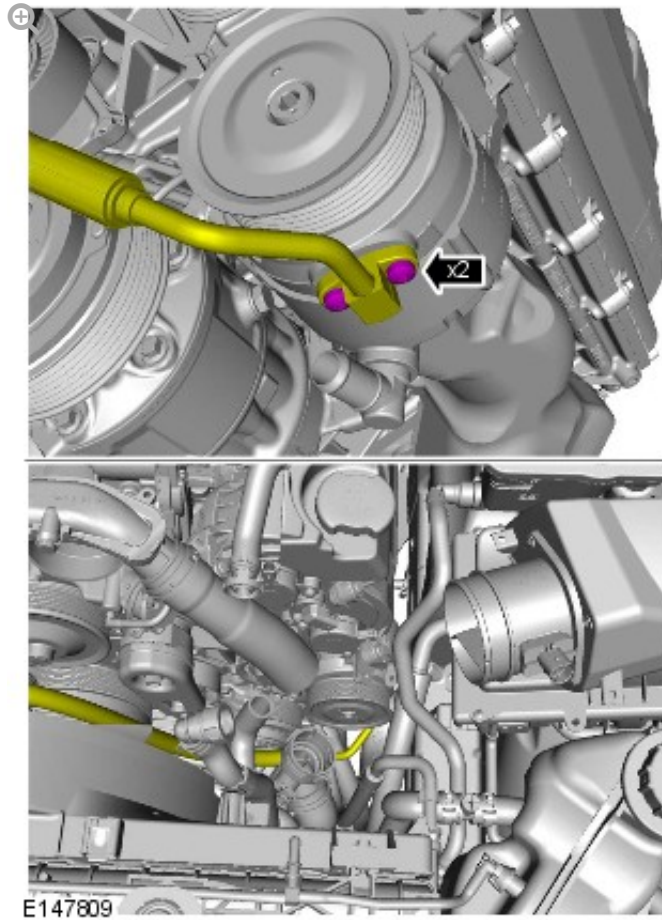

13.

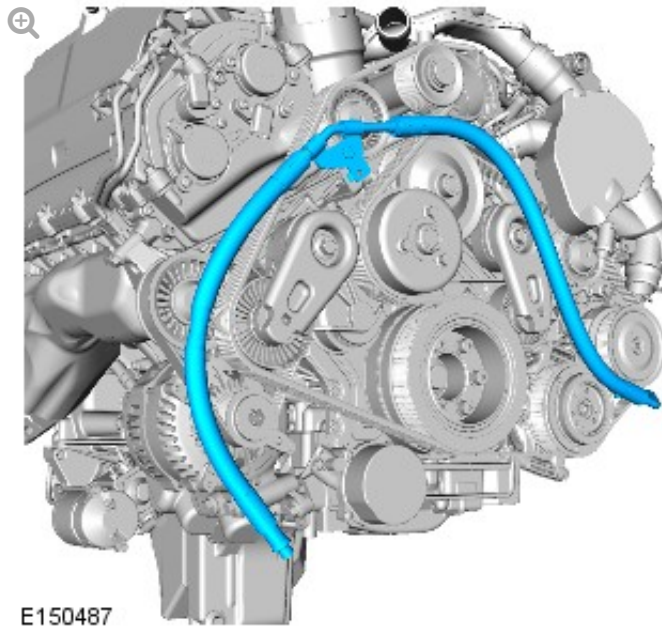


Vehicles with 4.4L diesel engine


14. Refer to: [Engine Cover - 4.4L V8 - TdV8](#) (501-05 Interior Trim and

Ornamentation, Removal and Installation).


15.

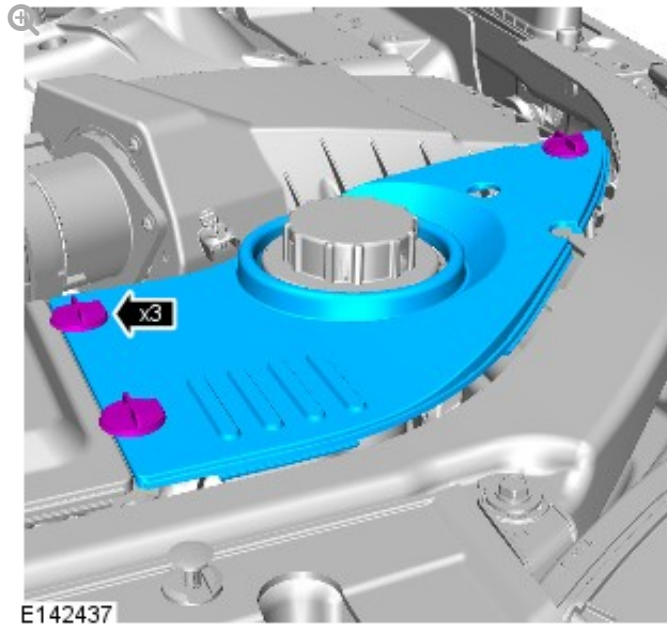


16.

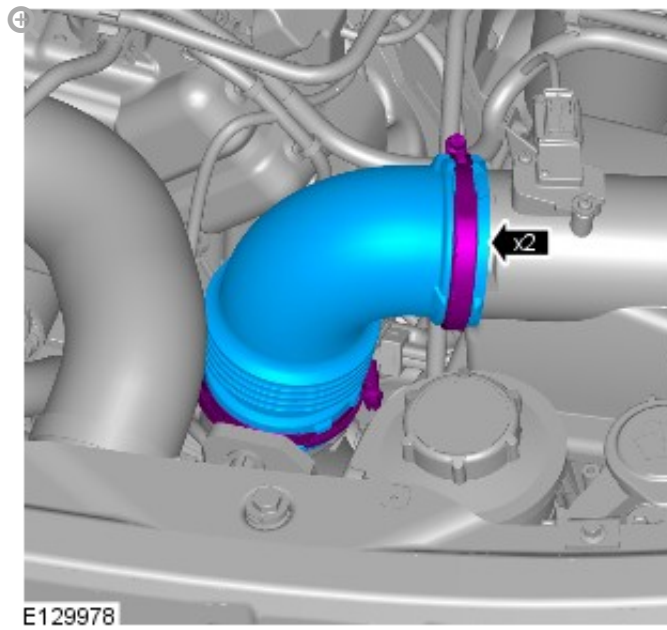


17.

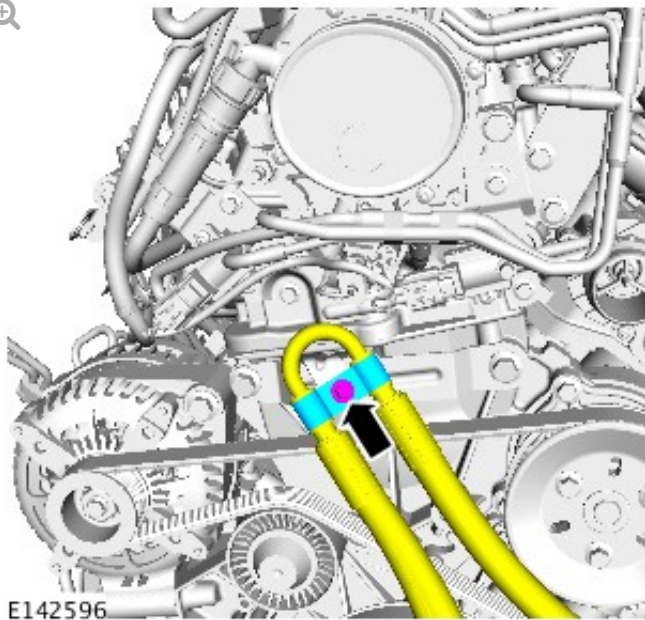

18.

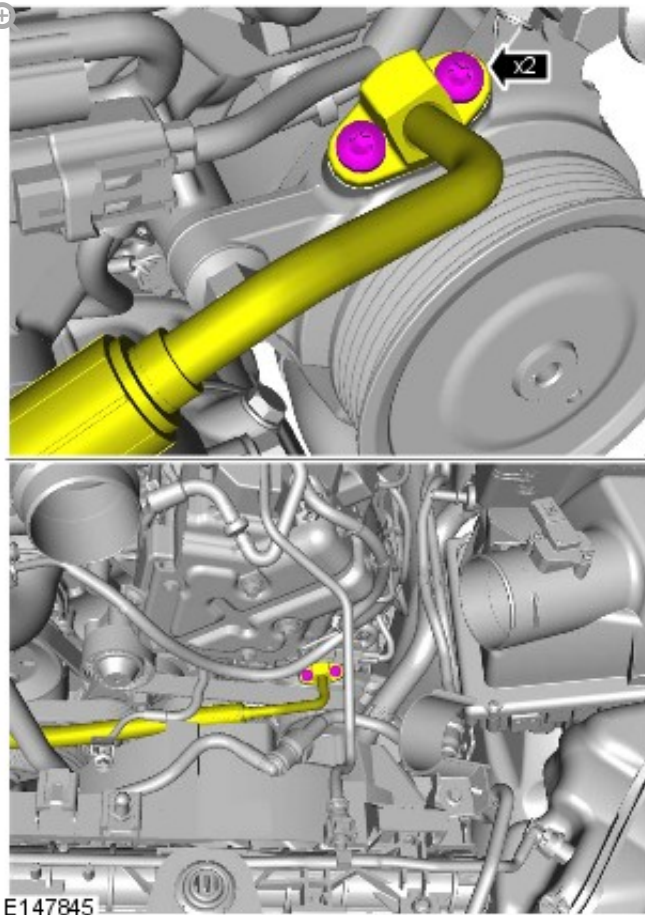

19.

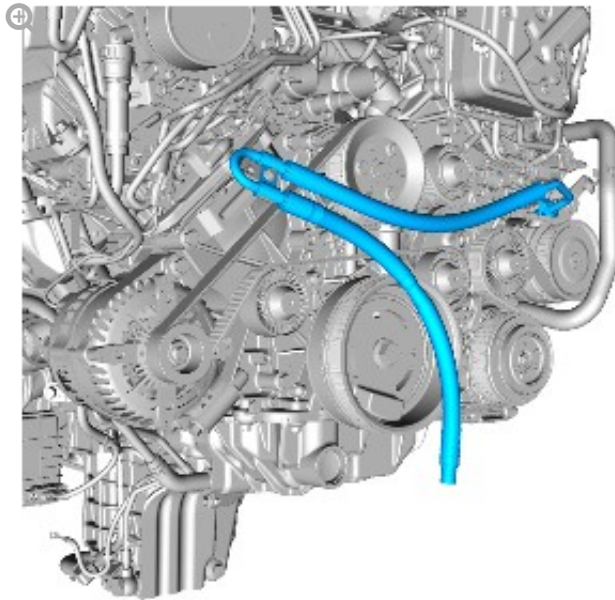


E150486

INSTALLATION




Vehicles with 4.4L diesel engine

1.

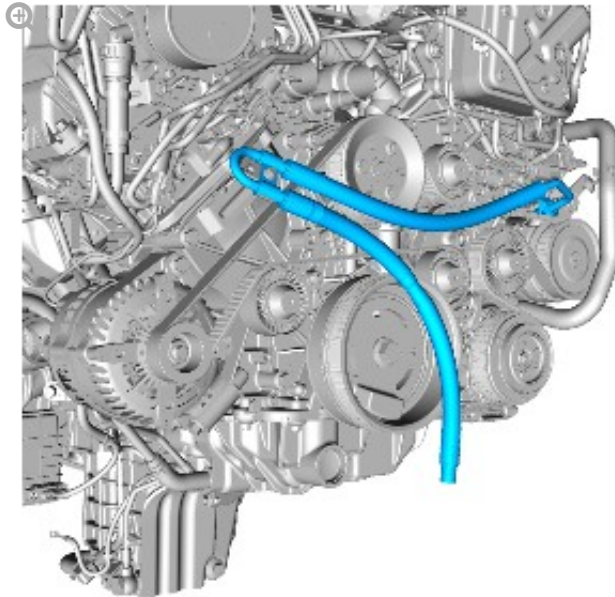


E150486

2.

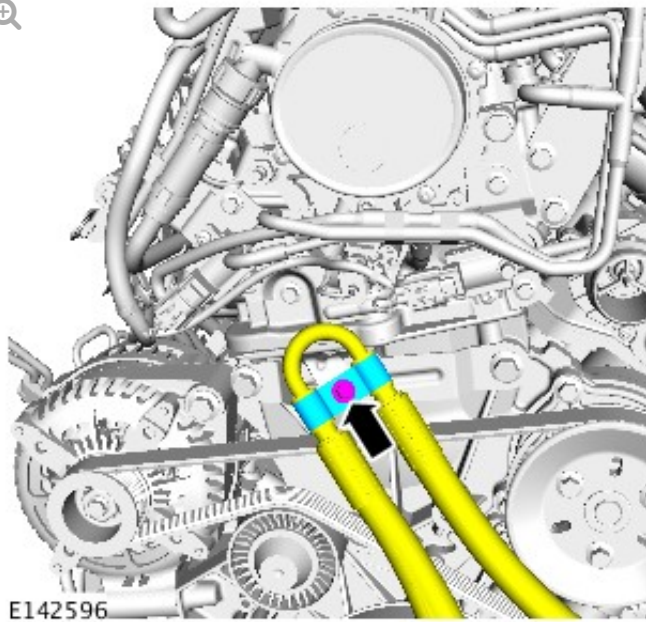


Torque: 10 Nm

3.

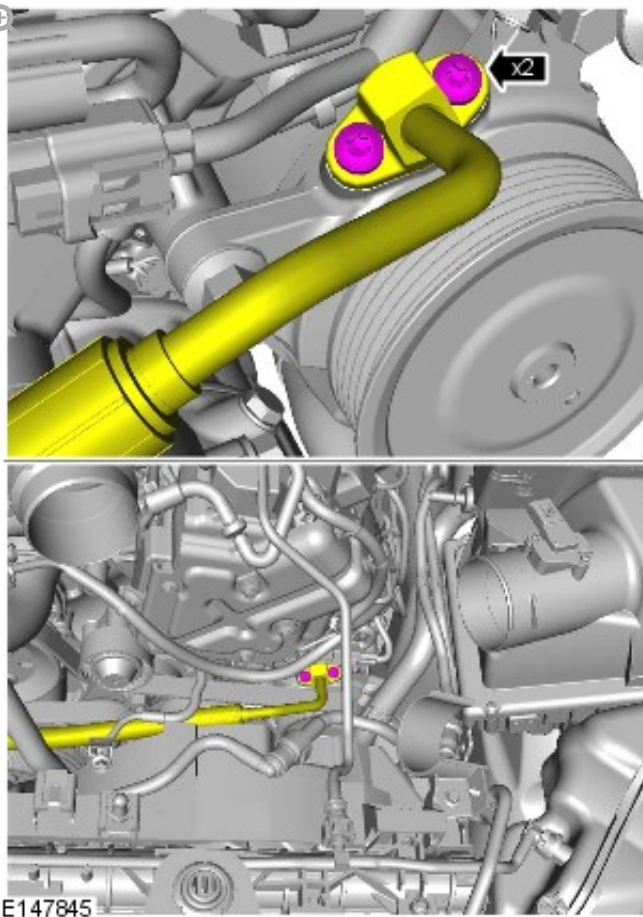


Torque: 10 Nm

4.

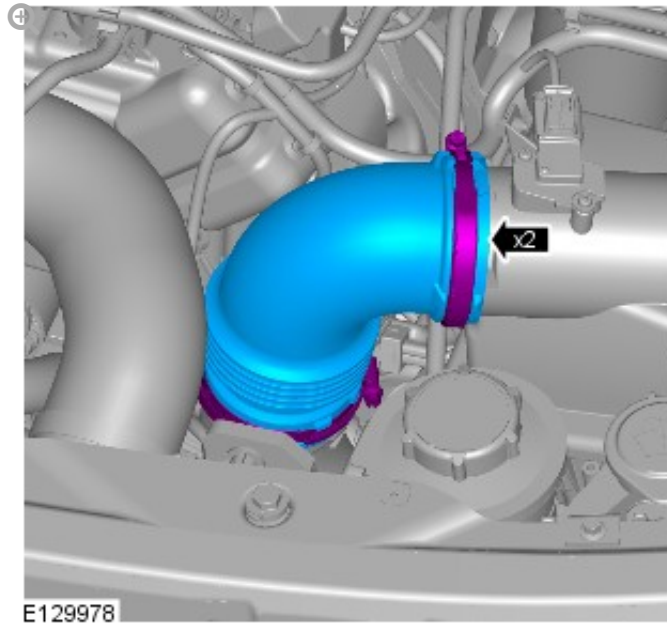

5.

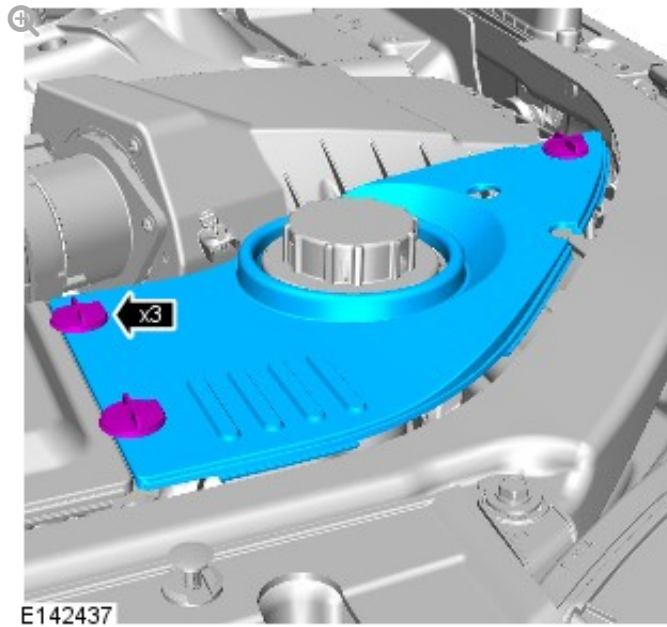


6. Refer to: [Engine Cover - 4.4L V8 - TdV8](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).




Vehicles with 5.0L engine

7.

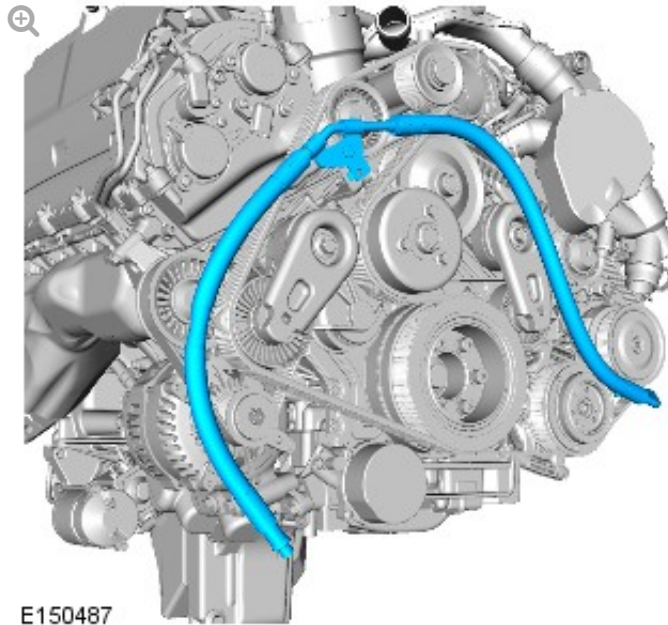


8.

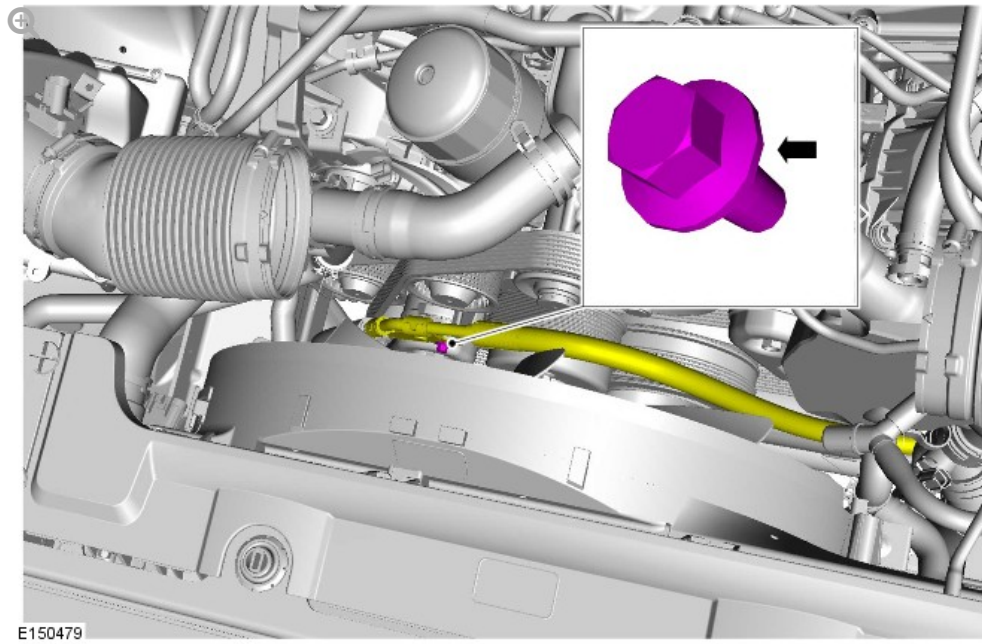

Torque: 10 Nm

9.

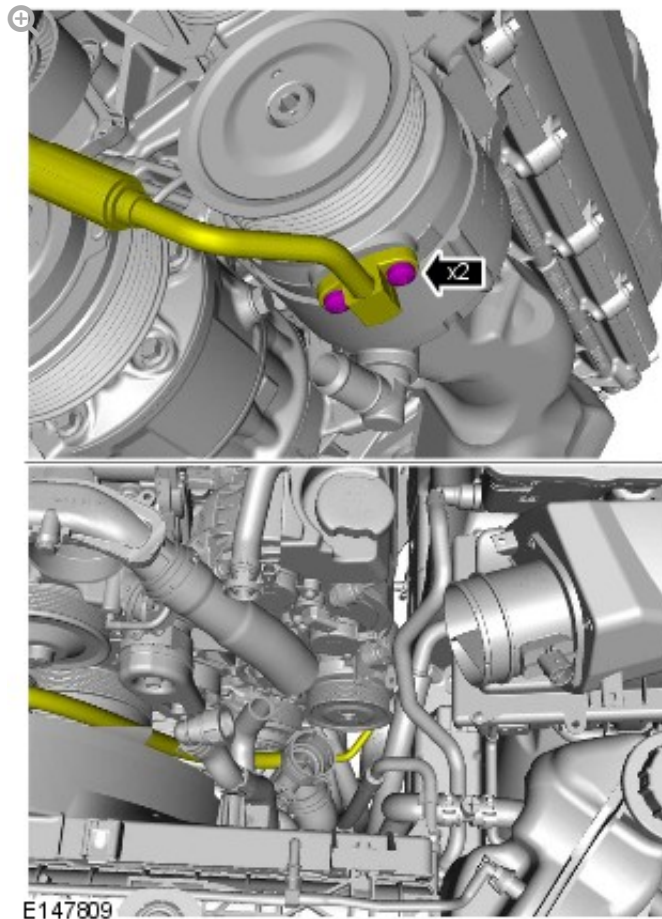

Torque: 10 Nm

10. Refer to: [Air Cleaner Outlet Pipe T-Connector](#) (303-12D Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).




All vehicles

11.

CAUTION:


Make the components are aligned as shown.

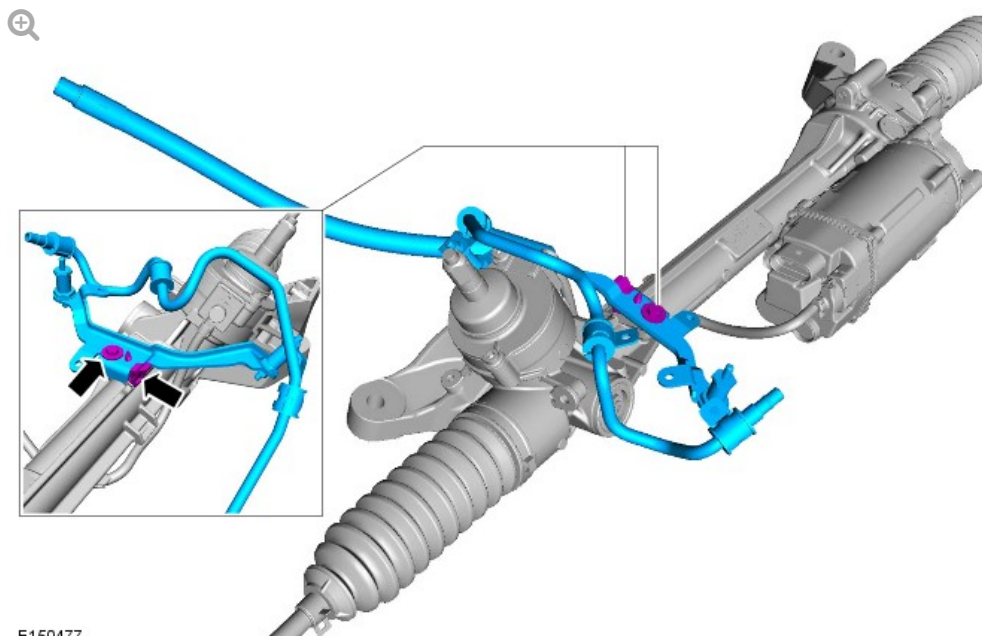

E150477

Torque: 10 Nm

12.

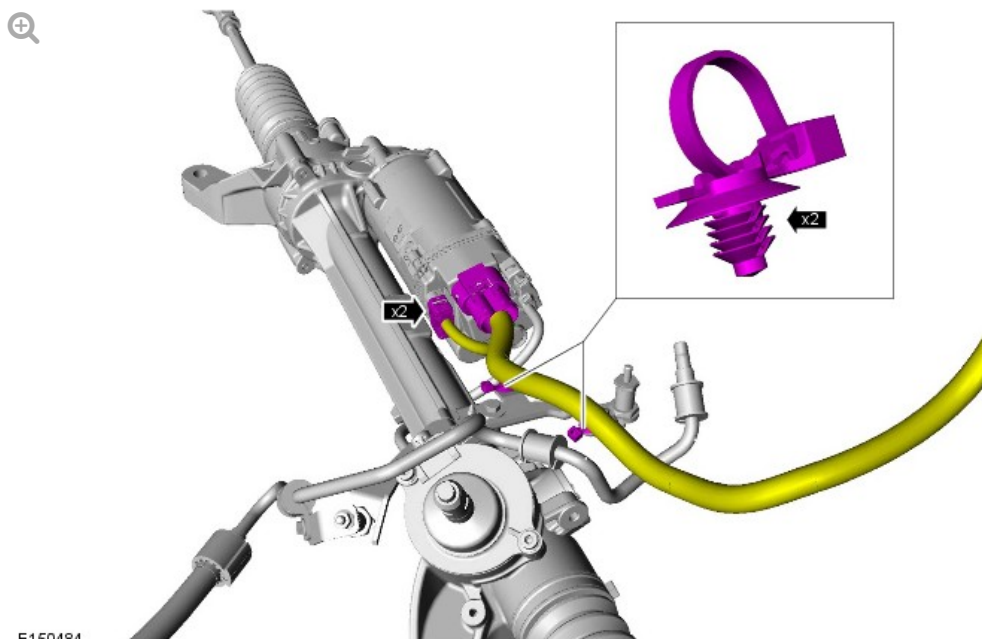


E150484



Vehicles with 4.4L diesel engine

13.

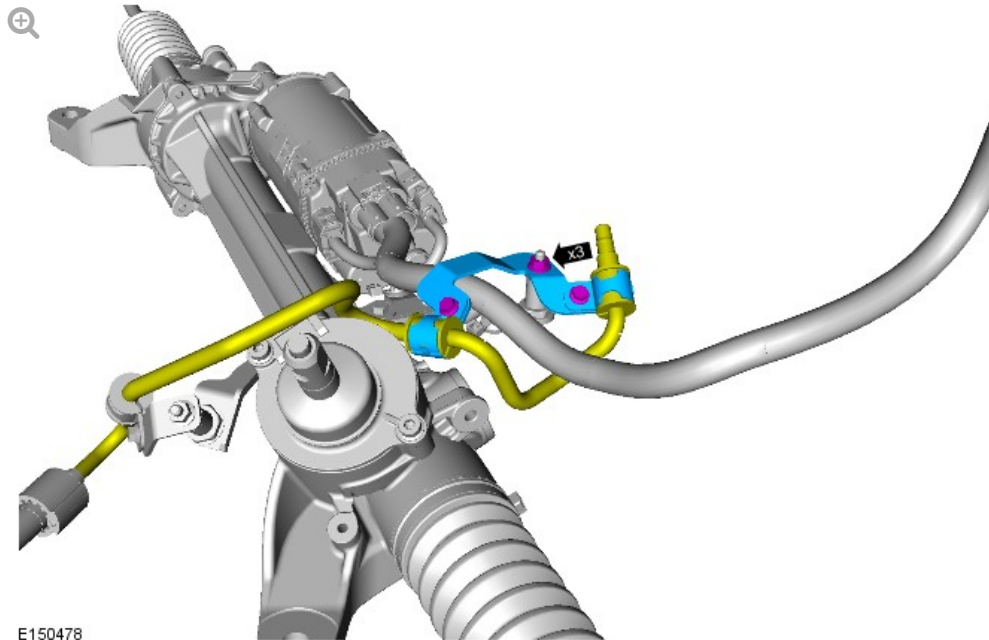


Torque: 10 Nm

14.

NOTE:

Pull on the two halves of the high-pressure line connector to make sure the latch has fully engaged.

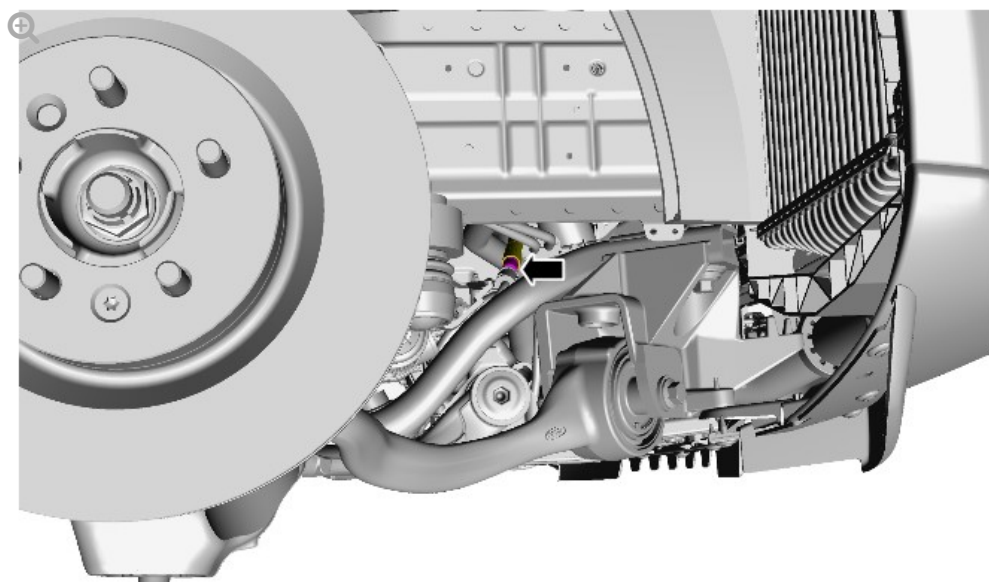

Support both sides of quick connection, when connecting high-pressure line.




Vehicles with 5.0L engine

15.

NOTE:

Pull on the two halves of the high-pressure line connector to make sure the latch has fully engaged.

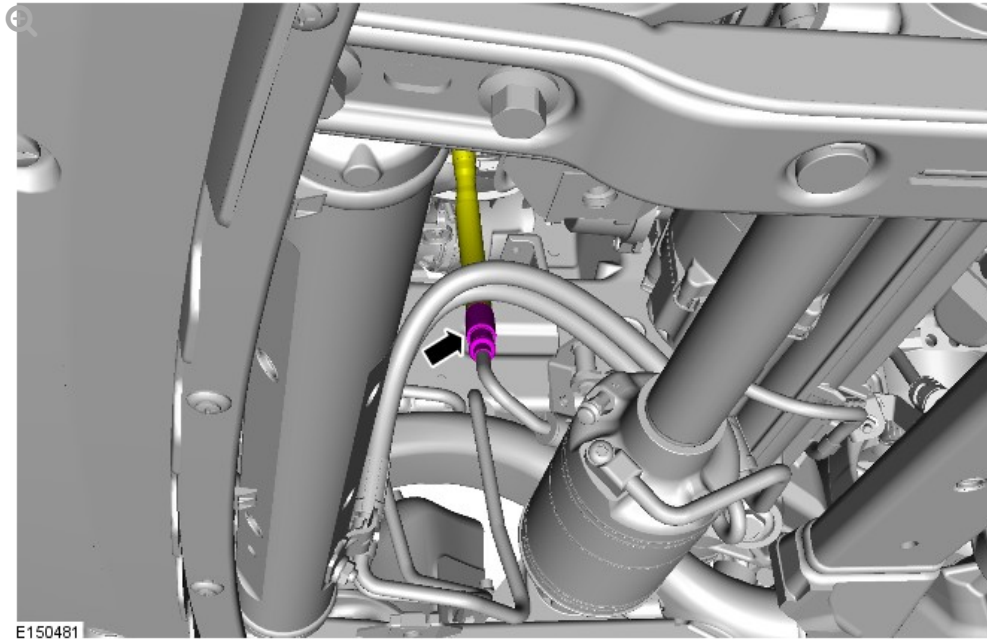

Support both sides of quick connection, when connecting high-pressure line.




All vehicles

16.


NOTE:

Pull on the two halves of the high-pressure line connector to make sure the latch has fully engaged.

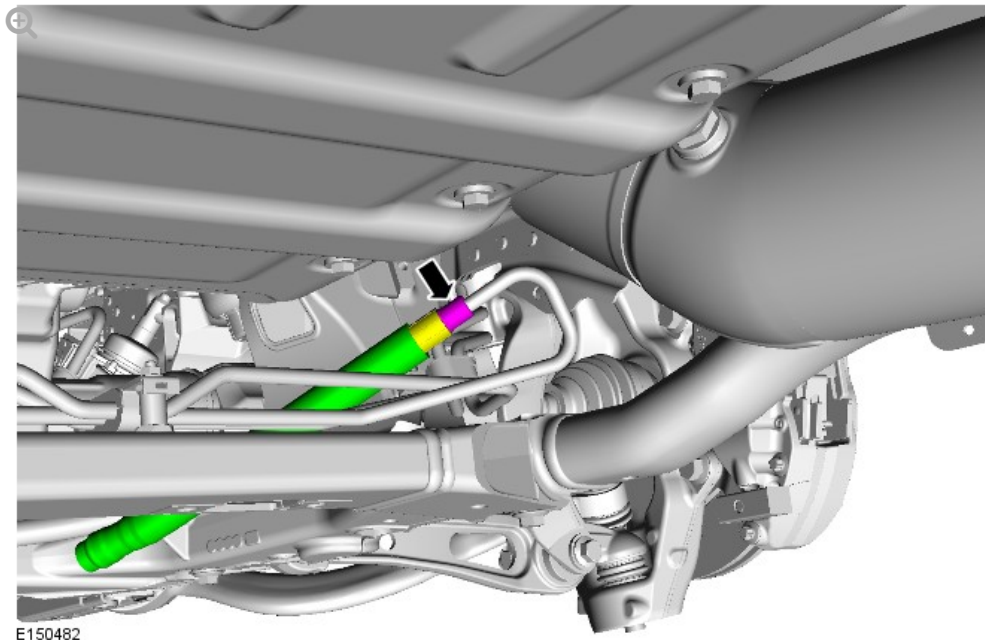


Support both sides of quick connection, when connecting high-pressure line.

17. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).
18. Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

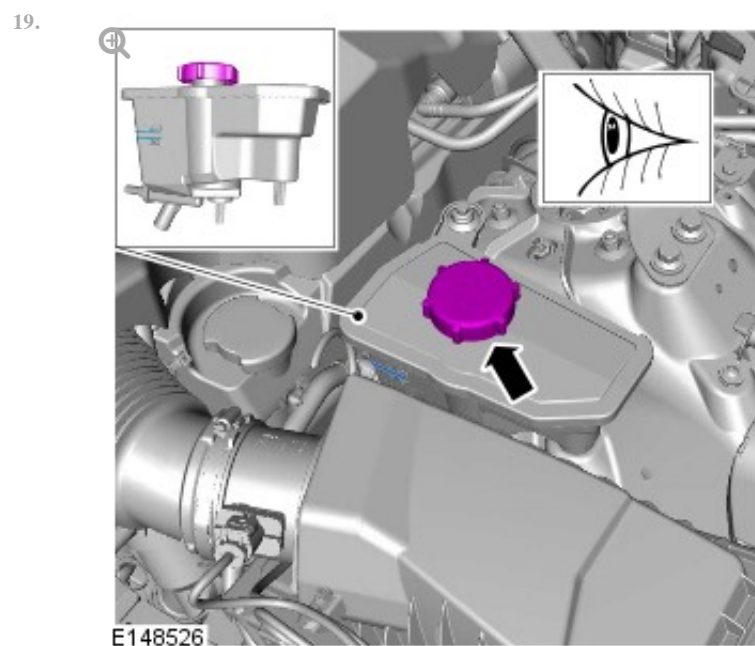

Check and top-up the dynamic response system fluid reservoir.

20.

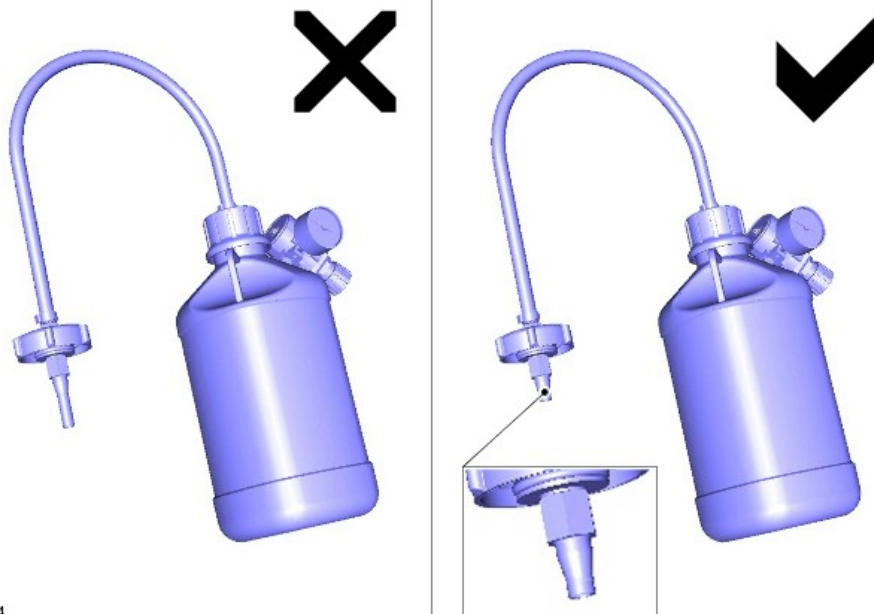


E150104

Install the new adaptor to the Dynamic response bleed bottle.

21.

NOTE:

Install the special tool to the dynamic response reservoir.

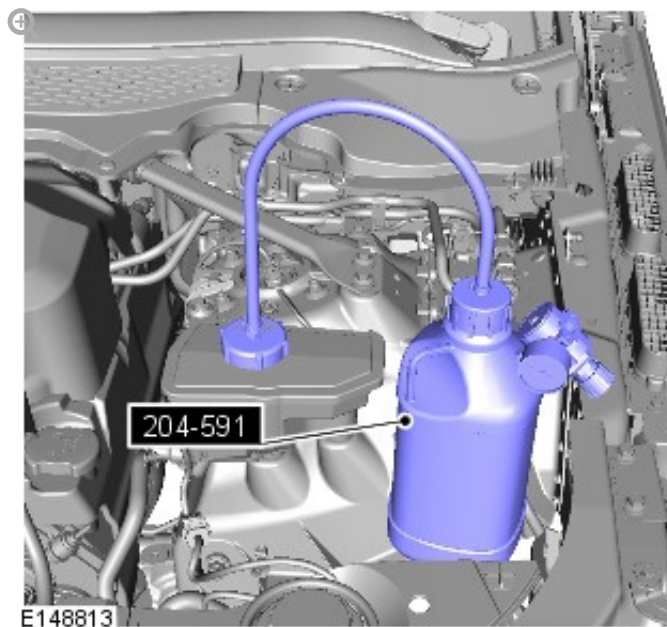


E148813

1. Completely fill the reservoir with fluid.
2. Make sure the pressure regulator on the special tool is

turned OFF.

3. Fill the special tool bottle approximately three-quarters full with fluid.
 4. Connect the special tool to a suitable workshop air supply.
 5. Using the special tool pressure regulator, carefully increase the air pressure to approx. 5 - 10PSI / 0.3 - 0.7kPa
- Special Tool(s):* [204-591-01](#), [JLR-204-591-03](#)

22.

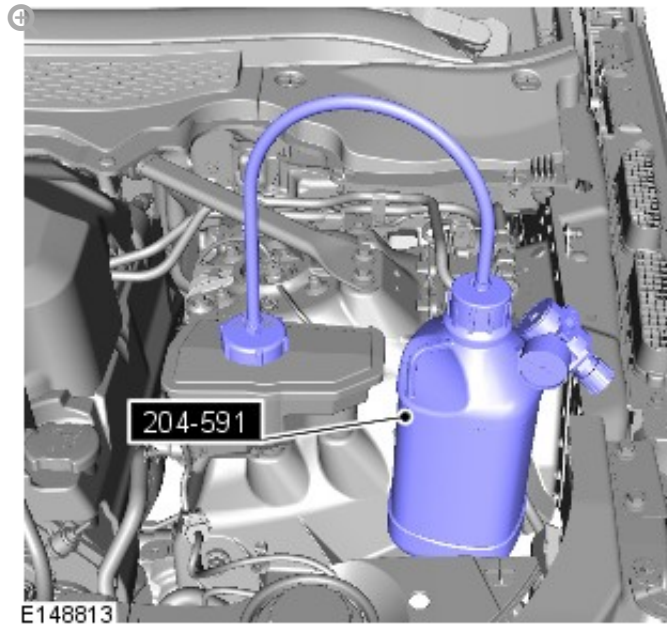

Start engine and run for 1 minute.

23.

WARNING:

The special tool is still pressurised when the source air pressure is removed. Release air pressure within special tool slowly before removing.

Remove the special tool from the dynamic response system reservoir.

24. Check that there is fluid circulating in the reservoir.

25. Run the engine for 5 minutes, stopping and starting several times.
This is to encourage any air trapped in the primary circuit to be expelled by reservoir.
26. Check and top-up dynamic response fluid reservoir.