

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

DYNAMIC RESPONSE MODULE (G1561057)

REMOVAL AND INSTALLATION

REMOVAL

CAUTIONS:

- Extreme cleanliness must be exercised when handling this component.
- It is imperative that no damage is caused to the electrical connectors or the module.
- Do not touch the electrical connectors.
- If accidentally dropped or knocked install a new module.



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal step in this procedure may contain installation details.

1. Disconnect the battery ground cable


Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

2.

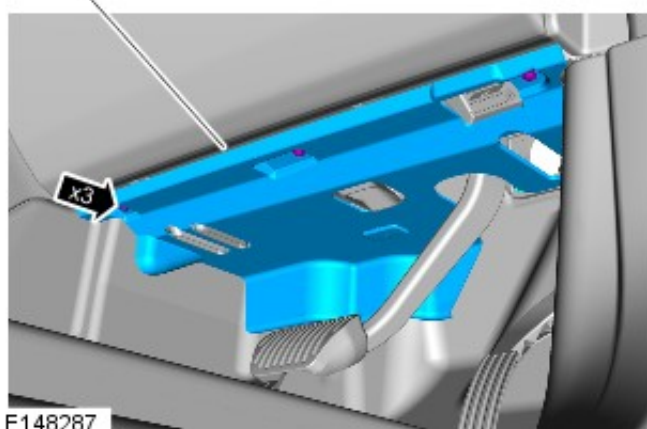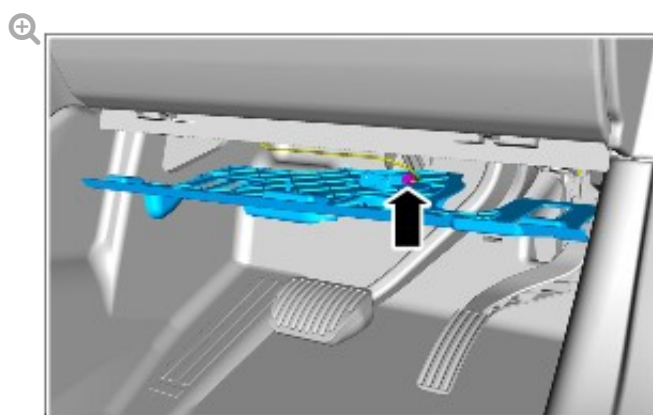


E148287

3.

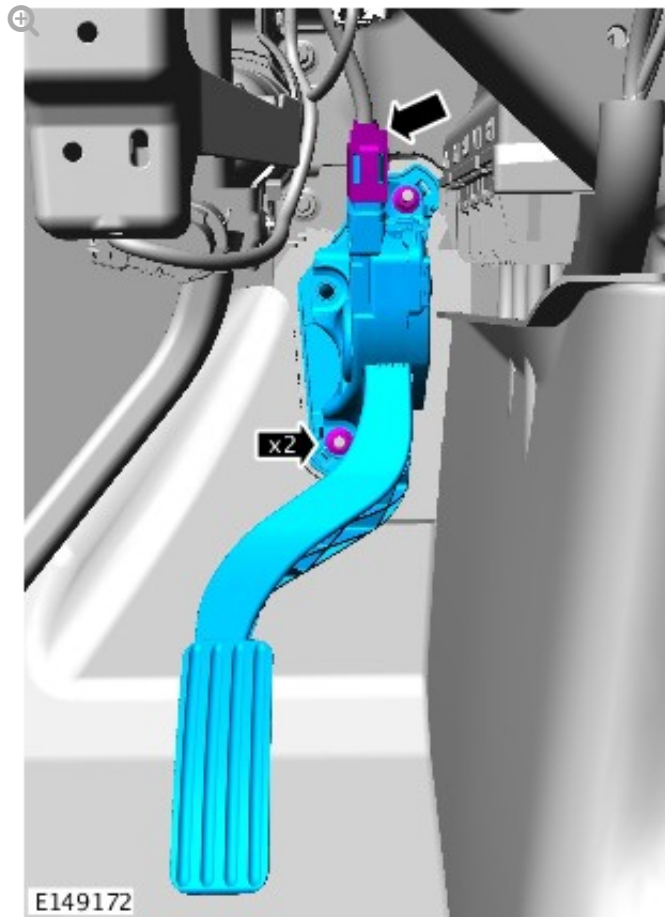

Torque: 10 Nm

4.

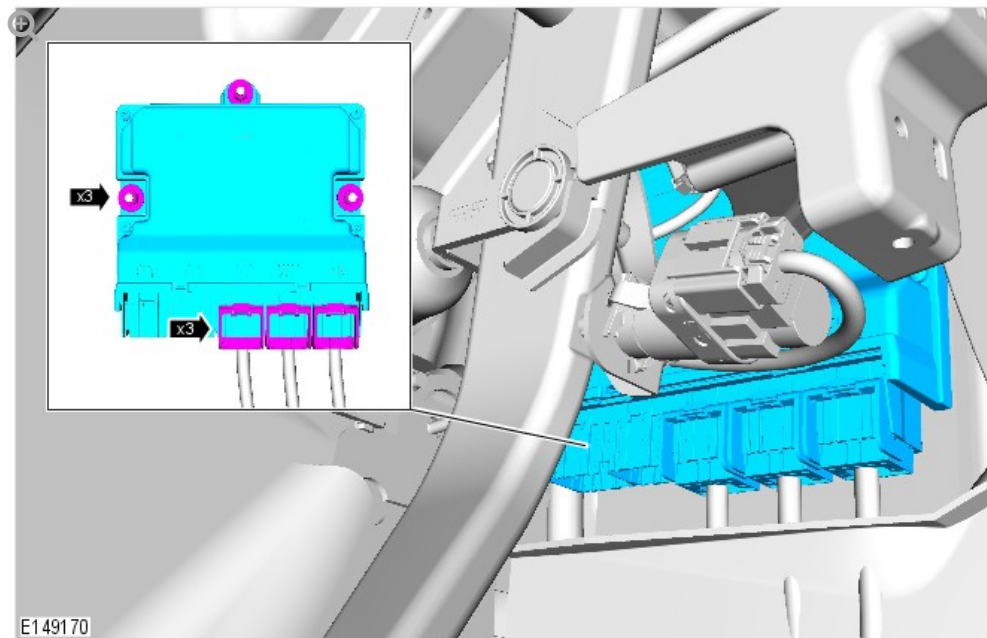

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. Configure the dynamic response control module using the diagnostic tool.