

PUBLISHED: 12-SEP-2012  
2015.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

# **FLUID PUMP - TDV8 4.4L DIESEL** (G1551259)

## REMOVAL AND INSTALLATION

|          |                                                            |                  |     |                 |  |
|----------|------------------------------------------------------------|------------------|-----|-----------------|--|
| 60.60.10 | PUMP - ACTIVE<br>CORNERING<br>ENHANCEMENT<br>(ACE) - RENEW | 4400 CC,<br>TDV8 | 2.1 | USED<br>WITHINS |  |
|----------|------------------------------------------------------------|------------------|-----|-----------------|--|

### REMOVAL



#### CAUTION:

Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.



#### NOTE:

Removal steps in this procedure may contain installation details.

1.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.



#### WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.


Refer to: [Engine Cover - 4.4L V8 - TdV8](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

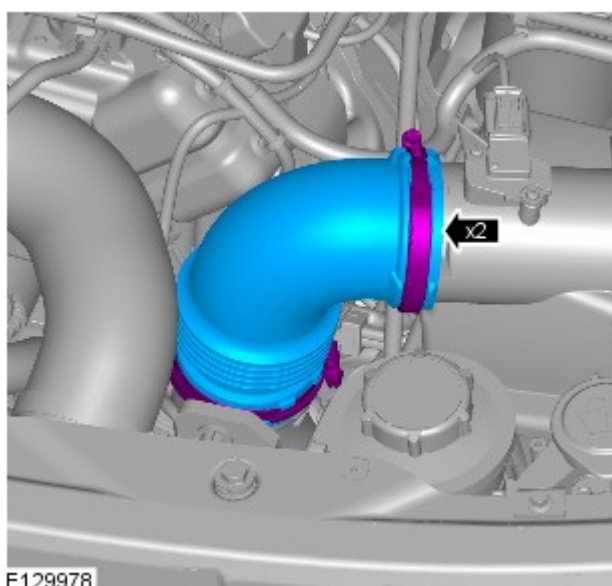


*Torque: 3.5 Nm*


5.

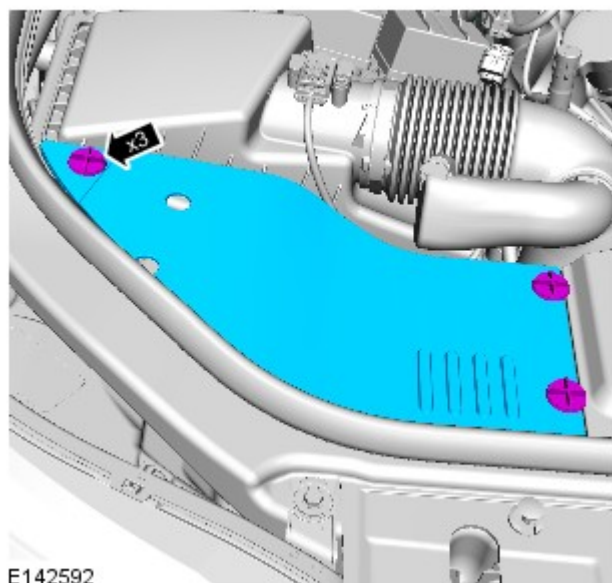


6.

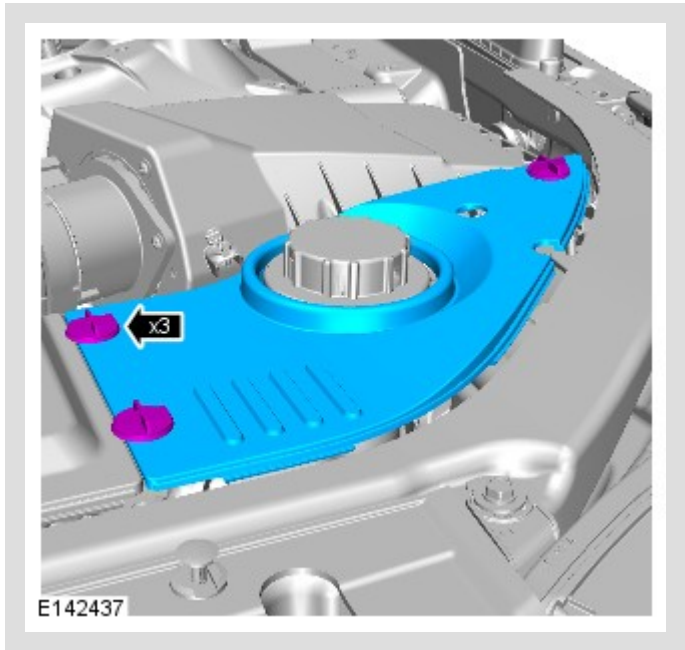


7.

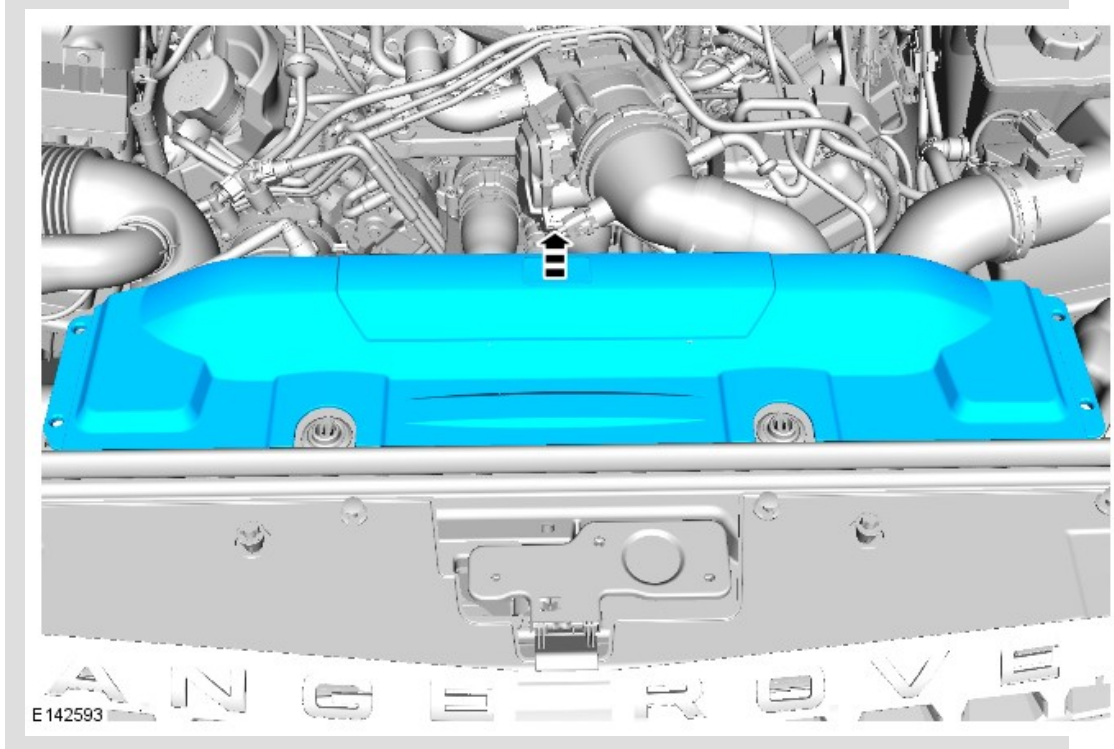

8.

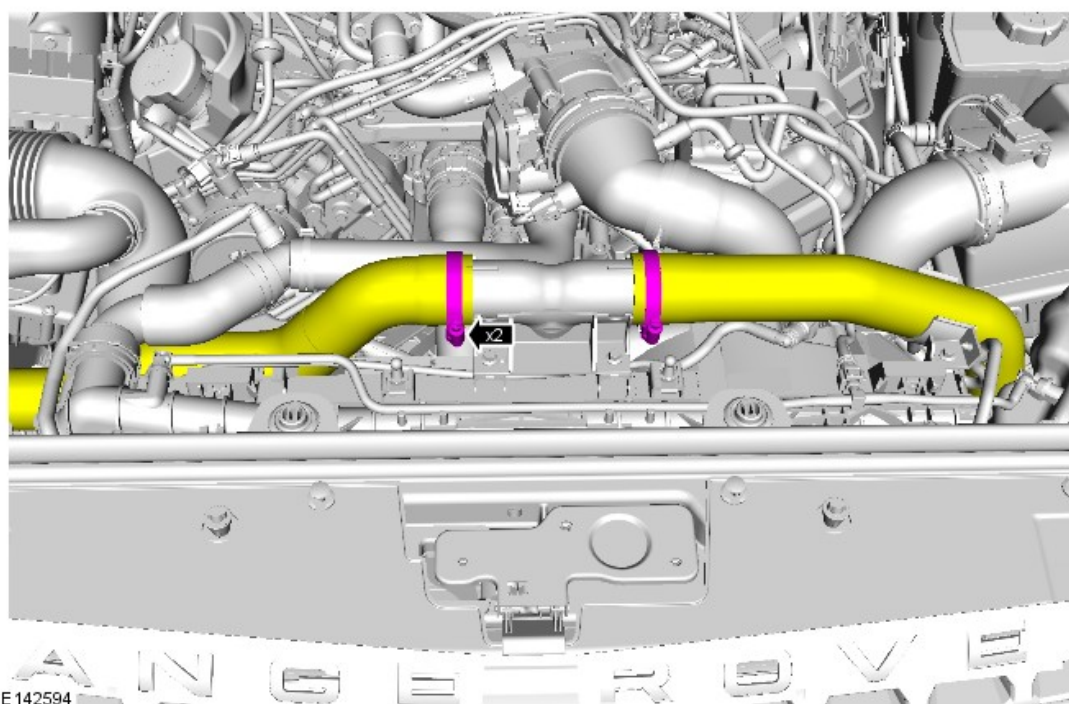


9.

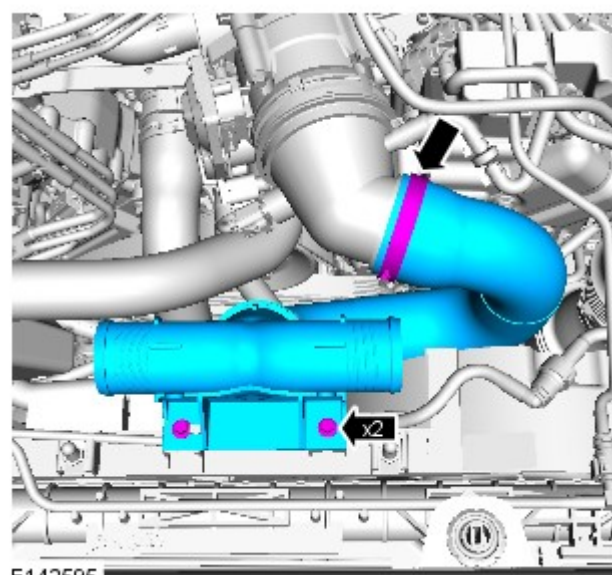


*Torque: 10 Nm*

10.

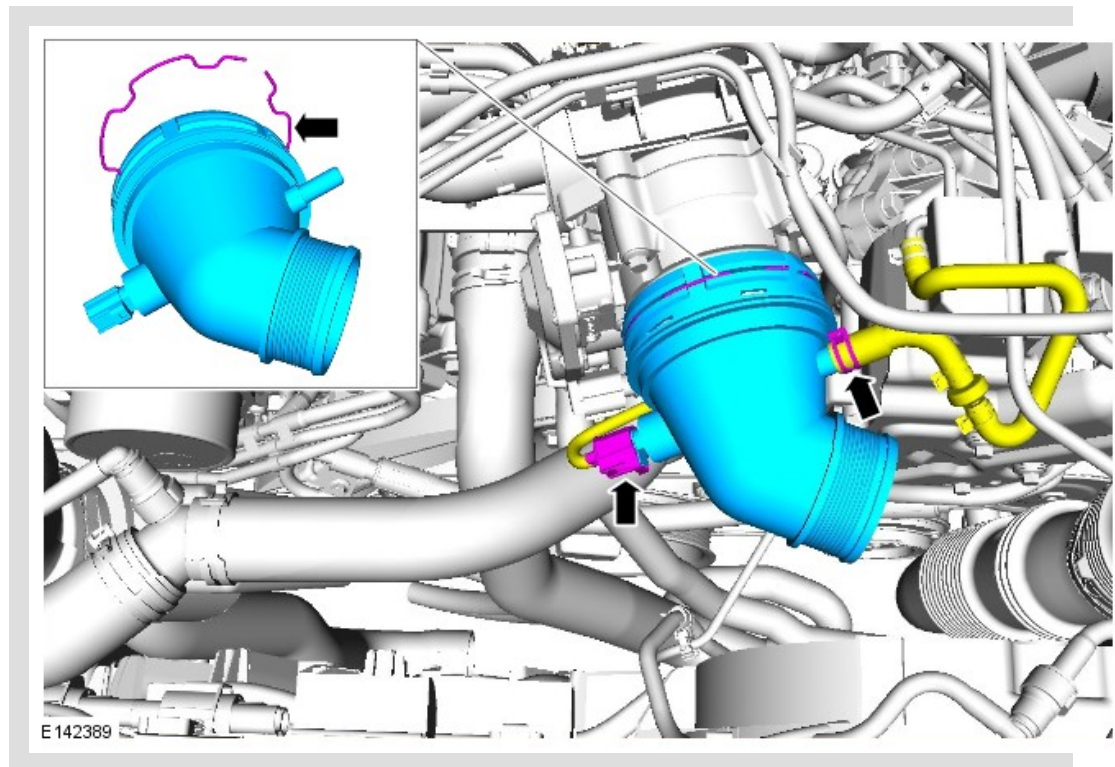


11.

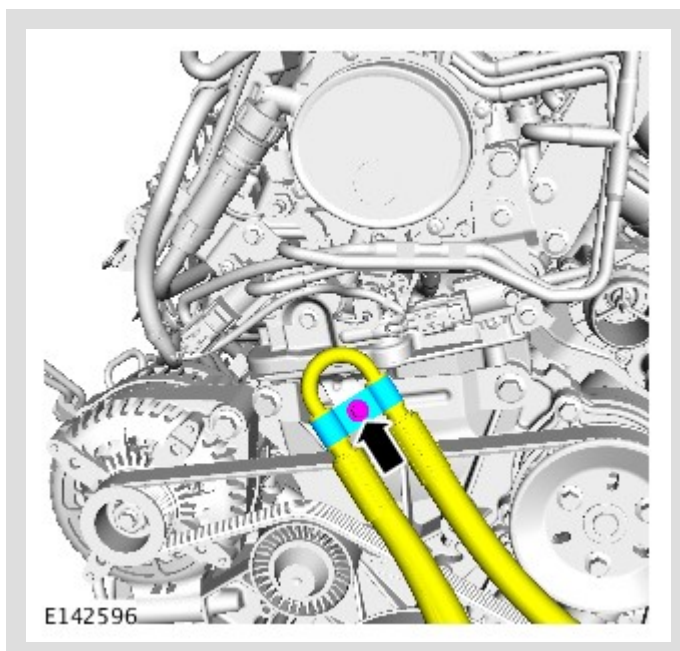


*Torque: 10 Nm*



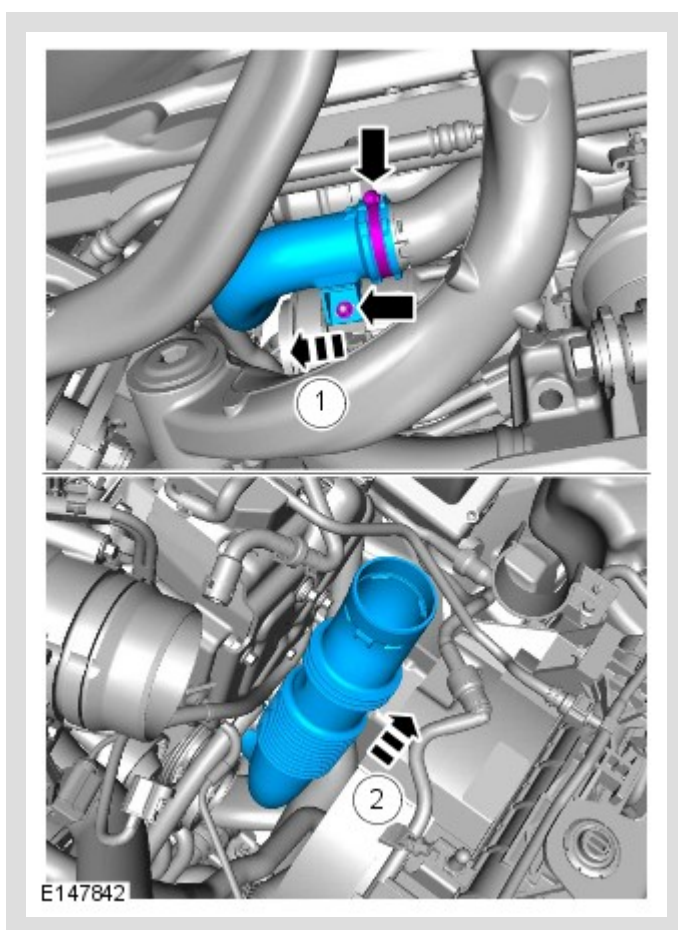

*Torque: 10 Nm*




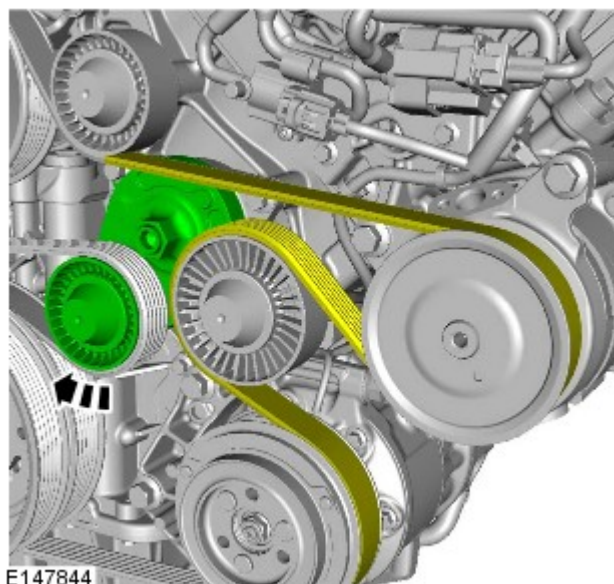

14.

**ⓘ CAUTION:**

Be prepared to collect escaping fluids.

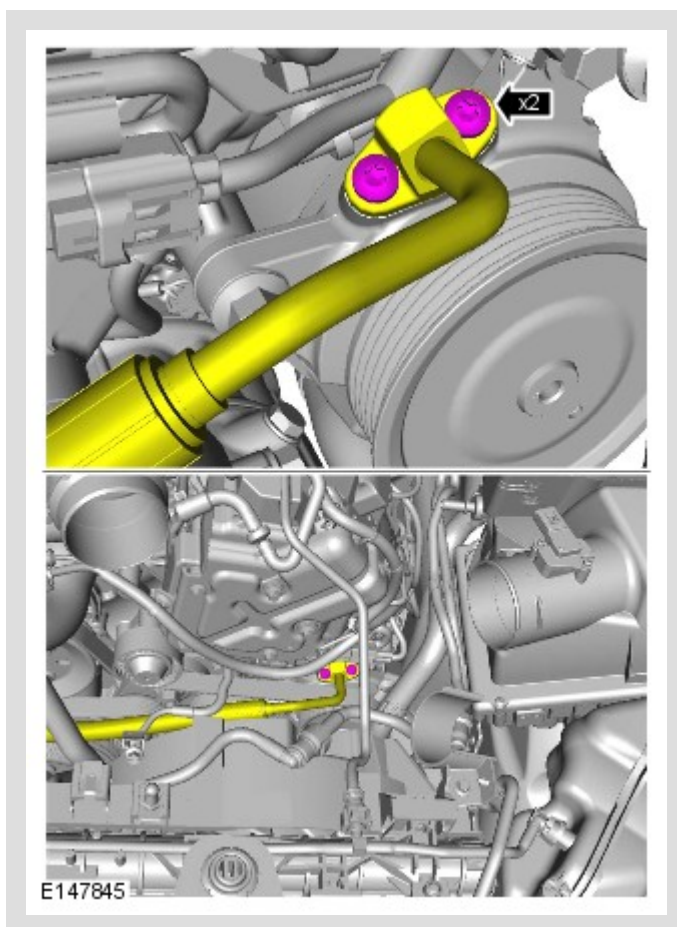



*Torque: 10 Nm*

15.

**⚠ CAUTION:**

Be prepared to collect escaping fluids.

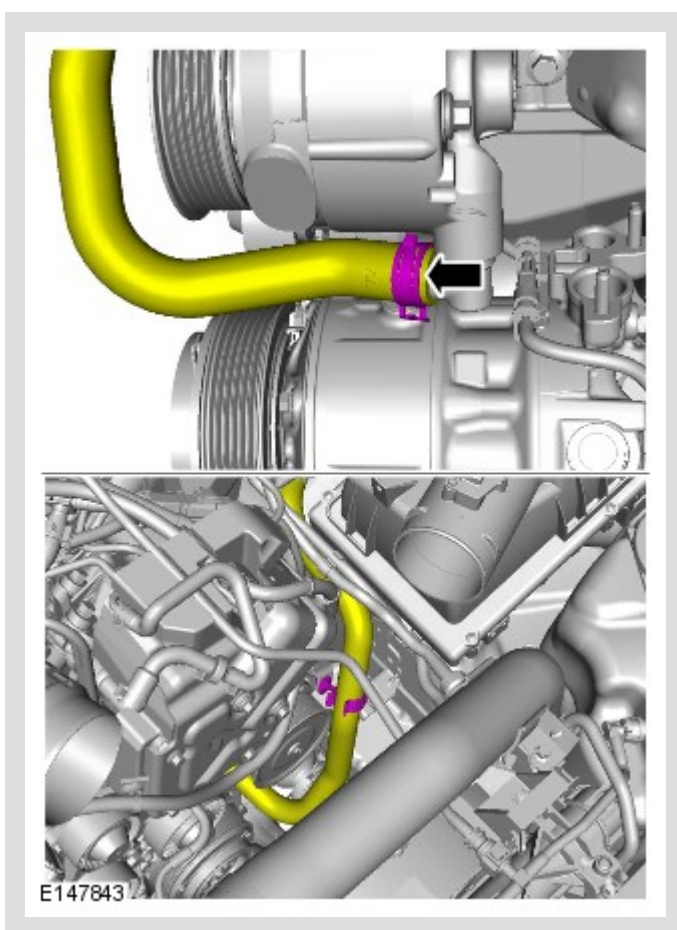

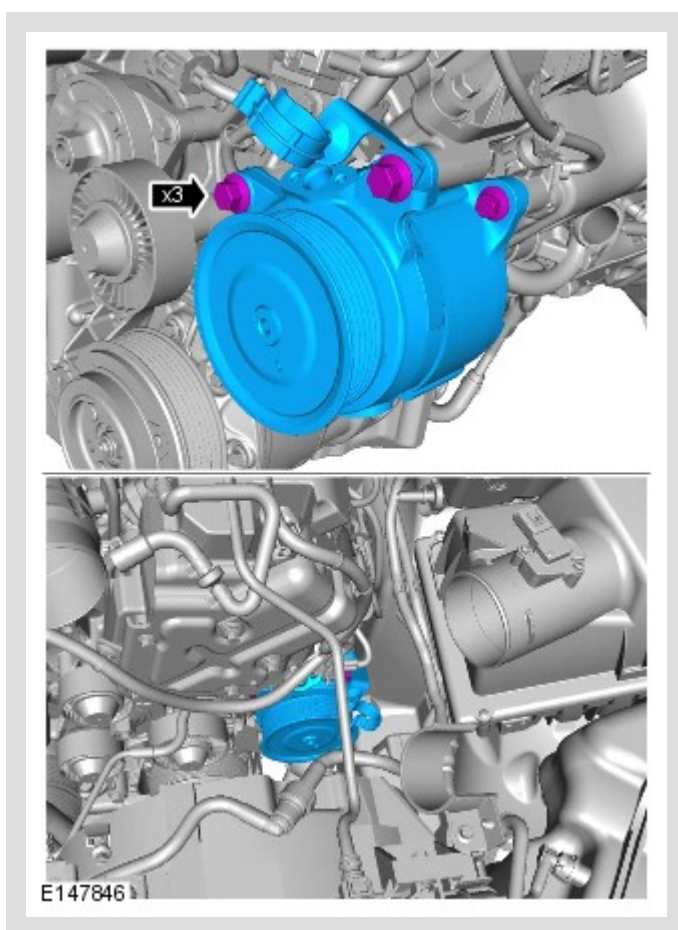

*Torque:*

M10 48 Nm

M8 25 Nm

## INSTALLATION

1. To install, reverse the removal procedure.
2. Refer to: [Active Stabilization System Bleeding](#) (204-06 Ride and Handling Optimization, General Procedures).

