

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

FLUID RESERVOIR (G1561126)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



204-591-01

Dynamic Response
Bleed Bottle



JLR-204-591-03

Adaptor, Dynamic
Response Bleed
Bottle


REMOVAL

1. Using a suitable suction device drain the fluid reservoir.

2.

CAUTION:

Be prepared to collect escaping fluids.

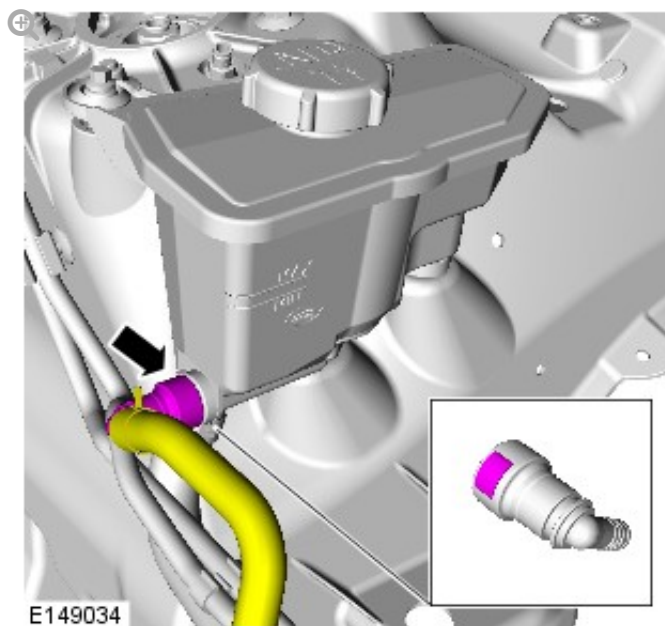


3.

CAUTION:


Be prepared to collect escaping fluids.

NOTE:

Note the orientation of the component prior to removal.

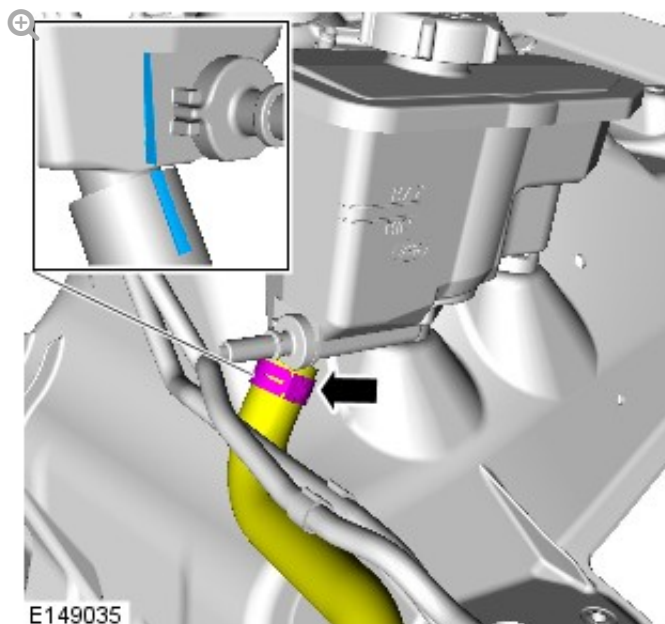

4.

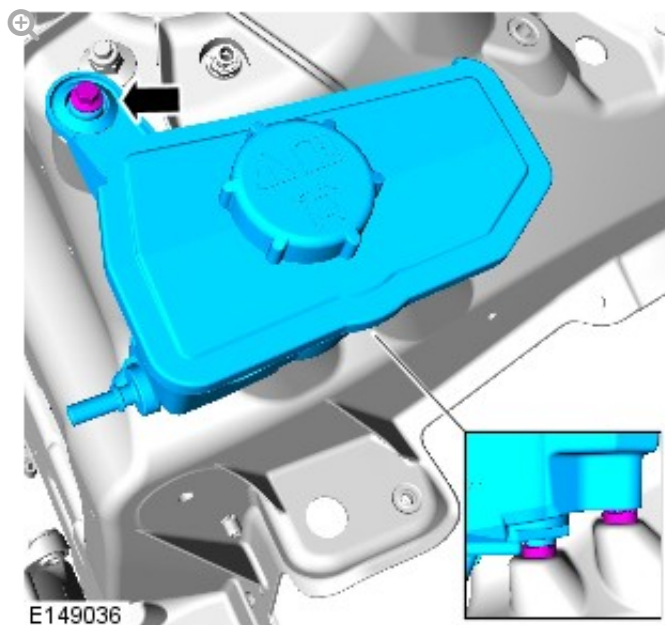


INSTALLATION


1.

NOTE:


Install in the orientation noted in the removal procedure.

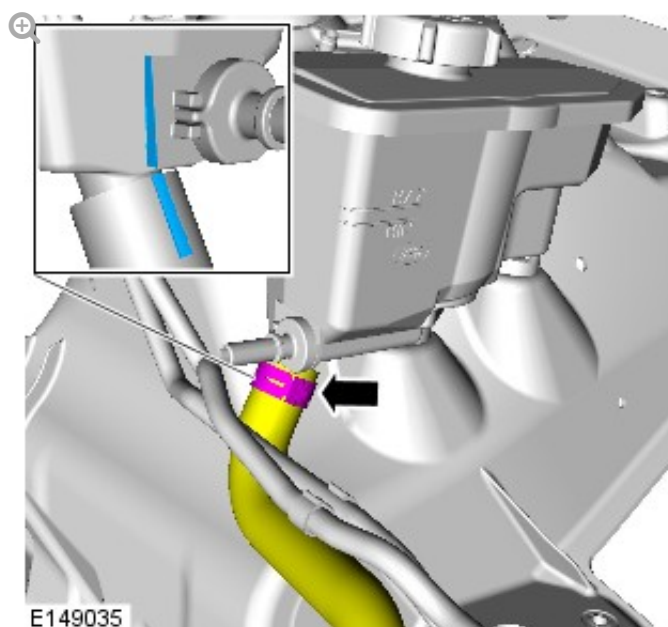

2.

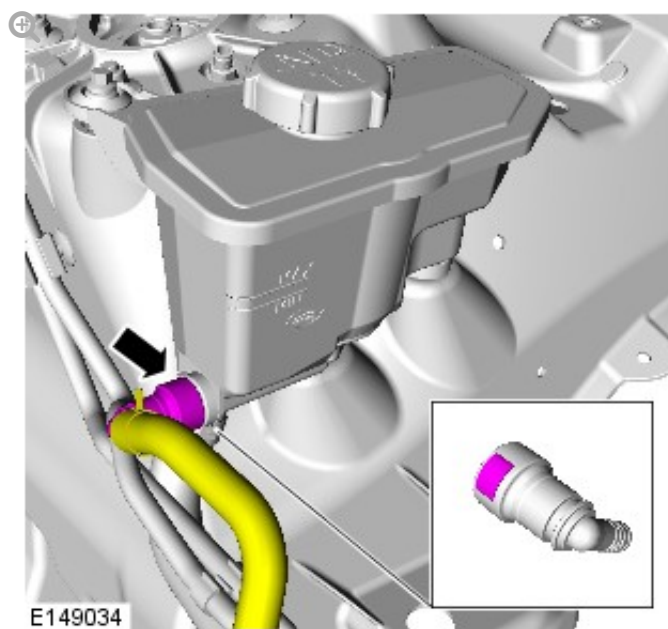


3.

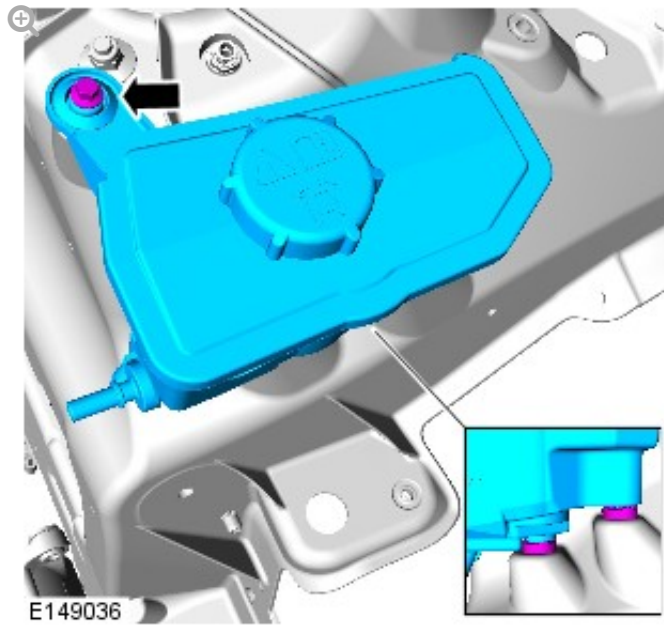


Torque: 5 Nm

4.

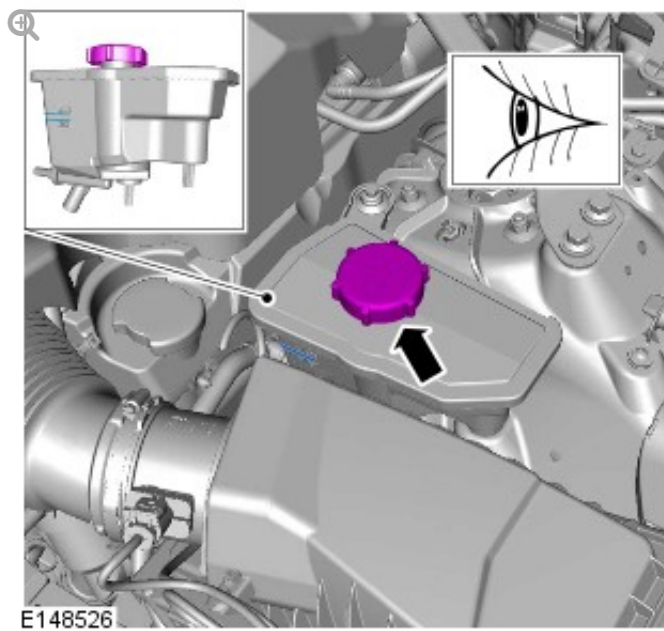

Check and top-up the dynamic response system fluid reservoir.

5.

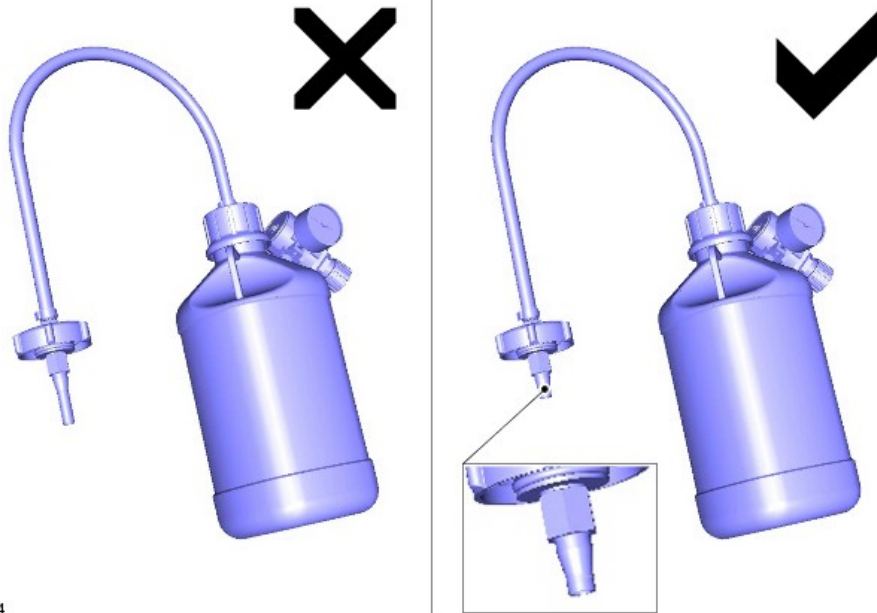

E150104


Install the new adaptor to the Dynamic response bleed bottle.

Special Tool(s): [JLR-204-591-03](#)

6.

NOTE:

Install the special tool to the dynamic response reservoir.

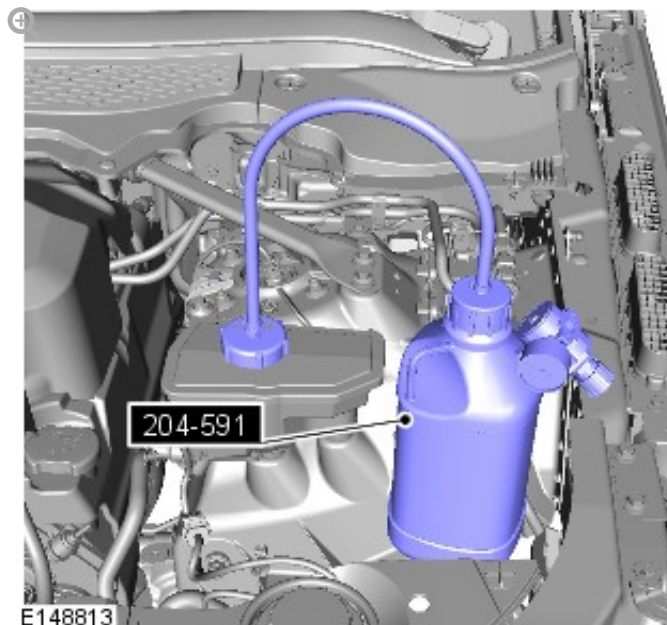

Special Tool(s): [204-591-01](#)

7. Completely fill the reservoir with fluid.
8. Make sure the pressure regulator on the special tool is turned OFF.
9. Fill the special tool bottle approximately three-quarters full with fluid.
10. Connect the special tool to a suitable workshop air supply.
11. Using the special tool pressure regulator, carefully increase the air pressure to approx. 5 - 10 PSI / 0.3 - 0.7 kPa
12. Start engine and run for 1 minute.
13. Check that there is fluid circulating in the reservoir.

14.

WARNING:

The special tool is still pressurised when the source air pressure is removed. Release air pressure within special tool slowly before removing. Remove the special tool from the dynamic response system reservoir.

Remove the special tool and fill the reservoir to the maximum line.