

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

REAR STABILIZER BAR (G1561060)

REMOVAL AND INSTALLATION

64.35.08	STABILIZER BAR - RENEW	3000 CC, TDV6	1.3	USED WITHINS	+
64.60.50	STABILIZER BAR - ACE - REAR - RENEW	ALL DERIVATIVES	1.5	USED WITHINS	+

REMOVAL

1.

NOTE:

Removal steps in this procedure may contain installation details.

2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Depressurize the rear air springs

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

4.

NOTES:

- LH illustration shown, RH is similar.
- The step must be carried out on both sides.

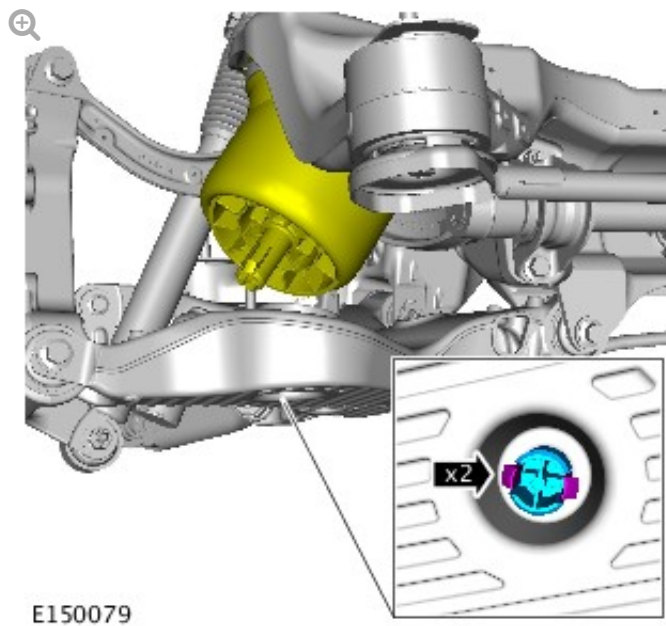


5.

CAUTION:

Use a wrench on the hexagon provided to prevent the ball joint rotating.

NOTES:

- LH illustration shown, RH is similar.
- The step must be carried out on both sides.

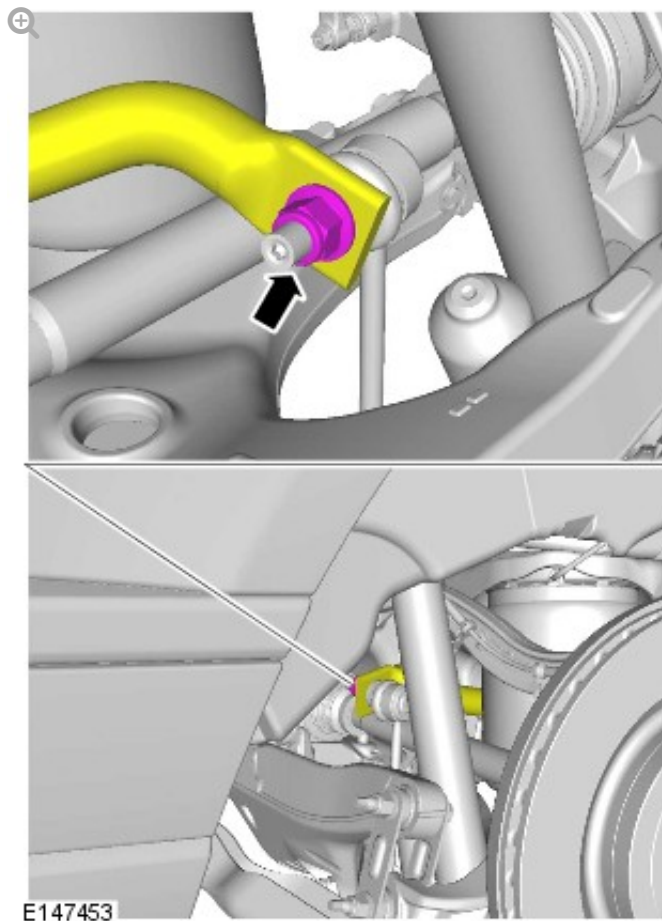


Torque: 185 Nm


6.

CAUTION:

Make sure that the exhaust system is supported with suitable retaining straps.

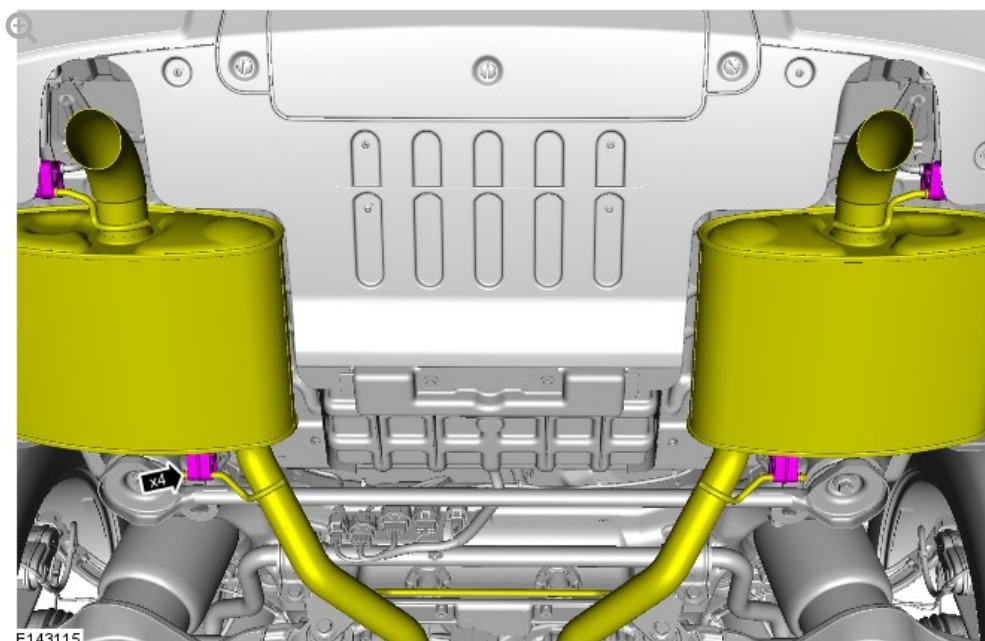

7.

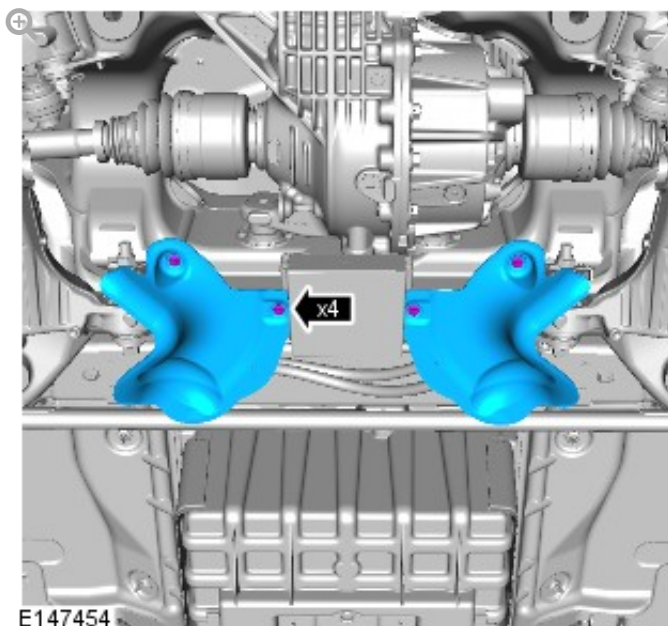


Torque: 10 Nm

8.

CAUTIONS:

- Be prepared to collect escaping fluids.
- A new O-ring seal is to be installed.

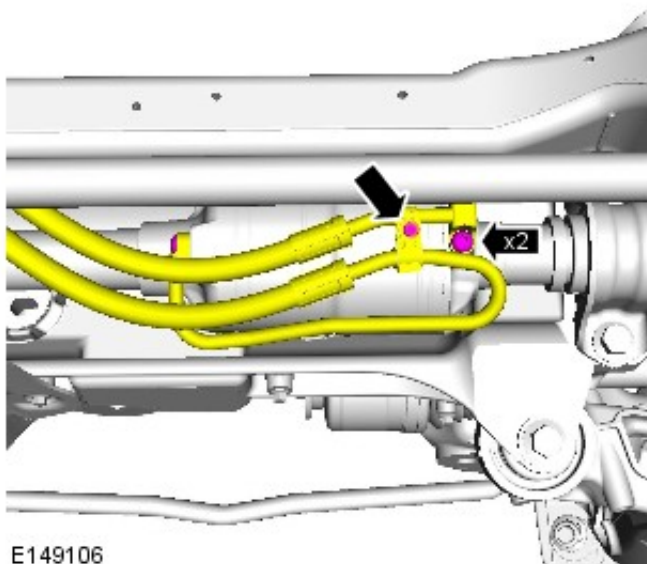


E149106

Torque:

Banjo bolt **22 Nm**

Bolt **9 Nm**

9.

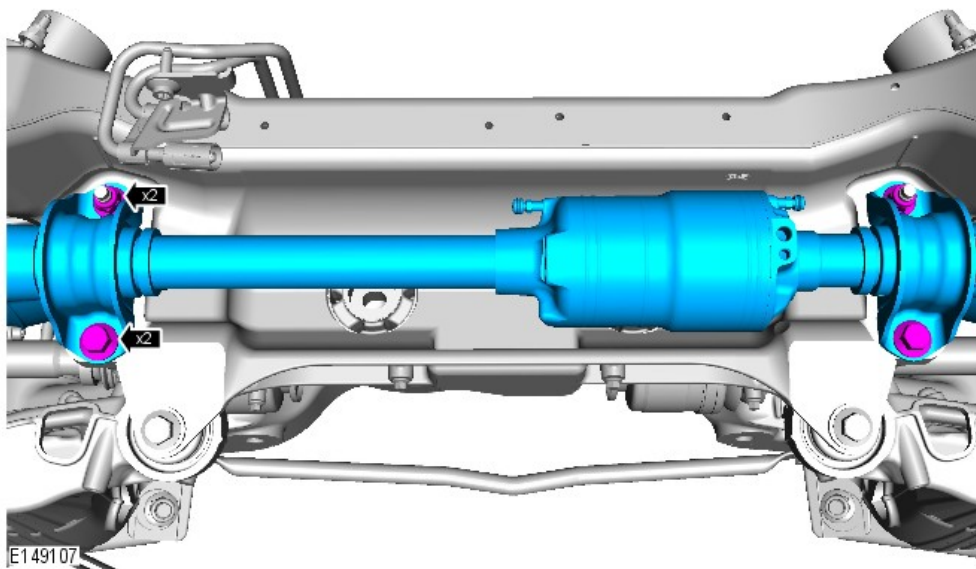

E149107

Torque: **110 Nm**

INSTALLATION

1.

CAUTION:

The bush must be installed without any additional lubricant.
Failure to follow this instruction may cause damage to the component.

To install, reverse the removal procedure.

2. Refer to: [Active Stabilization System Bleeding](#) (204-06 Ride and Handling Optimization, General Procedures).