

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

VALVE BLOCK TO FRONT STABILIZER BAR ACTUATOR PIPE ASSEMBLY [G1700217]

REMOVAL AND INSTALLATION

REMOVAL

WARNING:

Be prepared to collect escaping fluid.

CAUTIONS:

- Dynamic Response system components are manufactured to very precise tolerances. It is therefore essential that absolute cleanliness is observed when working with these components. Always install blanking plugs to any open orifices or lines. Failure to follow this instruction may result in foreign matter ingress to the dynamic response system.
- Make sure that all openings are sealed. Use new blanking caps.

NOTE:

Removal steps in this procedure may contain installation details.



All vehicles

1. Remove the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Refer to: [Front Subframe - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).

Refer to: [Front Subframe - TDV8 4.4L Diesel](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).



Short wheelbase

4.

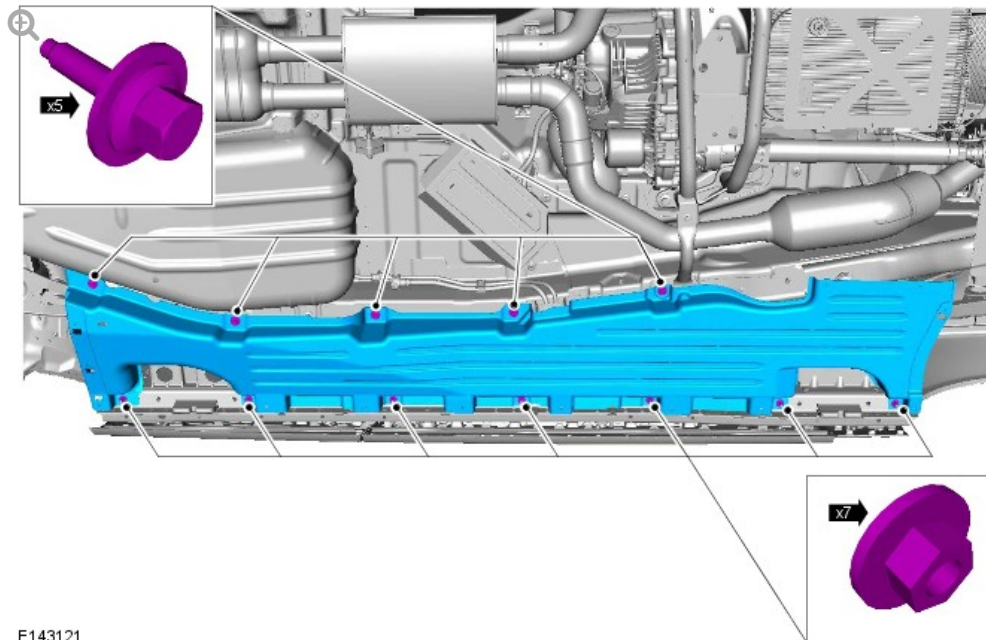

E143121

Torque: 9 Nm




Long wheelbase

5.

CAUTION:

RH illustration shown, LH is similar.

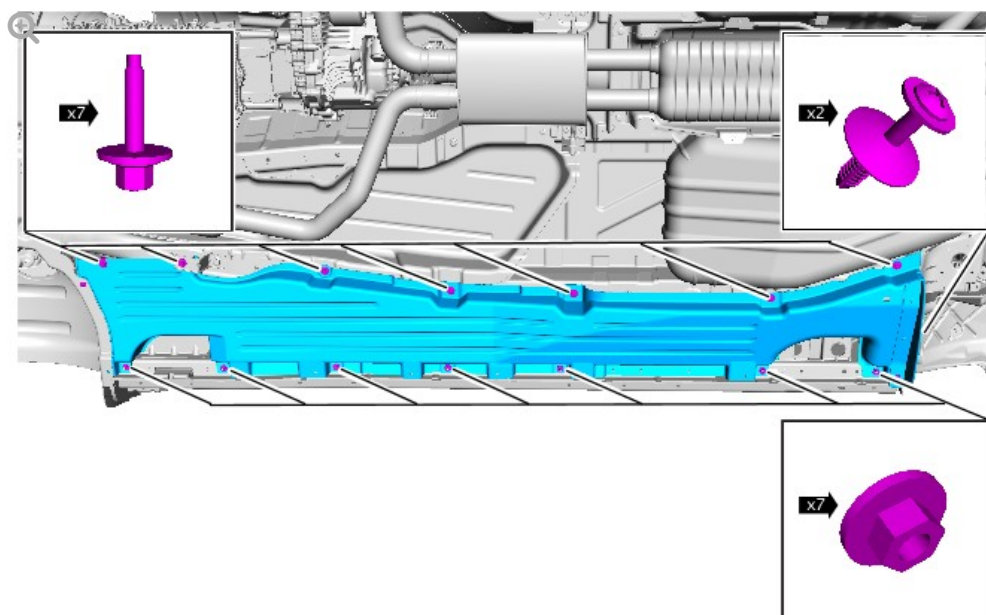


E160300




All vehicles


6.

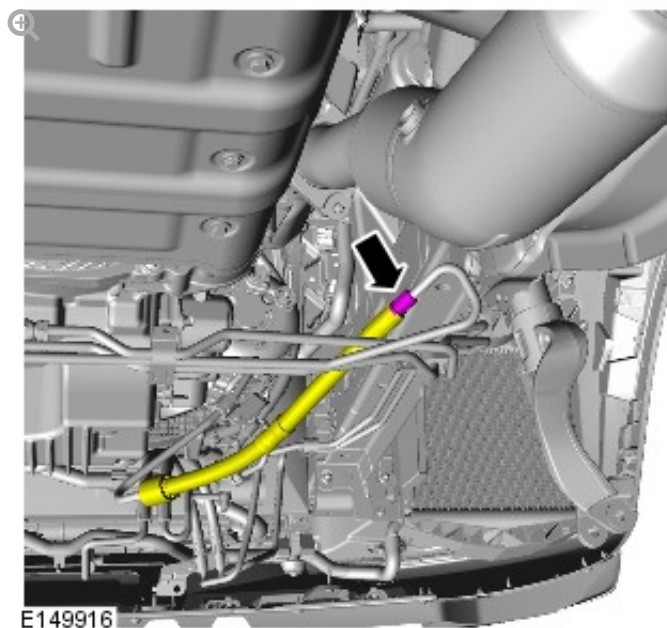

7.

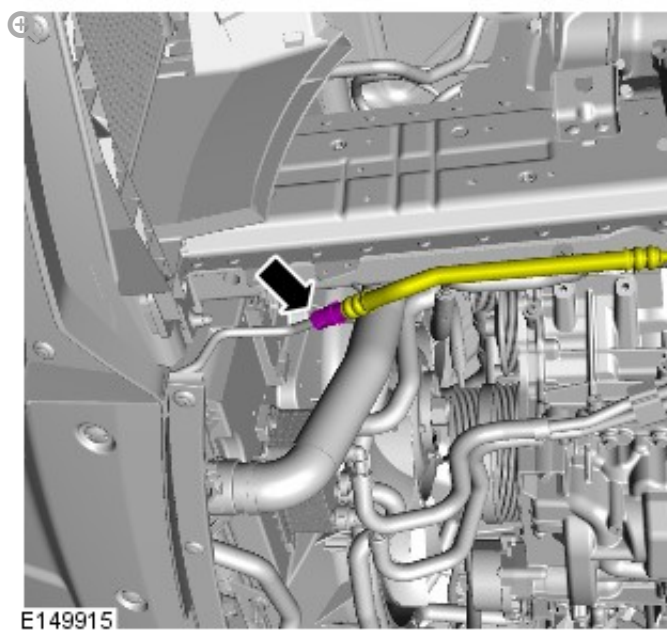

8.

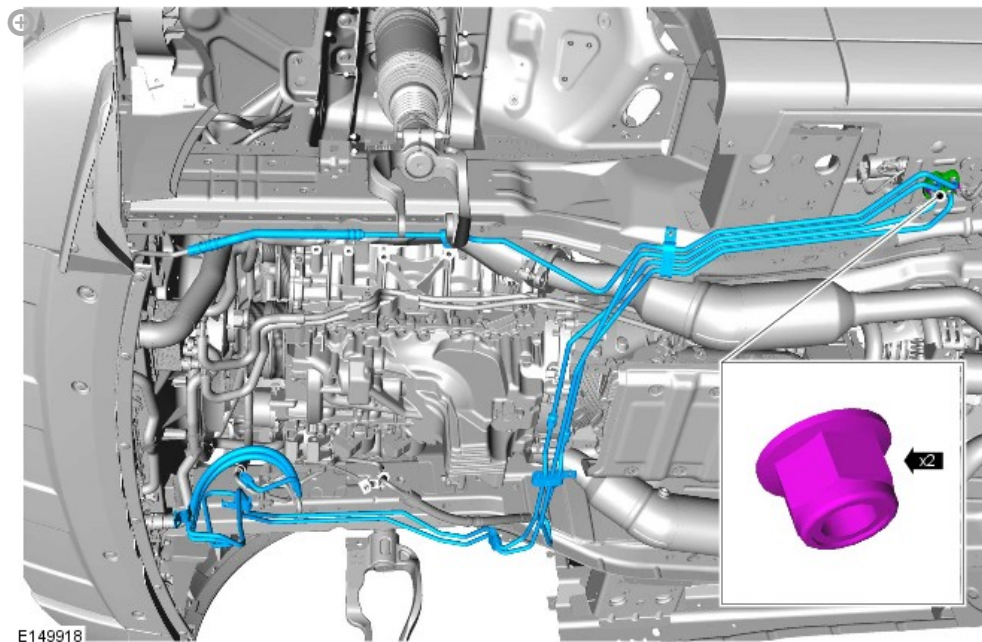

Torque: 9 Nm

INSTALLATION


1.

CAUTION:

Install new O-ring seals.

NOTE:

Check the valve block O-rings and plastic spacer washers are correctly installed.

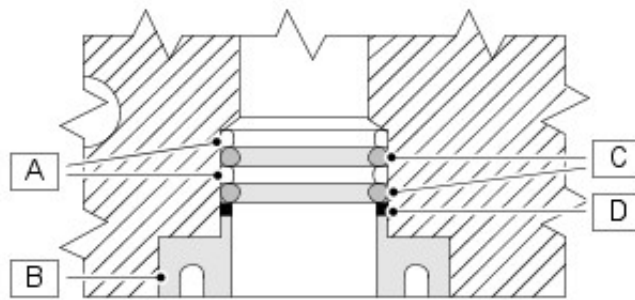

E58627

1. A: Backing rings (white)
 2. B: Outer clamping ring
 3. C: O-ring seals
 4. D: Outer backing ring (black)
-
2. To install reverse the removal procedure.
 3. Refer to: [Active Stabilization System Bleeding](#) (204-06 Ride and Handling Optimization, General Procedures).