

2016.0 RANGE ROVER (LG), 204-06

RIDE AND HANDLING OPTIMIZATION

VALVE BLOCK TO REAR STABILIZER BAR ACTUATOR PIPE ASSEMBLY (G1561065)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).


3.

CAUTIONS:

- Be prepared to collect escaping fluids.
- Make sure that all openings are sealed. Use new blanking caps.

NOTE:

Install new O-ring seals.

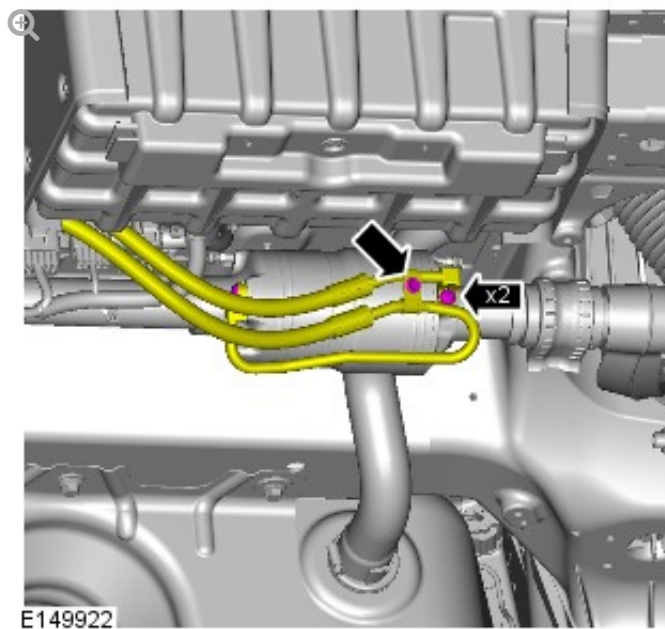

Torque:

M6 **9 Nm**

M8 Torx **22 Nm**


4.

CAUTIONS:

- Be prepared to collect escaping fluids.
- Make sure that all openings are sealed. Use new blanking caps.


NOTE:

Install a new O-ring seal.

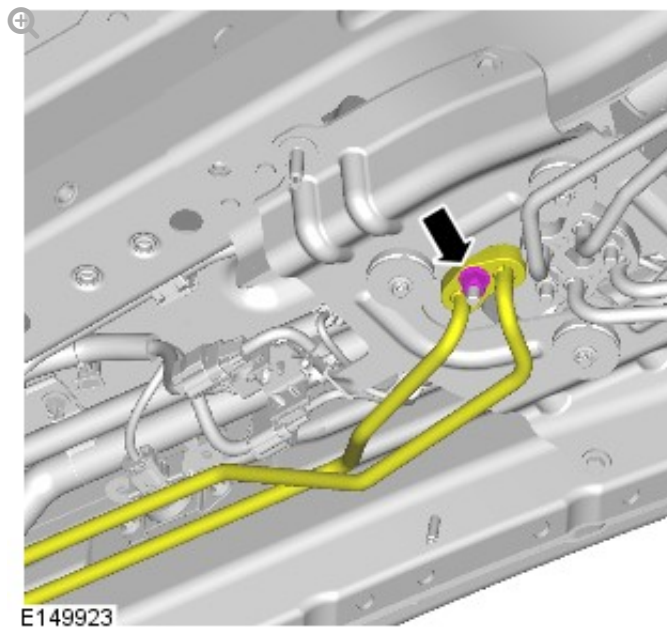

Torque: 22 Nm

5.

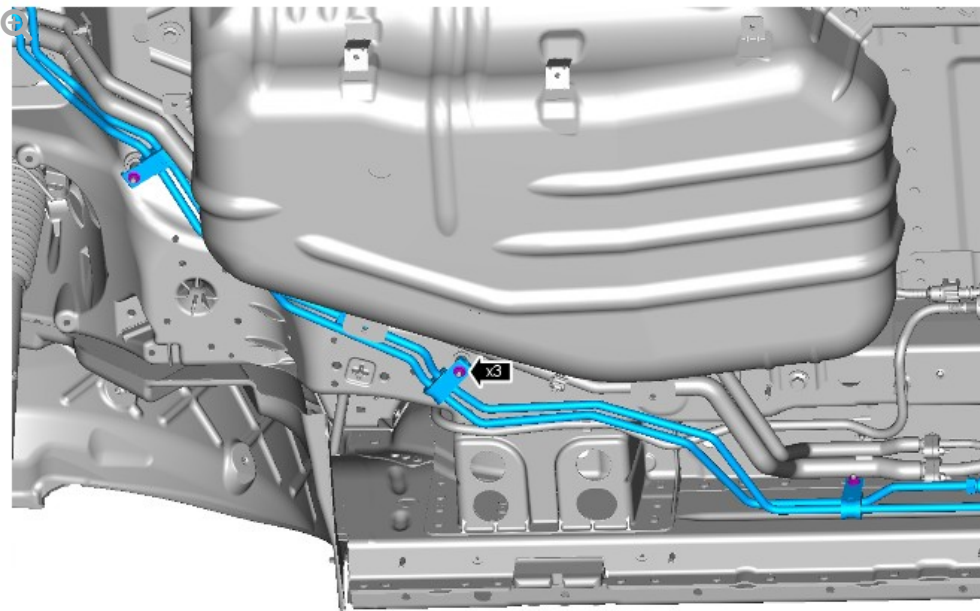

E149924


Torque: 10 Nm

INSTALLATION

1.

NOTE:

Check the valve block O-rings and plastic spacer washers are correctly installed.

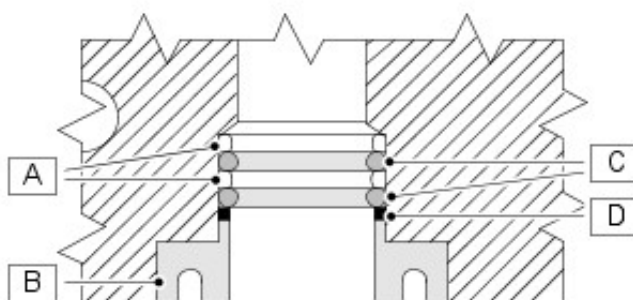

E58627

1. A: Backing rings (white)

2. B: Outer clamping ring

3. C: O-ring seals

4. D: Outer backing ring (Black)

2. Refer to: [Active Stabilization System Bleeding](#) (204-06 Ride and Handling Optimization, General Procedures).
3. To install, reverse the removal procedure.